



HEWLETT  PACKARD

Warranty Statement


Hewlett-Packard products are warranted against defects in materials and workmanship. For Hewlett-Packard Desktop Computer Division products sold in the U.S.A. and Canada, this warranty applies for ninety (90) days from date of delivery.* Hewlett-Packard will, at its option, repair or replace equipment which proves to be defective during the warranty period. This warranty includes labor, parts, and surface travel costs, if any. Equipment returned to Hewlett-Packard for repair must be shipped freight prepaid. Repairs necessitated by misuse of the equipment, or by hardware, software, or interfacing not provided by Hewlett-Packard are not covered by this warranty.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

*For other countries, contact your local Sales and Service Office to determine warranty terms.

String Variable Programming

RELIABILITY ENGINEERING
REFERENCE MATERIAL
DO NOT REMOVE FROM AREA

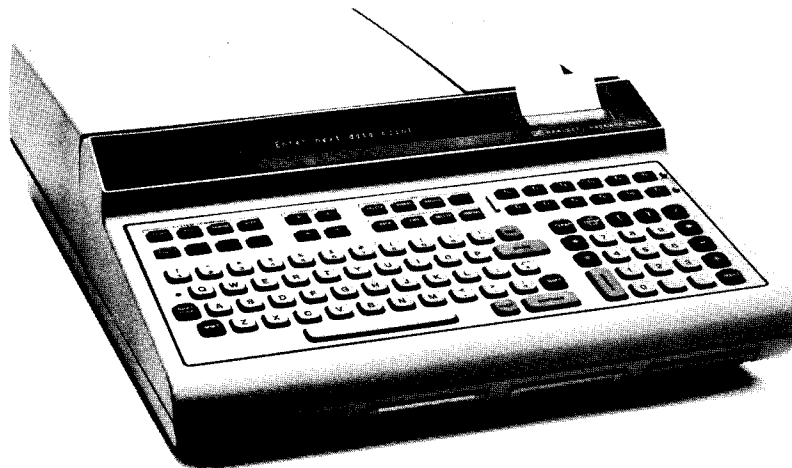

HP 9825A Calculator

Hewlett-Packard Desktop Computer Division
3404 East Harmony Road, Fort Collins, Colorado 80525
(For World-wide Sales and Service Offices see back of manual.)
Copyright by Hewlett-Packard Company 1976

Table of Contents

Chapter 1: General Information

Description	1
Applications	2
Inspection and Installation	2
Syntax	3
Error Messages	3
Requirements	3

Chapter 2: String Variables

Naming Strings	5
Dimensioning Strings	6
Storing Strings	6
Printing Strings	6
Substrings	7
Null String	8

Chapter 3: String Variable Modification

Destination Strings without Subscripts	10
Destination Strings with One Subscript	11
Destination Strings with Two Subscripts	13

Chapter 4: String Variable Functions

Length Function	15
Position Function	17
Value Function	18
String Function	20
Character Function	21
Numeric Function	22
Capital Function	25

Chapter 5: String Variable Operations

Relational Operators	27
Concatenation (Linking) Operator	28

Chapter 6: Input and Output of String Variables

Enter Statement	29
Print Statement	31
Display Statement	32
Write Statement	32
Read Statement	34

Chapter 7: Loading and Recording String Variables

Recording Data	35
Loading Data	36

Appendix

String Variable Syntax	37
ASCII Character Set with Decimal and Octal Equivalents	38
Sales and Service Offices	40
Index	42

Error Messages can be found on the inside back cover.

Chapter 1

General Information

Description

The String Variable ROM (Read Only Memory), when installed in the HP 9825A Calculator, enables you to—

- Do character manipulations, such as editing portions of strings.
- Use portions of strings as variables in arithmetic calculations.
- Perform character by character comparisons of these strings.
- Use alphanumeric data in input and output operations.

The String Variable ROM uses 52 bytes of user RWM (Read Write Memory) when installed in the HP 9825A.

The String Variable ROM is packaged with another ROM in a single ROM card. The String Variable Programming Manual (P/N 09825-90020) is supplied with the String ROM. This manual describes String Variable operations only.

Applications

With the String Variable ROM, conversational programming enables the user to have a two-way conversation with the calculator. Replies such as "yes" or "no" can be accepted by the calculator instead of the numerical codes usually given in response to data requests. In addition, programming routines such as "update", "report" or "edit" can be selected instead of numerical codes representing these operations.

Text editing is made possible using the String Variable ROM. Variable information such as names and addresses can be inserted into a form letter to be printed on a calculator controlled typewriter. Also, a body of text or a manuscript can be edited by changing or deleting certain characters or groups of characters within the text, or limiting each line of text to a certain length.

Inspection and Installation

Refer to the HP 9825A System Test Booklet for the procedure to verify operation of your ROM. Your String ROM can be plugged into any one of the four ROM slots located on the bottom front of the calculator, as shown below.



ROM Installation

To install your ROM card, first turn the calculator off. With the label right side up, slide the ROM through the ROM slot door. Press it in until the front of the ROM card is even with the front of the calculator. Then turn your calculator on.

Syntax

The following conventions apply to the syntax for the functions and operations found in this manual.

`dot matrix` - All items in dot matrix are required, exactly as shown.

[] - All items in square brackets are optional, unless the brackets are in dot matrix.

See the Appendix for a list of the syntax of all String ROM functions and operations.

All String ROM functions and operations can be executed from the keyboard, in the live keyboard mode or within a program.

Error Messages

The String ROM adds error messages S0 through S9 to the calculator error message list. Explanations of these errors can be found on the inside back cover of this manual.

Requirements

Before using this manual, you should be familiar with the calculator and the HPL programming language described in the HP 9825A Operating and Programming Manual.

Naming Strings

In the diagram below, A\$ is a simple string, nine characters long and Z\$ is a 4 (row) by 10 (column) string array containing four strings, Z\$[1] through Z\$[4]. Each of the strings in this example can be up to ten characters long. Strings have a dimensioned length and a current or “logical” length. The dimensioned length of Z\$[1] is 10; its current length is 6.

[illegible]

Dimensioning Strings

Before characters can be stored in a string variable, the string variable must be dimensioned. The `dim` statement defines the type of string variable and the size of the string or strings. The `dim` statement also reserves storage space in memory for the string variable. To dimension the strings shown in the previous example, execute –

```
dim A$(10), Z$(4, 10)
```

The subscript 10 indicates that up to ten elements can be assigned to the simple string named `A$`. The subscripts 4 and 10 indicate that up to 4 strings, each 10 characters in length, (40 elements) can be assigned to the string array named `Z$`. Exceeding dimensioned limits by assigning more characters than dimensioned, results in error 59. Both string and numeric arrays can be included in the same `dim` statement.

Storing Strings

Characters in quotation marks ("text") are assigned to string variables in the same way that values are assigned to numeric variables. To store the characters from the previous example in the dimensioned strings, execute –

```
"-ABC!123*" → A$
"Keeper" → Z$(1)
"Function" → Z$(2)
"Calculator" → Z$(3)
```

Text can't be stored in a string array. Executing

```
"XXX" → Z$
```

results in error 55.

Printing Strings

Using the `print` statement, strings and portions of strings can be printed. To print the strings just stored, execute –

```
prt A$, Z$(1), Z$(2), Z$(3)
```

```
-ABC!123*
Keeper
Function
Calculator
```

Each string in the string array must be specified to be printed. To specify an entire array of strings, a program loop of some kind must be used.* Since the Advanced Programming and String ROMs are packaged together in one ROM card, most programs in this manual use the Advanced Programming capability of for/next loops where needed.

Specifying a string longer than its dimensioned length results in error 53. For example, execute –

```
Z$(1, 20)
```

And the display shows –

```
error 53
```

Substrings

A substring is one or more contiguous characters within a string. Using the previous example, ABC is a substring of A\$ starting at the second character and ending with the fourth. This substring is indicated by –

```
A$(2, 4)
```

With string arrays, an extra subscript is required to indicate which string in the array is specified. Expressions may be used as subscripts in strings or string arrays. So per, which is a substring of Keeper from the fourth character of Z\$(1) to the sixth, can be specified by–

```
Z$[1, 4, 6] or Z$[1, A, A+2] where the numeric variable A has the value 4.
```

Since there are no characters following per in Z\$(1), this substring (from the fourth character to the end of the current length of the string) can also be specified by –

```
Z$[1, 4]
```

To specify the substring Fun in Z\$(2), these subscripts are used –

```
Z$(2, 1, 3)
```

*Except when loading or recording arrays, when the string array name (such as Z\$ from the previous example) may be used.

The `u` in `Calculator` can be specified by executing –

```
Z$(3, 5, 5)
```

Since a different number of subscripts are required to specify different things, it's a good idea to keep a record of the simple strings and string arrays you're using in a program. (The `dim` statement can be used in this way.)

Null String

The last string, `Z$(4)`, in the string array is the null string, since it contains no characters. This null string can be specified by executing –

```
Z$(4)
```

or

```
Z$(4, 4, 0)
```

or

```
""
```

Two quotation marks with no intervening characters are considered a null string, but a string that is assigned spaces (" Δ " $\rightarrow$ `A$(1, 80)`, where Δ represents a space) is not a null string.

The null string can be used when adding more characters to the current length of a string. Using `A$` from the previous examples, execute –

```
"X"  $\rightarrow$  A$(10, 10)
```

```
A$
```

And the display shows –

```
-ABC!123*X
```

The null string can also be used to clear a string. For example, to clear `A$` (from the previous example) execute –

```
""  $\rightarrow$  A$(1, 10)
```

Chapter 3

String Variable Modification

A string or a substring can be modified by another string or substring. For example, a part of a string can be changed or characters can be added or deleted. The string containing the modification is called the **modifying** string; the string to be modified is called the **destination** string. For example, in the statement `M$→D$`, `M$` is the modifying string and `D$` is the destination string. The modifying string can be a string, a substring or text.* The destination string can be a string or substring; it cannot be text.

The length and content of the destination string after modification depend not only on the characteristics (length and content) of the modifying string, but also on the number of subscripts given for the destination string.

Each element or string of a string array can be used in exactly the same way as a simple string. Therefore, the following examples show simple string modification only; string array modifications are done in exactly the same way with an extra subscript (the first) to show which string in the array is being modified.

(If you've just executed the statements from the previous section, press    before executing the statements that follow.)

Any modification made to a string or substring requires a temporary storage area as large as the modifying string.

*Text is defined as characters within quotation marks.

Destination Strings without Subscripts

When the destination string has no subscript (or one subscript for string arrays) the entire destination string is replaced by the modifying string or substring, and its length and content after modification are the same as those of the modifying string or substring. To illustrate this, execute these statements –

```
dimA$(7),B$(7)
```

```
"Atwater"→A$
```

```
"Belcher"→B$
```

```
A$→B$
```

```
B$
```

Atwater

When the destination string is longer than the modifying string, the modifying string replaces the destination string. All characters of the destination string which are not replaced are truncated. For example –

```
dimC$(11)
```

```
"Bellweather"→C$
```

```
A$→C$
```

```
C$
```

Atwater

The current length of C\$ is now 7 characters; the dimensioned length is 11 characters.

If the modifying string is longer than the dimension of the destination string, error S9 occurs. For example –

```
"Bellweather"→C$
```

```
C$→A$
```

error S9

String arrays require one extra subscript to indicate which string in the array is to be modified.

Destination Strings with One Subscript

When the destination string has one subscript (or two subscripts for string arrays) the substring is replaced by the modifying string or substring.

(If you've just executed the statements from the previous section, press    before executing the statements that follow.)

If the destination substring is equal in length to the modifying string or substring, the modification will not affect the length of the destination string. When executed, these statements illustrate this —

```
dimA$[7]
"Atkins"→A$
"wood"→A$[3]
A$
```

Atwood

If the destination substring is longer than the modifying string, the modification causes the destination string to be shortened; the characters not replaced by the modifying string are truncated. These statements, when executed, illustrate this —

```
dimB$[7]
"Atwater"→B$
"kins"→B$[3]
B$
```

Atkins

If the destination substring is shorter than the modifying string (or substring), the modification causes the destination string to be lengthened (within the dimensioned length of the destination string). To illustrate this, execute these statements —

```
dimC$[8]
"Atwater"→C$
"kinson"→C$[3]
C$
```

Atkinson

12 String Variables Modification

Any attempt to lengthen a string beyond its dimensioned length causes error S9. For example –

```
"kinsons"→C#[3]
```

error S9

If the destination substring is a null string (the current length plus one), the modifying string is attached to the end of the destination string. For example –

```
"Atkin"→C#
```

```
"son"→C#[6]
```

```
C#
```

Atkinson

When characters of a modifying string (or substring) are added to a destination string (or substring), they must be contiguous, that is, they must immediately follow the destination string without any unassigned character spaces. If they are non-contiguous, error S3 occurs. For example –

```
dimD#[20]
```

```
"Andy"→D#
```

```
"Atkinson"→D#[8]
```

error S3

By assigning blank characters to the string, error S3 is avoided. (Δ represents a space.) For example, execute these statements –

```
"ΔΔΔAtkinson"→D#  
[5,15]
```

```
D#
```

Andy Atkinson

String arrays require an extra subscript to indicate which string in the array is to be modified.

Destination Strings with Two Subscripts

When the destination string has two subscripts (or three subscripts for string arrays), the substring is replaced by the modifying string or substring. Since two subscripts define the beginning and ending characters of the substring to be replaced, truncation of the remaining (unreplaced) characters does not occur. Using an example from the previous section, execute —

C\$	Atkinson
"ken"→C\$[3,5]	
C\$	Atkenson
"kin"→C\$[3]	
C\$	Atkin

(Press    before executing the statements that follow.)

When the destination substring is equal in length to the modifying string or substring, the modification won't affect the length of the destination string; the destination substring characters are replaced. For example —

dimA\$[8]	
"Loveland"→A\$	
"Hom"→A\$[1,3]	
A\$	Honeland
"town"→A\$[5,8]	
A\$	Honetown
"Down"→A\$[1,4]	
A\$	Downtown

When the destination string has two subscripts, its length after modification will either be greater than before, or remain unchanged. When the value of the second subscript is greater than the current length of the destination string, the modification results in a lengthened string (within the dimensioned length of the string).

Here's an example that illustrates this. (Δ represents a space.) Execute these statements –

```
dimB$(32)
"AndrewΔ"→B$
"AtwaterΔ"→B$(8,
15)
"Atkinson"→B$(16
,32)
B$
```

Andrew Atwater Atkinson

When characters of a modifying string (or substring) are added to a destination string (or substring), they must be contiguous, that is, they must immediately follow the destination string without any unassigned character spaces. If they are non-contiguous error S3 occurs. For example –

```
"Andrew"→B$
"Atkinson"→B$(16
,23)
```

error S3

By assigning blank characters to the string, error S3 is avoided. (Δ represents a space.) For example, execute these statements –

```
"Δ"→B$(7,15)
"Atkinson"→B$(16
,23)
B$
```

Andrew Atkinson

String arrays require an extra subscript to indicate which string in the array is to be modified.

Chapter 4

String Variable Functions

A string function returns a numeric or string value to an expression. String functions enable you to determine the length and analyze the contents of a string. This is useful when strings with different characteristics (length and content) are processed at the same time, as in entering strings from the keyboard.

Length Function

The length (`len`) function returns the number of characters in a string or substring.

`len (string variable or text )`

The current length of the string (or substring) is returned, which is not necessarily equal to the length defined in the `dim` statement.

The following example uses a simple string to illustrate the length function. If you've run any of the examples from the previous chapter, press    before executing the following statements –

```
dim A$(32)
```

```
"length*width=" +  
A$
```

```
len("length*width  
h=")
```

13.00

```
len(A$)
```

13.00

16 String Variable Functions

In the following example, the last character of A\$ is replaced –

```
"*height"→A$[len  
(A$)]
```

A\$

length*width*height

Here an addition to A\$ is made –

```
"=volume"→A$[len  
(A$)+1]
```

A\$

length*width*height=volume

The length of a part of A\$ can be found using the length function –

```
len(A$[21])
```

6.00

String arrays require an extra subscript to indicate which string in the array is being used in the function.

Position Function

The position (`POS`) function determines the position of a substring within a string.

`POS (in string variable or text ; of string variable or text )`

If the second string is part of the first, the value of the function is the position of the beginning character of the second string within the first starting from where you began searching. If the second string is not a substring of the first string or if the second string is the null string, the value of the function is zero.

Simple strings are used in the following example to illustrate the position function. Execute these statements –

`A$`

`length*width*height=volume`

`POS(A$,"width")`

`8.00`

`DIM C$(10)`

`"width"→C$`

`POS(A$,C$)`

`8.00`

`"*width=area"→A$`
`[POS(A$,"*")]`

`A$`

`length*width=area`

`POS(A$,"area")`

`14.00`

String arrays require an extra subscript to indicate which string in the array is being used in the function.

Value Function

With the value (`val`) function, the numerical value of a string or a substring of digits can be used in calculations. (Normally the elements in a string are not recognized as numeric data and can't be used in calculations.)

```
val (string variable or text)
```

The first character to be converted in a string using the value function can be a digit, a plus or minus sign, a decimal point or a space. Leading plus signs are ignored; leading minus signs are counted. An odd number of minus signs is equal to a minus sign; an even number of minus signs is equal to a plus sign.

Numerical data entries can be combined logically with input text. All contiguous numerics are considered a part of the number until a non-numeric* is reached in the string. This means that a string can contain more than one number. The first character after leading spaces, plus signs or minus signs must be a digit or a decimal point. If the leading part of a string is not valid as a number according to the rules of the enter statement, an error occurs, unless flag 14 is set. If flag 14 is set, the default value (zero) is substituted for the number to be returned and flag 15 is automatically set (to 1) to indicate the substitution.

The value function requires a temporary storage area equivalent to the size of the portion of the string used. If there is not enough memory for this temporary storage area, error 40 will result.

Simple strings are used in the examples below to illustrate the value function. The simple string (`E$`) contains a name (Atkinson), a social security number (094-30-6441) and a balance due (\$250).

```
dim E$[32]
```

```
"Atkinson+094306  
441*+250"→E$
```

```
val(E$[211])
```

250.00

*The `e` character is recognized as the "exponent of base 10", when it follows a numeric.

After a payment of \$100, the balance due is \$150, as shown below.

```
val(E#[21])-100
```

150.00

Other operations can be performed, using the value function –

```
val(E#[20])*val(  
E#[pos(E#,"")+3  
)
```

12500.00

Alpha characters cannot be converted using the value function –

```
val(E#)
```

error S4

```
sf#14;val(E#)
```

0.00

```
f1#15
```

1.00

String arrays require an extra subscript to indicate which string in the array is being used in the function.

The string function, covered next, is the opposite of the value function.

String Function

The string (`str`) function converts a numeric value into an equivalent ASCII* string using the current fixed or float setting. If the numeric value is positive, the resulting string has a leading blank. The string function is the opposite of the value function.

```
str(expression)
```

The string function is illustrated using the simple string from the value function examples on the previous pages. The examples use `E$` which contains a name (Atkinson), a social security number (094-30-6441) and an amount due (\$250). Using the value function, the amount due is located in `E$`. Then a payment of \$100 results in a balance due of \$150. To return the \$250 to `E$`, the string function is used. Execute these statements –

```
str(250)+E$[21]
```

```
E$
```

```
Atkinson+094306441++ 250.00
```

or

```
250+X
```

```
str(X)+E$[21]
```

```
E$
```

```
Atkinson+094306441++ 250.00
```

The destination string must be dimensioned to accommodate the digits added due to the current flt or fxd setting and for the + or – sign.

*American Standard Code for Information Interchange

Character Function

The character (`char`) function converts a numeric value (modulo 256) to an ASCII character. Any of the 94 alphanumeric characters and symbols from the 9825A keyboard, and 34 other characters which are not on the keyboard can be output by executing the character function. (See the complete character set in the Appendix.)

`char (expression)`

All of the 128 characters can be displayed using the following program.

```
0: fxd 0
1: for I=0 to
  127
2: dsp char(I)
3: wait 500
4: next I
5: end
```

The character function can also be used when the 9825A is interfaced to output devices like a tape reader, 9871A printer or a digital volt meter.

The character function is the opposite of the numeric function, which is covered next.

Numeric Function

The numeric (`num`) function returns the ASCII decimal value of a single character. The numeric function is the opposite of the character function.

`num (single character of a string variable or text)`

For example, execute these statements –

```
num("A")
```

65.00

```
num("B")
```

66.00

```
num("C")
```

67.00

All 94 alphanumeric characters and symbols from the 9825A keyboard, and 34 others not on the keyboard, have a decimal value (or code) for their binary equivalent. These decimal values and the equivalent character or symbol are printed using the character function in the following program.

```
0: fxd 0
1: for I=0 to
  127
2: prt char(I),I
3: next I
4: end
```

Here's the printout of the internal character set and equivalent decimal codes. The internal character set for decimal codes 128 through 255 is the same as for decimal codes 0 through 127, but are displayed with a flashing cursor.

4	0	0	48	a	97
5	1	1	49	b	98
6	2	2	50	c	99
7	3	3	51	d	100
8	4	4	52	e	101
9	5	5	53	f	102
0	6	6	54	g	103
1	7	7	55	h	104
2	8	8	56	i	105
3	9	9	57	j	106
4	10	:	58	k	107
5	11	;	59	l	108
6	12	<	60	m	109
7	13	=	61	n	110
8	14	>	62	o	111
9	15	?	63	p	112
0	16	@	64	q	113
1	17	A	65	r	114
2	18	B	66	s	115
3	19	C	67	t	116
4	20	D	68	u	117
5	21	E	69	v	118
6	22	F	70	w	119
7	23	G	71	x	120
8	24	H	72	y	121
9	25	I	73	z	122
0	26	J	74	{	123
1	27	K	75		124
2	28	L	76	}	125
3	29	M	77	~	126
4	30	N	78		127
5	31	O	79		
6	32	P	80		
7	33	Q	81		
8	34	R	82		
9	35	S	83		
0	36	T	84		
1	37	U	85		
2	38	V	86		
3	39	W	87		
4	40	X	88		
5	41	Y	89		
6	42	Z	90		
7	43	[	91		
8	44	]	92		
9	45	^	93		
0	46	_	94		
1	47	`	95		
2			96		

The character and numeric functions can be used to store and retrieve numbers in the range 0 to 255 using only 1 byte of memory per number. Each number is represented in memory by one of the 256 characters of the internal printer character set. For example, in the following program the five test scores on the right are stored in T\$ –

```
0: dim T$[5]
1: for I=1 to 5
2:   ent X
3:   char(X)→T$[I,
  I]
4: next I
5: end
```

Student	Score
1. Andy Atkins	88
2. Tom Atwater	78
3. Jim Belcher	65
4. Jerry Hafford	100
5. Rob Rood	99

To recover a test score, the numeric function is used. For example, the last score can be displayed by executing –

```
num (T$ [5,5])
```

99.00

The length of the string used to store the values is limited by memory size only. However, only values between 0 and 255 can be stored in this way.

String arrays require an extra subscript to indicate which string in the array is being used in the function.

Capital Function

The capital (`cap`) function converts lower case alphabetic characters to upper case without modifying the original string. This enables you to compare strings for sorting or alphabetizing without regard to upper or lower case characters.

`cap (string variable or text )`

Strings or substrings of string variables can be converted using the capital function. For example –

```
dim X$(3), Y$(3)
```

```
"yes" + X$(
```

```
cap(X$(
```

YES

```
cap("yes")
```

YES

String arrays require an extra subscript to indicate which string in the array is being used in the function.

A temporary storage area is required by the cap function equivalent in size to the portion of the string used. If there is not enough memory for this temporary storage area, error 40 will result.

Chapter 5

String Variable Operations

Relational Operators

The `if` statement allows comparison of strings or substrings. All of the relational operators allowed in numerical comparisons can be used for string comparisons.

<code>=</code>	equal to
<code>></code>	greater than
<code><</code>	less than
<code>>=</code> or <code>=></code>	greater than or equal to
<code><=</code> or <code>=<</code>	less than or equal to
<code>#</code> or <code><></code> or <code>><</code>	not equal to

Here's an example that uses a relational operator to illustrate conversational programming –

```
0: dim A$(10)
1: ent "Do you
  wish to continu
  e?";A$
2: if cop(A$)="Y
  ES" goto 4
3: stop
4: dsp "Continue
  ..."
```

When the enter statement prompt is displayed, the answer is keyed in.

Within the calculator's memory, each character contained in a string is represented by a standard ASCII* decimal equivalent code, as shown in the table on page 38. When two string characters are compared, the smaller of the two characters is the one whose decimal code is smaller. For example, `Z` (decimal code 50) is smaller than `R` (decimal code 82).

*American Standard Code for Information Interchange

In some cases, such as alphabetic sequencing problems, strings must be compared for conditions other than "equal to" or "not equal to". For example, to arrange a number of strings in alphabetical order, the following type of string comparison is used –

```
0: dim A$(20),
   B$(20),Z$(20)
1: ent A$,B$;if
   A$<B$;eto 3
2: B$+Z$;A$+B$;
   Z$+A$
3: prt A$,"is
   less than",B$
```

Strings are compared, character by character, from left to right until a difference is found. If one string ends before a difference is found, the shorter string is considered smaller. For example, execute these statements –

```
"Atkinson">"Atki
ns"
```

1.00

Concatenation (Linking) Operator

The concatenation operator (&) links strings or substrings in order from left to right.

string variable or text & string variable or text [&...]

The resulting string is the total number of characters in all of the strings. Strings or substrings can be linked. Press    before executing the following statements –

```
dimA$(15),B$(15)
,C$(15),D$(45)
```

```
"Andrew"→A$
```

```
"ΔAtwater"→B$
```

```
"ΔAtkinson"→C$
```

```
A$&B$&C$→D$
```

```
D$
```

Andrew Atwater Atkinson

In general, the concatenation of N strings requires a temporary storage area equal to $2 * (\text{len}(1\text{st}) + \text{len}(2\text{nd}) + \dots + \text{len}(N\text{th} - 1)) + \text{len}(N\text{th})$ strings. If insufficient memory is available for this temporary storage, error 40 will result.

Chapter 6

Input and Output of String Variables

Enter Statement

The enter (ent) statement allows string variables to be input from the calculator keyboard during program execution. Up to 80 characters may be entered into a string at one time. To enter a string longer than 80 characters, several substrings of up to 80 characters each may be entered. For example –

```
0: dim A$[160]
1: ent A$[1,80]
2: ent A$[81,
  160]
```

After the first 80 characters are entered, a second data request - A\$[81, 160]? - is displayed so the second 80 characters may be entered. With the Advanced Programming ROM, a for/next loop can be used to enter very long strings.

String arrays require an extra subscript to indicate the appropriate string in the array.

Strings and numeric variables can be used together in an enter statement –

```
0: dim C$[10],
  D$[10]
1: ent C$,D$,C,D
```

In conversational programming, the enter statement assigns text to string variables from the keyboard while a program is running. The destination string follows the same rules as the destination string in string assignment and modification. For example –

```
0: dim A$(160)
1: ent "NAME?",
  A$
```

When line 0 is executed, the prompt NAME? is displayed. When the user types in a name and presses , that name is assigned to A\$.

If a literal prompt is not given, the destination string variable is displayed as a prompt. For example –

```
1: ent A$(3,3)
```

When the line above is executed, the display shows –

A\$(3,3)?

When the user types in the appropriate data and presses the  key, the data is assigned to A\$(3,3).

Print Statement

The print (Prt) statement can be used to print string characters. With the print statement, an automatic carriage return-line feed (cr/lf) occurs when a new string is output. The string characters are left justified when output.

Here's a program that prints out the internal printer character set using the print statement.

```
0: fxd 0
1: dim Z$(128)
2: for I=0 to
  127
3: char(I)+Z$[I+
  1,I+1]
4: next I
5: prt Z$
6: end
```

When executed, this is printed -

```
40xNa6PnAσ↓λμ+rf
008AaAa0000Ee2f
!"#$%&'()*+,-./
0123456789:;<=>?
@ABCDEFGHIJKLMNO
PQRSTUVWXYZ[r]↑_
'abcdefg hijklmno
parstuvwxyz{|}~
```

Strings, the rows of string arrays, numeric variables and constants may be included together in a print statement, as shown in lines 6 and 7 of the following temperature conversion program. (A represents the month, B represents the day and F represents the Fahrenheit temperature.)

```
0: fxd 0
1: dim C$(20),
  F$(2,20)
2: ent A,B,F
3: "Celsius"+C$
4: "Fahrenheit"+
  F$[1]
5: 5(F-32)/9+C
6: prt "Today
  is:",A,B,1977;
  spc
7: prt "Temperat
  ure is:",F$[1],
  F,C$,C
8: end
```

```
Today is:      3
              15
              1977

Temperature is:
Fahrenheit     55
Celsius        13
```

Display Statement

The display (`dis`) statement can be used to display a maximum of 80 characters. Only 32 of these characters can be viewed at one time. The display control keys (`<` and `>`) are used to shift the display to the left and right to view all 80 characters.

Write Statement

The write (`wrt`) statement is a General I/O ROM statement which allows strings to be output to external devices, as well as to the internal printer.

The write statement works like the print statement, without automatic carriage return-line feeds. The write statement outputs the entire string (as does `prt`). Using the example from the `prt` statement description, the write statement replaces print in line 5. The number following `wrt` is the select code of the output device being used (16 is the internal printer select code and 0 is the display select code). Compare the outputs –

0: fxd 0	0000000000000000
1: dim Z\$(128)	0000000000000000
2: for I=0 to	0000000000000000
127	0000000000000000
3: char(I)+Z\$(I+	0000000000000000
1,I+1)	0000000000000000
4: next I	0000000000000000
5: wrt 16,Z\$	0000000000000000
6: end	0000000000000000

Characters 10 (line feed) and 13 (carriage return) cause a carriage return and line feed. When the internal printer reaches the tenth character, a line feed occurs. Then the next 16 characters are output (except the thirteenth, which is a carriage return). Since line feeds are not automatic, the characters following the carriage return are not printed.

The write statement can be used with free-field format or with format specifications. The following example uses the write statement without format specs. Execute these statements –

```
dim A$(10)
```

```
"ABCDEFGHIJ" → A$
```

```
wrt 16, A$(5)
```

```
EF GHIJ
```

```
wrt 0, A$(6,6)
```

```
F
```

```
wrt 0, A$
```

```
ABCDEFGHIJ
```

When format specifications are used, the spec that sets the width of a character field is `c` followed by the width of the field in number of characters. (A value can precede `c` to indicate the number of strings to be output.) The strings are right justified when output. Execute these statements –

```
fmt c15; wrt 16, A$
```

```
ABCDEFGHIJ
```

```
fmt c10; wrt 16, A$
```

```
ABCDEFGHIJ
```

```
fmt c10; wrt 16, A$(  
1,5)
```

```
ABCDE
```

```
fmt c15; wrt 16, A$(  
1,5)
```

```
ABCDE
```

```
fmt c5; wrt 16, A$(1  
,5)
```

```
ABCDE
```

When the string is longer than the specified field, an overflow condition exists and dollar signs are output.

```
fmt c5; wrt 16, A$
```

```
$$$$$
```

Complete information about the write and format statements can be found in the General I/O ROM Programming Manual.

Read Statement

The read (*red*) statement is a General I/O ROM statement used to input data. The read statement can be used with free-field format or with format specifications.

Here's an example using free-field format that reads A\$ using an input device that responds to select code 3 (the number following *red*), such as a tape reader. Assume this string is on tape –

ABCDEFGHIJ (LF)

```
dinB$[10]
```

```
red3,B$
```

```
dspB$
```

ABCDEFGHIJ

When format specs are used, as with the write statement, parts of a string can be read. Using the previous example, the first three characters only can be read by executing these statements –

```
fmtc3
```

```
red3,B$
```

```
dspB$
```

ABC

Strings, string arrays, numeric variables and constants may be used together in a read statement. Complete information about the read and format statements can be found in the General I/O ROM Programming Manual.

Chapter 7

Loading and Recording Strings

Each character of a string requires 1 byte of memory for storage. Extra bytes of memory, called overhead, are required to store strings and string arrays on tape. For example, to store an array dimensioned $A\$(X, Y)$, it takes $6+2X$ bytes of overhead plus the data requirements of XY bytes (plus 1 byte if XY is odd) to store X strings.

Recording Data

To store string variables on tape, first mark the number and size of the file or files required and then use the record file (`rcf`) statement.

`rcf file number » string variable [ » string variable...]`

When the record file statement is executed, the strings found in the list of data items are recorded into the file number specified, on the current track. Strings in the list must be entire simple strings or entire string arrays. For example –

```
0: dim A$(5),
    B$(10,20),C
    .
    .
    .
3: rcf 3,A$,B$
```

When recording a list of items, such as $A\$, B\$, X$, the items must appear in the same order as allocated in a previously encountered `dim` statement. For example –

```
0: dim A$(5),X,
    B$(10,20),Y,Z
    .
    .
    .
3: rcf 5,A$,X,
    B$,Y,Z
```

Loading Data

To load string variables into the calculator's memory from tape, the load file (`ldf`) statement is used.

`ldf file number , string variable [ , string variable...]`

When the load file statement is executed, the data in the file specified from the current track is loaded into the calculator's memory. A `dim` statement must be executed before the load file statement. The list of variables in the load file statement must be in the same order as previously allocated in the `dim` statement.

String variables can't be combined in the load file statement. For example, if `A$` and `B$` are dimensioned and then linked later in a program (`A$ & B$ → C$`), they must be recorded and loaded as dimensioned –

```
0: dim A$[5],
   B$[10],C$[15]
  .
  .
  .
4: A$&B$→C$
5: rcf 1,A$,B$
  .
  .
9: ldf 1,A$,B$
```

Appendix

String Variable Syntax

The following conventions apply to the syntax for the functions and operations shown below.

`dot matrix` - All items in dot matrix are required, exactly as shown.

[] - All items in square brackets are optional, unless the brackets are in dot matrix.

Length - returns length of string or substring in number of characters

`len (string variable or text )`

Position - returns position or location (in number of characters) of string or substring

`pos (in string variable or text , of string variable or text )`

Value - returns numeric value of digits in a string for use in calculations

`val (string variable or text )`

String - converts numeric value of a variable to a string using the equivalent ASCII string based on the current fixed or float setting

`str (expression )`

Character - converts a value to a single character based on the value modulo 256

`char (expression )`

Numeric - returns decimal value of a single character

`num (single character of string variable or text )`

Capital - converts lower case alpha characters to upper case without modifying original string

`cap (string variable or text )`

Concatenation - links strings to each other

`string variable or text & string variable or text [&...]`

ASCII Character Codes

ASCII Char.	EQUIVALENT FORMS			ASCII Char.	EQUIVALENT FORMS			ASCII Char.	EQUIVALENT FORMS			ASCII Char.	EQUIVALENT FORMS		
	Binary	Octal	Dec		Binary	Octal	Dec		Binary	Octal	Dec		Binary	Octal	Dec
NULL	00000000	000	0	space	00100000	040	32	@	01000000	100	64	`	01100000	140	96
SOH	00000001	001	1	!	00100001	041	33	A	01000001	101	65	a	01100001	141	97
STX	00000010	002	2	"	00100010	042	34	B	01000010	102	66	b	01100010	142	98
ETX	00000011	003	3	#	00100011	043	35	C	01000011	103	67	c	01100011	143	99
EOT	00000100	004	4	\$	00100100	044	36	D	01000100	104	68	d	01100100	144	100
ENQ	00000101	005	5	%	00100101	045	37	E	01000101	105	69	e	01100101	145	101
ACK	00000110	006	6	&	00100110	046	38	F	01000110	106	70	f	01100110	146	102
BELL	00000111	007	7	'	00100111	047	39	G	01000111	107	71	g	01100111	147	103
BS	00001000	010	8	(	00101000	050	40	H	01001000	110	72	h	01101000	150	104
HT	00001001	011	9	)	00101001	051	41	I	01001001	111	73	i	01101001	151	105
LF	00001010	012	10	*	00101010	052	42	J	01001010	112	74	j	01101010	152	106
VTAB	00001011	013	11	+	00101011	053	43	K	01001011	113	75	k	01101011	153	107
FF	00001100	014	12	,	00101100	054	44	L	01001100	114	76	l	01101100	154	108
CR	00001101	015	13	-	00101101	055	45	M	01001101	115	77	m	01101101	155	109
SO	00001110	016	14	.	00101110	056	46	N	01001110	116	78	n	01101110	156	110
SI	00001111	017	15	/	00101111	057	47	O	01001111	117	79	o	01101111	157	111
DLE	00010000	020	16	0	00110000	060	48	P	01010000	120	80	p	01110000	160	112
DC ₁	00010001	021	17	1	00110001	061	49	Q	01010001	121	81	q	01110001	161	113
DC ₂	00010010	022	18	2	00110010	062	50	R	01010010	122	82	r	01110010	162	114
DC ₃	00010011	023	19	3	00110011	063	51	S	01010011	123	83	s	01110011	163	115
DC ₄	00010100	024	20	4	00110100	064	52	T	01010100	124	84	t	01110100	164	116
NAK	00010101	025	21	5	00110101	065	53	U	01010101	125	85	u	01110101	165	117
SYNC	00010110	026	22	6	00110110	066	54	V	01010110	126	86	v	01110110	166	118
ETB	00010111	027	23	7	00110111	067	55	W	01010111	127	87	w	01110111	167	119
CAN	00011000	030	24	8	00111000	070	56	X	01011000	130	88	x	01111000	170	120
EM	00011001	031	25	9	00111001	071	57	Y	01011001	131	89	y	01111001	171	121
SUB	00011010	032	26	:	00111010	072	58	Z	01011010	132	90	z	01111010	172	122
ESC	00011011	033	27	;	00111011	073	59	[	01011011	133	91	{	01111011	173	123
FS	00011100	034	28	<	00111100	074	60	\	01011100	134	92		01111100	174	124
GS	00011101	035	29	=	00111101	075	61	]	01011101	135	93	}	01111101	175	125
RS	00011110	036	30	>	00111110	076	62	^	01011110	136	94	~	01111110	176	126
US	00011111	037	31	?	00111111	077	63	_	01011111	137	95	DEL	01111111	177	127

Notes

HEWLETT PACKARD

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA Teletra Empresa Técnica de Equipamentos Electrónicos S.A.R.L. R. Barbosa Rodrigues, 42-1 DT. Caixa Postal, 6487 Luanda Tel. 35515/6 Cable: TELETRAL Luanda AUSTRALIA Hewlett-Packard Australia Pty. Ltd. 31-41 Joseph Street Blackburn, Victoria 3130 P.O. Box 36 Doncaster East, Victoria 3109 Tel. 89-6351 Telex: 31-024 Cable: HEWPARD Melbourne Hewlett-Packard Australia Pty. Ltd. 31 Bridge Street Pymble New South Wales, 2073 Tel. 449-6566 Telex: 21561 Cable: HEWPARD Sydney Hewlett-Packard Australia Pty. Ltd. 153 Greenhill Road Parkside, S.A. 5063 Tel. 272-5911 Telex: 82536 ADEL Cable: HEWPARD ADELAID Hewlett-Packard Australia Pty. Ltd. 141 Stirling Highway Nedlands, W.A. 6009 Tel. 86-5455 Telex: 93859 PERTH Cable: HEWPARD PERTH Hewlett-Packard Australia Pty. Ltd. 121 Wollongong Street Fyshwick, A.C.T. 2809 Tel. 25-9733 Telex: 62650 Canberra Cable: HEWPARD CANBERRA Hewlett-Packard Australia Pty. Ltd. 5th Floor Teachers Union Building 495-499 Boundary Street Spring Hill, 4000 Queensland Tel. 223-544 Cable: HEWPARD Brisbane GUAM Medical/Pocket Calculators Only Guam Medical Supply, Inc. Jay Euse Building, Room 210 P.O. Box 500 Tamuning 96911 Tel. 646-4513 Cable: EARMED Guam	HONG KONG Schmidt & Co (Hong Kong) Ltd. P.O. Box 297 Connaught Centre 39th Floor Connaught Road Central Hong Kong Tel. H-255291.5 Telex: 74756 SCHMC HX Cable: SCHMIDTCO Hong Kong INDIA Blue Star Ltd. Kasturi Buildings Jamshedji Tata Rd. Bombay 400 020 Tel. 29 50 21 Telex: 001-2156 Cable: BLUEFROST Blue Star Ltd. Sahas 414/2 Vir Savarkar Marg Prabhadevi Bombay 400 025 Tel. 45 78 87 Telex: 011-4093 Cable: FROSTBLUE Blue Star Ltd. Band Box House Prabhadevi Bombay 400 025 Tel. 45 73 01 Telex: 011-3751 Cable: BLUESTAR Blue Star Ltd. 7 Hare Street P.O. Box 506 Calcutta 700 001 Tel. 23-0131 Telex: 021-7655 Cable: BLUESTAR Blue Star Ltd. 7th & 8th Floor Bhandan House 91 Nehru Place New Delhi 110024 Tel. 634770 & 635166 Telex: 031-2463 Cable: BLUESTAR Blue Star Ltd. Blue Star House 11-11A Magarath Road Bangalore 560 025 Tel. 55668 Cable: BLUESTAR Blue Star Ltd. Measath Mandiran xxx1678 Mahatma Gandhi Rd Cochin 682 016 Tel. 32069 32161 32282 Telex: 0885-514 Cable: BLUESTAR Blue Star Ltd. 1-117/1 Suriyini Devi Road Secunderabad 500 003 Tel. 70126, 70127 Cable: BLUEFROST Telex: 015-459	Blue Star Ltd. 2/34 Kodambakkam High Road Madras 600034 Tel. 82056 Telex: 041-379 Cable: BLUESTAR INDONESIA BERCA Indonesia P.T. P.O. Box 496 Jkt JLN. Abdul Muis 62 Jakarta Tel. 40389 49886 49255 356038 JKT 42895 Cable: BERCAON BERCA Indonesia P.T. 63 JLN. Raya Gubeng Surabaya Tel. 44309 ISRAEL Electronics & Engineering Div. of Motorola Israel Ltd. 17 Kremenetski Street P.O. Box 25016 Tel-Aviv Tel. 38973 Telex: 33569 Cable: BASTEL Tel-Aviv JAPAN Yokogawa-Hewlett-Packard Ltd. Ohashi Building 59-1 Yoyogi 1-Chome Shibuya-ku, Tokyo 151 Tel. 03-370-2281/92 Telex: 232-2024YHP MARKET TOK 23-724 Cable: YHPMARKET Yokogawa-Hewlett-Packard Ltd. Chuo Bldg., 4th Floor 4-20 Nishinakajima 5-chome Yodogawa-ku, Osaka 532 Tel. 06-304-6021 Yokogawa-Hewlett-Packard Ltd. Nakamo Building 24 Kami Sasajima-cho Nakamura-ku, Nagoya 450 Tel. (052) 571-5171 Yokogawa-Hewlett-Packard Ltd. Tangawa Building 2-24-1 Tsutaya-cho Kanagawa-ku Yokohama 221 Tel. 045-312-1252 Telex: 382-3204 YHP YOK Yokogawa-Hewlett-Packard Ltd. Mito Mitsui Building 105 Chome-1 San-no-maru Mito, Ibaragi 310 Tel. 0292-25-7470 Yokogawa-Hewlett-Packard Ltd. Inoue Building 1348-3, Asahi-cho, 1-chome Atsugi, Kanagawa 243 Tel. 0462-24-0452	Yokogawa-Hewlett-Packard Ltd. Kumagaya Asahi Hackjuni Building 4th Floor 3-4 Tsukuba Kumagaya, Saitama 360 Tel. 0485-24-6563 KENYA Technical Engineering Services (E.A.) Ltd. P.O. Box 18311 Nairobi Tel. 55726/556762 Cable: PROTON Medical Only International Aeradio (E.A.) Ltd. P.O. Box 19012 Nairobi Airport Nairobi Tel. 336055/56 Telex: 22201/22301 Cable: INTAERIO Nairobi KOREA Samsung Electronics Co., Ltd. 220th Fl. Dongbang Bldg. 250, 2-KA C.P.O. Box 2775 Taeyung-Ro, Chung-Ku Seoul Tel. (23) 6811 Telex: 22575 Cable: ELEKSTAR Seoul MALAYSIA Teknik Mutu Sdn Bhd 2 Lorong 13/6A Section 13 Petaling Jaya Selangor Tel. 54994-54996 Telex: MA 37605 Cable: PROTENG Protel Engineering P.O. Box 1917 Lot 259, Satok Road Kuching, Sarawak Tel. 2400 Cable: PROTENG MOZAMBIQUE A.N. Goncalves, Lda 162, 1 Apt. 14 Av. D. Luis Caixa Postal 107 Loquendo Marques Tel. 27091, 27114 Telex: 6-203 NEGON Mo Cable: NEGON NEW ZEALAND Hewlett-Packard (N.Z.) Ltd. P.O. Box 9443 Courtenay Place Wellington Tel. 677-199 Cable: HEWPACK Wellington Hewlett-Packard (N.Z.) Ltd. Pakuranga Professional Centre 267 Pakuranga Highway Box 51092 Pakuranga Tel. 675-651 Cable: HEWPACK Auckland	Analytical/Medical Only Medical Supplies N.Z. Ltd. Scientific Division 79 Carlton Gore Rd., Newmarket P.O. Box 1234 Auckland Tel. 75-289 Cable: DENTAL Auckland Analytical/Medical Only Medical Supplies N.Z. Ltd. P.O. Box 1994 147-161 Tory St. Wellington Tel. 850-799 Telex: 3858 Cable: DENTAL, Wellington Analytical/Medical Only Medical Supplies N.Z. Ltd. P.O. Box 309 239 Stanmore Road Christchurch Tel. 692-019 Cable: DENTAL, Christchurch Analytical/Medical Only Medical Supplies N.Z. Ltd. 303 Great King Street P.O. Box 233 Dunedin Tel. 88-817 Cable: DENTAL, Dunedin NIGERIA The Electronics Instrumentations Ltd. NSB 770 Oyo Road Ouseun House P.M.B. 5402 Ibadan Tel. 61577 Telex: 11231 TEIL, Nigeria Cable: THETEL Ibadan The Electronics Instrumentations Ltd. 144 Agege Motor Road, Mushin P.O. Box 6645 Lagos P.O. Box 39325 Cable: THETEL Lagos PAKISTAN Mushko & Company, Ltd. Oosman Chambers Abdullah Haroon Road Karachi 3 Tel. 511027, 512927 Telex: 2894 Cable: COOPERATOR Karachi Mushko & Company, Ltd. 38B Satellite Town Rawalpindi Tel. 41924 Cable: REMUS Rawalpindi PHILIPPINES The Online Advanced Systems Corporation Rico House Amorsolo cor. Herrera St. Legaspi Village, Makati Metro Manila Tel. 85-35-81, 85-34-91 Telex: 3274 ONLINE	RHODESIA Field Technical Sales 45 Kelvin Road North P.O. Box 3458 Salisbury Tel. 705251 (5 lines) Telex: RH 4122 SINGAPORE Hewlett-Packard Singapore (Pty.) Ltd. 1150 Depot Road Alexandra P.O. Box 58 Singapore Tel. 270-2355 Telex: HPSG RS 21486 Cable: HEWPACK, Singapore SOUTH AFRICA Hewlett-Packard South Africa (Pty.) Ltd. Private Bag Wendywood Sandton, Transvaal 2144 Hewlett-Packard Centre Daphne Street, Wendywood, Sandton, Transvaal 2144 Tel. 802-10408 Telex: 8-4782 Cable: HEWPACK JOHANNESBURG Service Department Hewlett-Packard South Africa (Pty.) Ltd. P.O. Box 39325 Gramley Sandton, 2018 451 Wynberg Extension 3, Sandton, 2001 Tel. 636-8188/9 Telex: 8-2391 Hewlett-Packard South Africa (Pty.) Ltd. P.O. Box 120 Howard Place, Cape Province, 7405 Pine Park Centre, Forest Drive, Pineblende, Cape Province, 7405 Tel. 53-7955 th9 Telex: 57-0006 Service Department Hewlett-Packard South Africa (Pty.) Ltd. P.O. Box 37099 Overport, Durban 4067 Braby House 641 Ridge Road Durban, 4001 Tel. 88-7478 Telex: 6-7954	TAIWAN Hewlett-Packard Far East Ltd. Taiwan Branch 39 Chung Hsiao West Road Sec. 1, 7th Floor Taipei Tel. 3819160-4 Cable: HEWPACK TAIPEI Hewlett-Packard Far East Ltd. Kaohsiung Branch 68-2, Chung Cheng 3rd Road Taiwan Branch Tel. (07) 242318-Kaohsiung Analytical Only San Kwang Instruments Co., Ltd. No. 20, Yung Sui Road Taipei Tel. 371571-4 (5 lines) Telex: 22894 SANKWANG Cable: SANKWANG TAIPEI TANZANIA Medical Only International Aeradio (E.A.) Ltd. P.O. Box 861 Dar es Salaam Tel. 21251 Ext. 265 Telex: 41030 THAILAND UNIMESA Co., Ltd. Elcom Research Building 2538 Sukhumvit Ave Bangkok Tel. 3932387, 3930338 Cable: UNIMESA Bangkok UGANDA Medical Only International Aeradio (E.A.) Ltd. P.O. Box 2577 Kampala Tel. 5-3388 Cable: INTAERIO Kampala ZAMBIA R.J. Tibury (Zambia) Ltd. P.O. Box 2792 Lusaka Tel. 73793 Cable: ARJAYTEE, Lusaka	OTHER AREAS NOT LISTED. CONTACT: Hewlett-Packard International 3200 Hillview Ave. Palo Alto, California 94304 Tel. (415) 493-1501 TWX 910-373-1267 Cable: HEWPACK Palo Alto
--	---	---	--	---	---	--	---

CANADA

ALBERTA Hewlett-Packard (Canada) Ltd. 11620A - 168th Street Edmonton T5M 3T9 Tel. (403) 452-3670 TWX: 610-831-2431 Hewlett-Packard (Canada) Ltd. 210, 7220 Fisher St. S.E. Calgary T2H 2H8 Tel. (403) 253-2713 TWX: 610-821-641	BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd. 837 E. Cordova Street Vancouver V6A 3R2 Tel. (604) 254-0531 TWX: 610-922-5059	MANITOBA Hewlett-Packard (Canada) Ltd. 513 Century St. St. James Winnipeg R3H 0L8 Tel. (204) 786-7581 TWX: 610-671-3531	NOVA SCOTIA Hewlett-Packard (Canada) Ltd. 800 Windmill Road Dartmouth B3B 1L1 Tel. (902) 469-7820 TWX: 610-271-4482 HFX	ONTARIO Hewlett-Packard (Canada) Ltd. 1020 Morrison Dr. Ottawa K2H 8K7 Tel. (613) 820-6483 TWX: 610-563-1636 Hewlett-Packard (Canada) Ltd. 6877 Goreway Drive Mississauga L4V 1M8 Tel. (416) 678-9430 TWX: 610-492-4246	QUEBEC Hewlett-Packard (Canada) Ltd. 275 Hymus Blvd. Saint-Jovite H9R 1G7 Tel. (514) 697-4232 TWX: 610-422-3022 TLX: 05-821521 HPCL	FOR CANADIAN AREAS NOT LISTED: Contact Hewlett-Packard (Canada) Ltd. in Mississauga.
--	---	--	--	--	---	--

CENTRAL AND SOUTH AMERICA

ARGENTINA Hewlett-Packard Argentina S.A. Av. Leandro N. Alem 822 - 12 1001 Buenos Aires Tel. 31-6063 4.5.6 and 7 Telex: 122443 AR CIGY Cable: HEWPACK ARG BOLIVIA Casa Kavlin S.A. Calle Potosí 1130 P.O. Box 500 La Paz Tel. 41530, 53221 Telex: CWC BC 5298, ITT 3560082 Cable: KAVLIN BRAZIL Hewlett-Packard do Brasil I.E.C. Ltda. Avenida Rio Negro 980 Alphaville 06400 Barueri SP Tel. 429-3222	Hewlett-Packard do Brasil I.E.C. Ltda. Rua Padre Chagas, 32 90000 Porto Alegre-RS Tel. (0512) 22-2998, 22-5621 Cable: HEWPACK Porto Alegre Hewlett-Packard do Brasil I.E.C. Ltda. Rua Siqueira Campos, 53 Copacabana 20000 Rio de Janeiro Tel. 257-80-94-0DD (021) Telex: 39-212-1905 HEWP-BR Tel. (604) 254-0531 Cable: HEWPACK Rio de Janeiro CHILE Caldaghi y Metcalfe Ltda. Alameda 580-Of. 807 Casilla 2118 Santiago, 1 Tel. 398613 Telex: 3520001 CALMET Cable: CALMET Santiago	COLOMBIA Instrumentación Henrik A. Langebaek & Kier S.A. Carrera 7 No. 48-75 Apartado Aéreo 6287 Bogotá, D.E. Tel. 69-88-77 Cable: AARIS Bogotá Telex: 044-400 COSTA RICA Ciencia Costarricense S.A. Avenida 2 Calle 5 San Pedro de Montes de Oca Apartado 10159 San Jose Tel. 24-38-20, 24-08-19 Telex: 2367 GALGUR CR Cable: CALMET	ECUADOR Calculators Only Computadoras y Equipos Electrónicos P.O. Box 6423 CCI Eloy Alfaro #1824 3 Piso Quito Tel. 453482 Telex: 02-2113 Sagita Ed Cable: Sagita-Quito EL SALVADOR Instrumentación y Procesamiento Electrónico de el Salvador Bulevar de los Heroes 11-48 San Salvador Tel. 252787 GUATEMALA IPESA Avenida La Reforma 3-48 Zona 9 Guatemala City Tel. 53627, 64786 Telex: 4192 Teletro Gu	MEXICO Hewlett-Packard Mexicana S.A. de C.V. Av. Penitencio Sur No. 6501 Tepic, Coahuila Mexico 23, D.F. Tel. 905-676-4600 Hewlett-Packard Mexicana S.A. de C.V. Ave. Constitución No. 2184 Monterrey, N.L. Tel. 48-71-32, 48-71-84 Telex: 038-410 NICARAGUA Roberto Terán G. Apartado Postal 689 Edificio Terán Managua Tel. 25114, 23412 23454 Cable: ROTERAN Managua PANAMA Electrónico Balboa S.A. P.O. Box 4929 Calle Samuel Lewis Ciudad de Panama Tel. 64-2700 Telex: 3483103 Curunda Canal Zone Cable: ELECTRON Panama	PERU Compañía Electro Médica S.A. Los Flamencos 145 San Isidro Casilla 1030 Lima, 1 Tel. 41-4325 Cable: ELMED Lima PUERTO RICO Hewlett-Packard Inter-Américas Puerto Rico Branch Office Calle 272 No. 203 Urb. Country Club Carolina 00924 Tel. (809) 762-7255 Telex: 345 0514 URUGUAY Pablo Ferrando S.A. Comercial e Industrial Avenida Italia 2877 Casilla de Correo 370 Montevideo Tel. 40-3102 Cable: RADIUM Montevideo	VENEZUELA Hewlett-Packard de Venezuela C.A. P.O. Box 50933 Caracas 105 Los Ruices Norte 3a Transversal Edificio Segre Caracas 107 Tel. 35-00-11 (20 lines) Telex: 25146 HEWPACK Cable: HEWPACK Caracas FOR AREAS NOT LISTED. CONTACT: Hewlett-Packard Inter-Américas 3200 Hillview Ave. Palo Alto, California 94304 Tel. (415) 493-1501 TWX 910-373-1260 Cable: HEWPACK Palo Alto
--	--	---	--	---	--	--

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA

Hewlett-Packard Ges m b H.
Haidelskai 52
P.O. Box 7
A-1205 Vienna
Tel: (0222) 351621 to 27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM

Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1.
(Groenraaglaan)
B-1170 Brussels
Tel: (02) 672 22 40
Cable: PALOBN Brussels
Telex: 23 494 palobn bru

CYPRUS

Kypros
19 Gregorios & Xenopoulos Rd
P.O. Box 1152
CY-Nicosia
Tel: 45628/29
Cable: KYPRONICS PANDEHS
Telex: 3018

CZECHOSLOVAKIA

Vývojová a Provozní Závody
Výzkumných Ústavů v Bechovicích
CSSR-25097 Bechovice u Prahy
Tel: 89 93 41
Telex: 121333
Institute of Medical Bionics
Vyskumný Ústav Lékařské Bioniky
Jedlova 6
CS-88346 Bratislava-Kramare
Tel: 44-551/45-541

DOR

Entwicklungslabor der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Waldheim/Meinsberg
Tel: 37 667
Tel: 112145
Export Contact AG Zurich
Guenther Forger
Schlegelstrasse 15
1040 Berlin
Tel: 42-74-12
Telex: 111889

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 Birkerød
Tel: (02) 81 66 40
Cable: HEWPAK AS
Telex: 37409 hpas dk
Hewlett-Packard A/S
Navevej 1
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 37409 hpas dk
Cable: HEWPAK AS

FINLAND

Hewlett-Packard Oy
Nahkahuusentie 5
P.O. Box 6
SF-00211 Helsinki 21
Tel: (90) 6923031
Cable: HEWPAK OYS Helsinki
Telex: 12-1563 HEWPA SF

FRANCE

Hewlett-Packard France
Quartier de Courtabouet
Boite Postale No. 6
F-91401 Orsay Cedex
Tel: (1) 907 78 25
Cable: HEWPAK Orsay
Telex: 600046
Hewlett-Packard France
Agence Régionale
Le Saquin
Chemin des Moulins
B.P. 162
F-69130 Ecullay
Tel: (78) 33 81 25
Cable: HEWPAK Ecullay
Telex: 31 06 17

Hewlett-Packard France
Agence Régionale
Pénicente de la Cèpre
Chemin de la Cèpre
F-31300 Toulouse-Le Mirail
Tel: (61) 40 11 12
Cable: HEWPAK 51957
Telex: 510957
Hewlett-Packard France
Agence Régionale
Aéroport principal de
Marseille-Marganne
F-13721 Marignane
Tel: (91) 89 12 36
Cable: HEWPAK MARGN
Telex: 410770
Hewlett-Packard France
Agence Régionale
63 Avenue de Rochester
B.P. 1124
F-35014 Rennes Cedex
Tel: (99) 36 33 21
Cable: HEWPAK 74912
Telex: 740912

Hewlett-Packard France
Agence Régionale
74 Allée de la Robertsau
F-67000 Strasbourg
Tel: (88) 35 23 20/21
Telex: 890141
Cable: HEWPAK STRBG
Telex: 410770
Hewlett-Packard France
Agence Régionale
Centre Vauban
201, rue Colbert
Entrée A2
F-59000 Lille
Tel: (20) 51 44 14
Telex: 802744
Hewlett-Packard France
Centre d'Affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
F-93153 Le Blanc Mesnil Cedex
Tel: (01) 931 88 50

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernerstrasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50 04-1
Cable: HEWPAKSA Frankfurt
Tel: (0611) 50 04-1
Cable: HEWPAKSA Frankfurt
Telex: 04-13249 hpfmd
Hewlett-Packard GmbH
Technisches Büro Böblingen
Herrenbergerstrasse 110
D-7030 Böblingen, Württemberg
Tel: (07031) 667-1
Cable: HEPAK Bblngn
Telex: 0765739 bbn
Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emmanuel-Leutze-Str. 1 (Seestern)
D-4000 Düsseldorf 11
Tel: (0211) 5971-1
Cable: 085-86 533 hppd d
Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendensstrasse 23
D-2000 Hamburg 1
Tel: (040) 24 13 93
Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hpph d
Hewlett-Packard GmbH
Technisches Büro Hannover
Am Grossmarkt 6
F-3000 Hannover 91
Tel: (0511) 46 60 01
Telex: 092 3259

Hewlett-Packard GmbH
Werk Grotzingen
Ohmstrasse 6
D-7500 Karlsruhe 41
Tel: (0721) 69 40 06
Telex: 07-825707
Hewlett-Packard GmbH
Technisches Büro Nürnberg
Neumeyer Str. 90
D-8500 Nürnberg
Tel: (0911) 56 30 83/85
Telex: 0623 860

Hewlett-Packard GmbH
Technisches Büro München
Unterfahinger Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: (089) 601 30 61/7
Cable: HEWPAKSA München
Telex: 0524985

Hewlett-Packard GmbH
Technisches Büro Berlin
Keith Strasse 2-4
D-1000 Berlin 30
Tel: (030) 24 90 86
Telex: 18 3405 hpbm d

GREECE

Kostas Karayannis
08 Omirou Street
GR-11503 Athens 133
Tel: 3237731
Cable: RAKAR Athens
Telex: 21 59 62 rkar gr
Analytical Only
INTECO G. Papathanassiou & Co
Marin 17
GR - Athens 103
Tel: 522 1915
Cable: INTEKNIKA Athens
Telex: 21 5329 INTE GR
Medical Only
Technomed Hellas Ltd
52 Skoufta Street
GR - Athens 135
Tel: 362 6972, 363 3830
Cable: ETALAK Athens
Telex: 21-4693 ETAL GR

HUNGARY

Műszertulajdonos és Méréstechnikai
Szolgálat
Lenin Krt. 67
1391 Budapest VI
Tel: 42 03 38
Telex: 22 51 14
ICELAND
Medical Only
Elding Trading Company Inc.
Hafnarholvi - Tryggvatoru
IS-Reykjavik
Tel: (0211) 5971-1
Cable: 085-86 533 hppd d

IRAN

Hewlett-Packard Iran Ltd
No. 13, Fourteenth St.
Miremad Avenue
P.O. Box 41/2419
IR-Tehran
Tel: 851082-7
Telex: 21 25 74 khm ir
IRAQ
Hewlett-Packard Trading Co.
41/8 Mansour City
Baghdad
Tel: 5517827
Telex: 2455 hewpak iq
Cable: HEWPAKSA Iraq
Baghdad Iraq

IRELAND

Hewlett-Packard Ltd
King Street Lane
GB-Winnerah, Wokingham
Tel: (0344) 801 549
Tel: (0344) 78 47 74
Telex: 847178/848179

ITALY

Hewlett-Packard Italiana S.p.A.
Via Amerigo Vesputci 2
Casella postale 3645
I-20100 Milano
Tel: (2) 6251 (10 lines)
Cable: HEWPAKIT Milano
Telex: 32046 via Milano
Hewlett-Packard Italiana S.p.A.
Via Pietro Maroncelli 40
(ang. Via Visentini)
I-35100 Padova
Tel: (49) 66 48 88
Telex: 41612 Hewpacki
Medical only
Hewlett-Packard Italiana S.p.A.
Via d'Agharini, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Hewlett-Packard Italiana S.p.A.
Via G. Arminio, 10
I-00143 Roma
Tel: (06) 54 69 61
Telex: 61514
Cable: HEWPAKIT Roma
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza
I-10031 Torino
Tel: (011) 682245/659308

Medical/Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 G/C
I-95126 Catania
Tel: (095) 37 05 04
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vesputci, 9
I-80142 Napoli
Tel: (081) 33 77 11
Hewlett-Packard Italiana S.p.A.
Via E. Masi, 9/B
I-40137 Bologna
Tel: (051) 30 78 87

KUWAIT

Al-Khalidya Trading &
Contracting Co.
P.O. Box 830-Saft
Kuwait
Tel: 424910-411726
Telex: 2481 areg kt
Cable: VISCOUNT
Telex: 23 494

LUXEMBURG

Hewlett-Packard Benelux
S.A./N.V.
Avenue du Col-Vert, 1.
(Groenraaglaan)
B-1170 Brussels
Tel: (02) 672 22 40
Cable: PALOBN Brussels
Telex: 23 494

MOROCCO

Geset
190 Blvd. Ibrahim Roudani
Casablanca
Tel: 25-16-76/25-90-99
Cable: GERP-Casa
Telex: 237339

NETHERLANDS

Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 12
P.O. Box 667
NL-1134 Amstelveen
Tel: (020) 47 20 21
Cable: PALOBN Amsterdam
Telex: 13 216 hepa nl

NORWAY

Hewlett-Packard Norge A/S
Nesveien 13
Box 149
N-1344 Haslum
Tel: (02) 53 83 60
Telex: 16621 hpnas n

POLAND

Biurowo Informacji Technicznej
Hewlett-Packard
Ul. Stawki 2, 6P
00-950 Warszawa
Tel: 395962/395187
Telex: 81 24 53 hepa pl
UNIPAN
Zaklad Odszkodowczy
Budowy Aparatury Naukowej
Ul. Krajowej Rady Narodowej 51/55
00-800 Warszawa
Tel: 36190
Telex: 81 46 48
Zaklady Naprawcze Sprzetu
Medycznego
Plac Komuny Paryskiej 6
90-007 Lodz
Tel: 334-41 337-83

PORTUGAL

Electra-Empresa Técnica de
Equipamentos Eléctricos S. a r l
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (01) 68 60 72
Cable: TELECTRA Lisbon
Telex: 12596
Medical only
Mundinter
Intercomercial Mundial de Comercio
S. a r l
Av. A. A. de Aguiar 138
P.O. Box 2761
P-Lisbon 1
Tel: (01) 531 21 31/7
Cable: INTERCAMBIO Lisbon

RUMANIA

Hewlett-Packard Reprezentanta
Bd. N. Balcescu 16
Bucharest
Tel: (06) 2313885
Telex: 10440
I. R. U.C.
Intreprinderea Pentru
Intretinere
Si Reparatia Utilitatilor de Calcul
B-dul prof. Dimitrie Pompei 6
Bucharest-Sectorul 2
Tel: 12 64 30
Telex: 11716

SAUDI ARABIA

Modern Electronic Establishment
Riyadh
P.O. Box 1228
Jeddah
Tel: 31173-32201
Cable: ELECTRA
P.O. Box 2728 (Service center)
Tel: 62596-66232
Cable: RAOUFCO

SPAIN

Hewlett-Packard Española, S. A.
Jerez, Calle 3
E-Madrid 16
Tel: (1) 458 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española, S. A.
Milanés 21-23
E-Barcelona 17
Tel: (3) 203 6200 (5 lines)
Telex: 52603 hpbpe e
Hewlett-Packard Española, S. A.
Av. Ramón y Cajal, 1
Edificio Sevilla, planta 9.
E-Sevilla 5
Tel: 64 44 54/58
Cable: HEWPAKSA Española S.A.
Edificio Albia II 7 B
E-Bilbao-1
Tel: 23 83 06/23 82 06
Calculators Only
Hewlett-Packard Española S. A.
Gran Vía Fernando El Católico, 67
E-Valencia-8
Tel: 326 87 28/326 85 55

SWEDEN

Hewlett-Packard Sverige AB
Enghetsvägen 1-3
Fack
S-161 20 Bromma 20
Tel: (08) 730 05 50
Cable: MEASUREMENTS
Stockholm
Tel: 10721
Hewlett-Packard Sverige AB
Ostra Vintergatan 30
S-702 40 Örebro
Tel: (019) 14 07 20
Hewlett-Packard Sverige AB
Fritallsgatan 30
S-421 32 Västra Frölunda
Tel: (031) 49 09 50
Telex: 10721 Via Bromma Office

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 307
CH-8952 Schlieren-Zürich
Tel: (01) 730 52 40/730 18 21
Cable: HPAG CH
Telex: 53933 hpag ch
Hewlett-Packard (schweiz) AG
Château, Bloc 19
CH-1219 Le Lignon-Geneva
Tel: (022) 96 03 22
Cable: HEWPAKAG Geneva
Telex: 27 333 hpag ch
SYRIA
Medical/Calculator only
Sawah & Co
Place Armé
B.P. 2308
SYR-Damascus
Tel: 16367, 19697, 14268
Cable: SAWAH, Damascus

TURKEY

Telekom Engineering Bureau
P.O. Box 437
Beyoğlu
TR-Istanbul
Tel: 49 40 40
Cable: TELEMATON Istanbul
Telex: 23609
Medical only
E.M.A.
Mühendislik Kollektif Şirketi
Adakale Sokak 41/6
TR-Ankara
Tel: 175622
Yilmaz Ozyurek
Mili Müdafaa Cad. No. 16/6
Kızılay
TR-Ankara
Tel: 25 03 09
Telex: 42576 ozek tr

UNITED KINGDOM

Hewlett-Packard Ltd
King Street Lane
GB-Winnerah, Wokingham
Berkshire RG11 5AR
Tel: (0412) 78 47 74
Cable: Hewpe London
Telex: 847178/9
Hewlett-Packard Ltd
Trafford House
Navigation Road
Altrincham
Cheshire WA14 1NU
Tel: (061) 528 6422
Telex: 680088
Hewlett-Packard Ltd
Lynton Court
Hereford Rise
Dudley Road
Halesowen
West Midlands B62 8SD
Tel: (021) 550 9911
Telex: 339105

WEDGWOOD

Hewlett-Packard Ltd
Wedgwood House
799, London Road
GB-Thornton Heath
Surrey CR4 6XL
Tel: (01) 684 0103-8
Telex: 946825

WEDGWOOD LTD

c/o Makro
South Service Wholesale Centre
Wear Industrial Estate
Washington
GB-New Town, County Durham
Tel: Washington 464001 ext. 57 58

WEDGWOOD LTD

10 Wesley St
GB-Chesterford
West Yorkshire WF10 1AE
Tel: (0975) 50402
Telex: 557355

WEDGWOOD LTD

1 Wallace Way
GB-Hitchin
Herts
Tel: (0462) 52624-56704
Telex: 825981

WEDGWOOD LTD

Hewlett-Packard Ltd
20, Avonbridge Industrial Estate
Long Mile Road
Dublin 12
Tel: Dublin 509458
Telex: 30439

USSR

Hewlett-Packard
Representative Office USSR
Pokrovsky Boulevard 417-KW 12
Moscow 101000
Tel: 294-2024
Telex: 7825 hewpak su

YUGOSLAVIA

Iskra-standard/Hewlett-Packard
Mikroskopska 38/VI
61000 Ljubljana
Tel: 31 58 79-32 16 74
Telex: 31583

SOCIALIST COUNTRIES

NOT SHOWN PLEASE CONTACT:

Hewlett-Packard Ges m b H
P.O. Box 7
A-1205 Vienna, Austria
Tel: (0222) 35 16 21 to 27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

MEDITERRANEAN AND MIDDLE EAST COUNTRIES

NOT SHOWN PLEASE CONTACT:

Hewlett-Packard S.A.
Mediterranean and Middle
East Operations
35, Kolokotroni Street
Plata Kefaloniu
GR-Kifissia-Athens, Greece
Tel: 8080337/359429
Telex: 21-6588
Cable: HEWPAKSA Athens

FOR OTHER AREAS

NOT LISTED CONTACT:

Hewlett-Packard S.A.
7, rue du Bois-du-Lan
P.O. Box
CH-1217 Meyrin 2 - Geneva
Switzerland
Tel: (022) 82 70 00
Cable: HEWPAKSA Geneva
Telex: 2 24 86

UNITED STATES

ALABAMA

8290 Whitesboro Dr., S.E.
P.O. Box 4207
Huntsville 35802
Tel: (205) 881-4591
Medical Only
228 W. Valley Ave.,
Room 220
Birmingham 35209
Tel: (205) 942-2081/2

ARIZONA

2335 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
2424 East Aragon Rd
Tucson 85706
Tel: (602) 294-3148

ARKANSAS

Medical Service Only
P.O. Box 5646
Brady Station
Little Rock 72215
Tel: (501) 376-1844

CALIFORNIA

1430 East Orangehorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
3539 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TX: 910-495-2671

CALIFORNIA

100 West Rosecrans Blvd
P.O. Box 92105
World Way Postal Center
Los Angeles 90009
Tel: (213) 970-7500
*Los Angeles
Tel: (213) 776-7500
3003 Scott Boulevard
Santa Clara 95050
Tel: (408) 249-7000
TX: 910-338-0518

*RIDGECREST

Tel: (714) 446-6165
646 W. North Market Blvd
Sacramento 95834
Tel: (916) 929-7222
9606 Aero Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200

COLORADO

5600 South Ulster Parkway
Englewood 80110
Tel: (303) 771-3455
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TX: 710-465-2029

CONNECTICUT

12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TX: 710-465-2029
Jacksonville
Medical Service Only
Tel: (904) 398-0663
P.O. Box 13910
6177 Lake Ellenor Dr
Orlando 32809
Tel: (305) 859-2900
P.O. Box 12826
Pensacola 32575
Tel: (904) 476-8422

FLORIDA

P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33311
Tel: (305) 371-2020
Little Rock 72215
Tel: (501) 376-1844
Medical Service Only
Tel: (904) 398-0663
P.O. Box 13910
6177 Lake Ellenor Dr
Orlando 32809
Tel: (305) 859-2900
P.O. Box 12826
Pensacola 32575
Tel: (904) 476-8422

GEORGIA

P.O. Box 105005
Atlanta 30348
Tel: (404) 955-1500
TX: 810-766-4890
Medical Service Only
Tel: (404) 736-0592
P.O. Box 2103
Warner Robins 31098
Tel: (912) 922-0449

HAWAII

2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455
Tel: (808) 955-4455
724 West Centre Ave
Kalamazoo 49002
Tel: (606) 323-8362

ILLINOIS

5201 Tollview Dr.
Rolling Meadows 60008
Tel: (312) 255-9800
TX: 910-687-2260

INDIANA

7301 North Shadeland Ave
Indianapolis 46250
Tel: (317) 842-1000
TX: 910-260-1797

IOWA

2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY

Medical Only
Atkinson Square
3901 Atkinson Dr
Louisville 40218
Tel: (502) 456-1573

LOUISIANA

P.O. Box 840
3229-39 Williams Boulevard
Kenner 70063
Tel: (504) 443-6201

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TX: 710-862-9157
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TX: 710-828-9684

MASSACHUSETTS

32 Hartwell Ave
Lexington 021

Subject Index

a

Alphabetic sequencing 25, 28
 ASCII Character Codes 38

c

Capital function (`cap`) 25
 Character function (`char`) 21, 24
 Concatenation operator (`&`) 28
 Current String Length 5

d

Decimal codes 23, 38
 Destination String 9
 Dimensioning Strings 6
`dep` statement 32

e

`ent` statement 29
 Equal operator (`=`) 27
 Error Messages Inside Back Cover

g

Greater than operator (`>`) 27
 Greater than or equal to operator
 (`>=` or `=>`) 27

i

Inspection and Installation of ROM 2
 Internal Printer Character Set 23, 31

l

Length function (`len`) 15
 Less than operator (`<`) 27
 Less than or equal to operator
 (`<=` or `=<`) 27
`ldf` statement 36
 Linking strings 28, 36

Loading Data 36
 Logical String Length 5

m

Modifying Strings 9

n

Naming Strings 5
 Non-Contiguous String Modification . 12, 14
 No Subscripts 10
 Not equal to operators (`#` or `<>` or `><`) 27
 Null String 8
 Numeric Function (`num`) 22

o

Octal codes 38
 One Subscript 11
 Overhead in recording/loading 35

p

Position function (`pos`) 17
`pnt` statement 31
 Printing Strings 6

r

`rcf` statement 35
 Recording Data 35
`red` statement 34
 Relational Operators 27

s

Sales and Service Offices 40
 Simple Strings 5
 Storing Strings 6
 String Arrays 5
 String function (`str`) 20
 String Variable Modification 9
 Substrings 7
 Syntax Summary 37

t

Truncating strings 10, 11, 13
Two Subscripts 13

V

Value function (`val`) 18

W

`wrt` statement 32

Error Messages

- error S0 Invalid set of strings in data list of ldf statement.
- error S1 Improper argument for string function or string variable.
- error S2 More parameters than necessary for string function or string variable.
- error S3 Attempt to access or assign to a non-contiguous string. Attempt to execute the num function with the null string as a parameter.
- error S4 Attempt to find the val of a non-numeric string or the null string. Exponent in the val function too large or has improper exponent format.
- error S5 Invalid destination type for string assignment (e.g., cannot assign text to a string array).
- error S6 Invalid sequence of parameters for string variable. Parameter is zero, negative or exceeds dimensioned size.
- error S7 String not yet allocated.
- error S8 String previously allocated.
- error S9 Maximum string length exceeded.

Scan Copyright ©
The Museum of HP Calculators
www.hpmuseum.org

Original content used with permission.

Thank you for supporting the Museum of HP
Calculators by purchasing this Scan!

Please to not make copies of this scan or
make it available on file sharing services.