



HEWLETT
PACKARD

HP-41 BATTERY CHARGER

PRODUCT NO. 92266A

USE INSTRUCTIONS

The N-size rechargeable Nickel-Cadmium batteries are used in your HP-41 calculator in exactly the same way as the N-size alkaline batteries originally provided. Before using them they must be charged. Plug your charger into a standard 110-120 VAC outlet and insert the batteries into the holder. The negative (flat) ends face the springs and the positive (button) ends touch the round contacts. The batteries alternate in direction. When the batteries are being charged properly the red light is on. If the light fails to light check: a) is charger plugged into a live outlet, b) are the batteries inserted correctly, c) are the springs expanded sufficiently so the batteries are in contact at both ends, and d) are the batteries and contacts clean?

A normal full charge requires 15 hours (can be 5PM-8AM overnight). A longer charge will not damage the batteries.

Ni-Cad batteries benefit from use and it is preferable to use them until the BAT annunciator turns on before giving them a full charge. Also, normally, they lose about 1% of their charge per day when not in use.

WARRANTY

Your battery charger carries a 1 year unconditional warranty. If service ever becomes necessary, return the charger and the form below with your original invoice.

Warranty Service—Mail to Computer Supplies Operation
Hewlett-Packard Co.
1320 Kifer Rd.
Sunnyvale, CA 94086
Attn: Quality Assurance

Date _____

Date first received _____

Your Name _____

Address _____

Description problem _____

Enclose purchase invoice.

Scan Copyright ©
The Museum of HP Calculators
www.hpmuseum.org

Original content used with permission.

Thank you for supporting the Museum of HP
Calculators by purchasing this Scan!

Please do not make copies of this scan or
make it available on file sharing services.