

Hewlett-Packard 9815A Calculator 98133A BCD Interface Operating and Service



HEWLETT  PACKARD


Warranty Statement

Hewlett-Packard products are warranted against defects in materials and workmanship. For Hewlett-Packard Calculator Products Divisions products sold in the U.S.A. and Canada, this warranty applies for ninety (90) days from date of delivery.* Hewlett-Packard will, at its option, repair or replace equipment which proves to be defective during the warranty period. This warranty includes labor, parts and surface travel costs, if any. Equipment returned to Hewlett-Packard for repair must be shipped freight prepaid. Repairs necessitated by misuse of the equipment, or by hardware, software, or interfacing not provided by Hewlett-Packard are not covered by this warranty.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

*For other countries, contact your local Sales and Service Office to determine warranty terms.

HP 98133A BCD Interface

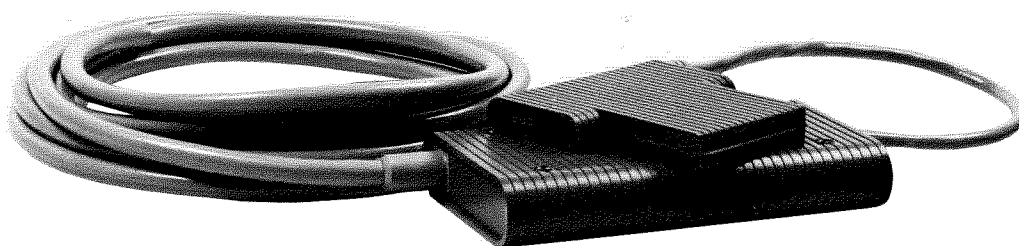

HEWLETT-PACKARD CALCULATOR PRODUCTS DIVISION

P.O. Box 301, Loveland, Colorado 80537, Tel. (303) 667-5000

(For World-wide Sales and Service Offices see rear of manual.)

Copyright by Hewlett-Packard Company 1976

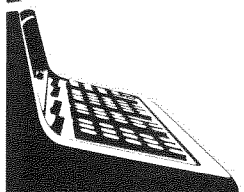


TABLE OF CONTENTS

Section 1: Installation

Introduction	1
Technical Specifications	1
Temperature Range	1
Power	1
Cable Length	1
Data Input Lines	1
Data Output Lines	1
Control Lines	1
Signal Levels	2
Plug-In Procedure	2
Calculator Option 002	2
Memory Usage	2
Select Code	2
Typical Peripheral Circuits	3
Receiving Circuits	3
Transmitting Circuits	4
Input Data Stability	4

Section 2: Operation

Introduction	5
Definition of Terms	5
Summary of the Interface Instructions	6
I/O Control	6
Data Control	6
Input Instructions	6
Output Instructions	7
Key Overlay	7
I/O Control Instruction	8
HANDSHAKE Instruction	8
Input Timing Diagrams	8
Output Timing Diagrams	10
Data Control Instructions	11
FORMAT Instruction	11
MASK Instruction	13
Input Instructions	14
START Instruction	14
STATUS Instruction	14
READ Instruction	14
Automatic Data Input	14
BURST Instruction	15

SAMPLE Instruction	15
DECODE Instruction	17
PACK Instruction	17
UNPACK Instruction	19
INPUT Instruction	20
BYTE Instruction	21
Output Instructions	21
OUTPUT Instruction	21
WRITE ALPHA Instruction	22
WRITE BYTE Instruction	22

Section 3: Service

Theory of Operation	23
Data Output Sequence	24
Data Input Sequence	24
Additional Theory	25
ROM Enable	25
ROM Power Up	25
Troubleshooting & Repair	25
Broken Trace Repair	25
Equipment Required	25
Test Setup	25
Power-Up Check	26
ROM Check	27
Interface Operation Test	27
Output Data Check	27
Data Input Check	28
Replaceable Parts	30
Component Locator	31
A1 ROM Board	31
A2 I/O Board	31
Schematic Notes	31
98133A Circuit Diagrams	31

Appendix

Binary Code Conversions	33
Binary-Coded Decimal	33
Binary-Decimal Conversions	33
Octal-Binary Conversions	33
ASCII	34
ASCII Character Codes	36
Sales and Service Offices	38
Subject Index	40
Error Messages	42

Figures

Interface Select Code	3
Typical Receiving Circuits	3
Typical Transmitting Circuits	4
Interface Flag Circuit	4
Key Overlay	7
Input Timing Diagrams	
Handshake Mode 0	8
Handshake Mode 1	9
Handshake Mode 2	9
Output Timing Diagrams	
Handshake Mode 0	10
Handshake Mode 1	10
Handshake Mode 2	11
Alpha Mode Keyboard	22
Interface Block Diagram	23
Troubleshooting the Interface	26
Component Locator	
A1 ROM Board	31
A2 I/O Board	31
XA1 Connector	31
XA2 Connector	31
A1 ROM Circuit Board Schematic	31
A2 I/O Circuit Board Schematic	31

Tables

FORMAT Parameter Range	
Data Mode 0	12
Data Mode 1	12
Table of Mask Code Parameters	13
FORMAT Parameters for Use With Pack Instructions	19
Replaceable Parts	29
ASCII Character Codes	36

1 Installation

Introduction

The HP 98133A BCD Interface allows you to connect an HP 9815A Calculator to a wide variety of peripheral devices. The interface provides the calculator with 40 bit-parallel input lines and 8 bit-parallel, character serial output lines. The interface transfers data in a "half-duplex" fashion; that is, it can input and output data, but not both at the same time. The interface provides buffer-storage for both input and output data and all lines are compatible with standard TTL levels.

This manual describes the installation, operation and servicing of the BCD Interface.

Technical Specifications

Temperature Range

5° C to 45° C Ambient.

Power

Provided by the calculator.

Cable Length

The interface has overall length of approximately 4.6 meters (15 feet) and is equipped with an unterminated cable. Cable wire colors, "pin outs", and material list are in Section 3.

Data Input Lines

Data is input by the interface via 40 input lines. These lines are divided into ten 4-bit digits. Each digit has four lines through which binary data is input.

Data Output Lines

Eight output lines with open-collector SN 7406 TTL inverters are available. Data is output in negative-true logic and remains valid on the output lines after an output operation until it is modified by another output.

Control Lines

Device Control (CTL1 and CTL2) – Initiates an I/O operation when driven to logical 1 and terminates data transfer when it goes to logical 0 (Handshake Mode 1 and 2 only). The CTL1 line is used for input operations and the CTL2 line is used for output operations. The logic level used by the CTL lines is set by the HANDSHAKE Instruction (see Section 2).

Device Ready (FLG1 and FLG2) – The peripheral device indicates "output data accepted" or "input data valid" by forcing the line to logical 1 (Handshake Mode 1 only). The FLG1 line is used for input operations and the FLG2 line is used for output operations. The logic level used by the FLG lines is set by the HANDSHAKE Instruction (see Section 2).

I/O Status (I/O) – Indicates that the calculator has started an input operation (high) or an output operation (low).

Signal Level

Data is input in the logic level specified by bit 4 of the data code. Data is output in negative-true logic only. The logic levels used by the CTL and FLG lines can be either positive-true or negative-true TTL logic levels (see the "HANDSHAKE Instruction" in Section 2). Positive-true logic means that a logical $1 \geq 2.4 \text{ V}$ = high and a logical $0 \leq 0.7 \text{ V}$ = low. Negative-true logic means that a logical $1 \leq 0.7 \text{ V}$ = low and a logical $0 \geq 2.4 \text{ V}$ = high.

Plug-In Procedure

Calculator Option 002

Before an interface can be installed the calculator must be equipped with option 002, two channel I/O. This option provides the calculator with the interface connectors and internal I/O compatibility.

The BCD Interface can be plugged into either I/O channel on the calculator back-panel. Before plugging in the interface, however, be sure that the calculator is switched off – if not, the calculator will not recognize I/O operations which are executed or programmed. After the interface is plugged in, switch the calculator back on.

If "SELECT CODE ERR" is printed when the calculator is switched on, both interfaces in the calculator are set to the same select code. If this occurs, switch the calculator off immediately and change the select code on one of the interfaces.

Memory Usage

When the BCD interface is plugged in, it uses 16 steps of program memory. This loss of 16 steps is indicated by the remaining number of steps shown in the display when the Program mode is set.


Select Code

Each interface connected to the calculator has a unique address, or select code, so that you can specify which interface should respond to each instruction. This select code is a one-digit number and must be included in each interface instruction.

Although the BCD interface is preset to select code 4 at the factory, you can change the setting to 5 by following this procedure.

1. Switch the calculator and the peripheral device off.
2. Disconnect the interface from the calculator. Remove the four screws on the top of the interface connector and remove the plastic cover.
3. Locate the select code plug (see the next figure), and move it to its alternate position.

4. Replace the plastic cover and secure it with the four screws. Then place a new select code label on the side of the connector to indicate the new code.
5. Reconnect the interface to the calculator; then turn the calculator and the peripheral on. Verify interface operation by executing an I/O instruction (or running a program) which specifies the new select code.

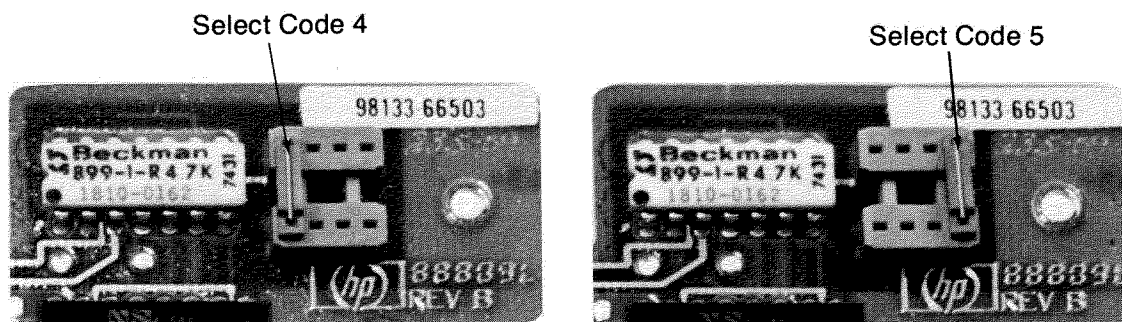


Interface Select Code

Typical Peripheral Circuits

Receiving Circuits


Each interface output line has a device with an open-collector output. The current-sinking capability of each device is 16 mA and the breakdown voltage is 15 V. Since each output device has an open collector, the peripheral receiving circuit must have a positive pull-up voltage (not to exceed 15 V) and must be restricted to sourcing (back to the transmitter) less than 16 mA. Typical receiving circuits are shown here.

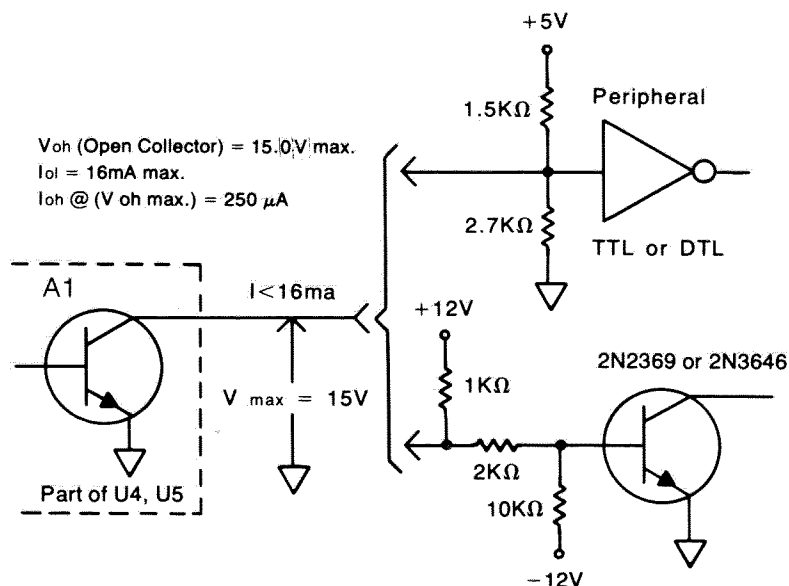

Typical Receiving Circuits

Transmitting Circuits


Each data-input line on the interface goes directly to a data shift register. The input voltage must not exceed 5 V.

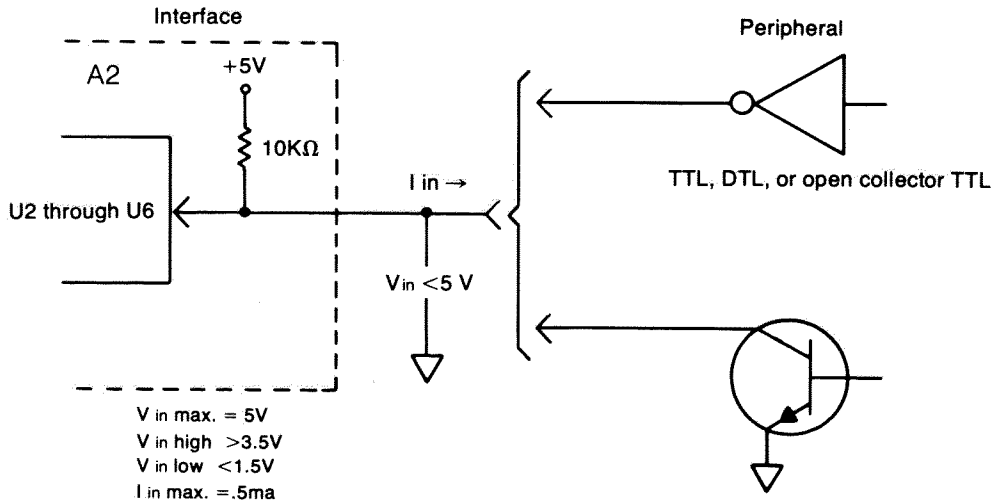

Typical Transmitting Circuits

If a peripheral device without isolated or buffered output lines is connected to the interface and is switched on while the calculator is switched off, the peripheral circuitry may become overloaded due to the low impedance load on the interface input lines when the calculator is switched off. This situation can be eliminated by either keeping the calculator switched on or disconnecting the peripheral device from the interface when the calculator is off.

The FLAG signals are received by a TTL Schmitt trigger gate (A2U7) and the low-pass filter network shown next. Either of the peripheral transmitting circuits just shown can be used as a flag transmitter.

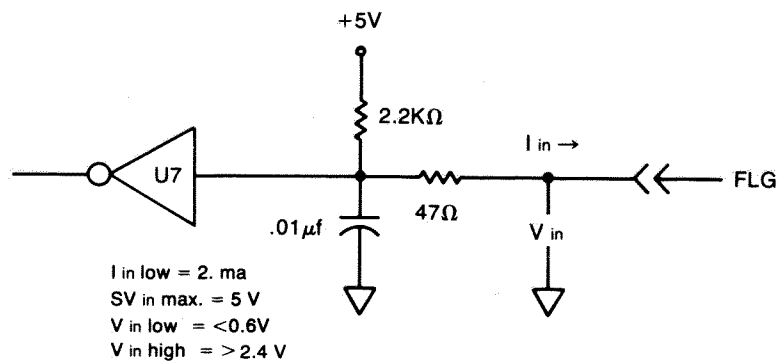

Interface Flag Circuit

Input Data Stability

Each data character placed on the interface input lines must be settled 2 μs before the "data ready" signal (FLG line) is transmitted. Then the data must be held stable until the handshake is completed.

2 Operation

Introduction

This section explains the calculator instructions used to control the interface. The preceding section should be read before continuing, to insure that the interface is properly connected.

NOTE

This section assumes that the reader is familiar with the operation of the calculator, as described in the HP 9815A Operating and Programming Manual.

The interface provides the calculator with sixteen key-sequence instructions. These instructions can be executed from either the keyboard or a program. The instructions can be used to specify the type of I/O control used for data transfer, the format of the incoming data samples and to check each sample for specified conditions. Data can be input and stored in single or multiple samples and recalled for use as either complete samples or individual digits. Data can be output in either binary or ASCII code.

A brief summary of the instructions begins on page 6 and a detailed description of each instruction comprises the remainder of the section.

Definition of Terms

The following terms are used in this section in describing the function of the interface instructions.

Digit	- One BCD coded character.
Digit A through Digit J	- Designates the 10 input digits; Digit A is the most significant.
Byte	- One 8-bit binary number or two BCD coded digits in either binary or decimal representations.
Sample	- A number (in fixed-point or exponential form) consisting of a specified number of characters or BCD digits.
Block	- The total data latched during one input operation and consists of 5 bytes (10 BCD digits).
Illegal Characters	- The BCD characters 10, 11, 12 and 13 are interpreted as illegal characters by the calculator. See the Appendix for an explanation of BCD code.
Data Code	- The data code uses the specified digit's four bits to specify the following for each incoming data sample: • Bit 1 - Sign of the exponent (logical 1 = +, logical 0 = -). • Bit 2 - Sign of the mantissa (logical 1 = +, logical 0 = -). • Bit 4 - Logic sense (voltage $\geq 2.4V$ = positive true, voltage $\leq .7V$ = negative true). • Bit 8 - Overload indicator (logical 1 = overload, logical 0 = not overload).

Summary of the Interface Instructions

I/O Control

HANDSHAKE (HNDSK) Specifies the I/O control mode (handshake) and sets the logic level of the CTL1, CTL2, FLG1 and FLG2 lines. See page 8.



Data Control

FORMAT (FRMT)

Specifies the form of the incoming data for either "single sample" (one input device) or "split sample" operations (data from two input devices). See page 11.



MASK

Enables an auto check for either overload or illegal characters or both. See page 13.



Input Instructions

START

Sets the interface to automatically input and hold a data sample when it becomes available from a peripheral device. See page 14.



STATUS (STAT)

Checks the peripheral device or the handshake status. See page 14.



READ

Inputs one data block into X and Y according to the currently set FORMAT instruction. See page 14.



Automatic Data Input

START, STATUS and READ instructions can be used to program an automatic data-input capability. See page 14.

BURST

Inputs and stores data blocks directly into data registers at a maximum rate of 2000 data blocks per second. See page 15.



PACK

Inputs and stores data with either two 8-digit samples or four 4-digit samples per register at a rate of 1000 blocks per second. See page 17.



INPUT

Inputs data in 8-bit binary bytes and stores 8 bytes per data register. See page 20.



SAMPLE (SAMPL)

Recalls a data block that was stored by a BURST instruction. The sample or samples are entered in decimal form in X and Y. See page 15.



DECODE (DCODE)

Converts a specified number of data blocks previously stored by BURST instructions into their decimal form (single sample only). See page 17.

UNPACK (UNPAK)

Recalls data, previously stored in a register by a PACK instruction, into the stack. See page 19.

BYTE

Recalls or stores individual binary bytes of data in a register. See page 21.

Output Instructions

OUTPUT (OUTPT)

Outputs 8-bit-binary bytes of data from data registers. See page 21.

WRITE BYTE (WBYTE)

Outputs the binary equivalent of the decimal value in X to a peripheral device. See page 22.


WRITE ALPHA (WRT α)

Sets the calculator to an Alpha mode which redefines each key to output a specified ASCII-coded character. See page 22.

All output instructions send data in negative-true logic.

Key Overlay

A key overlay (HP Part No. 7120-5354) showing the BCD Instructions is provided with the interface. The overlay (shown below) should be placed over the keys A through O.

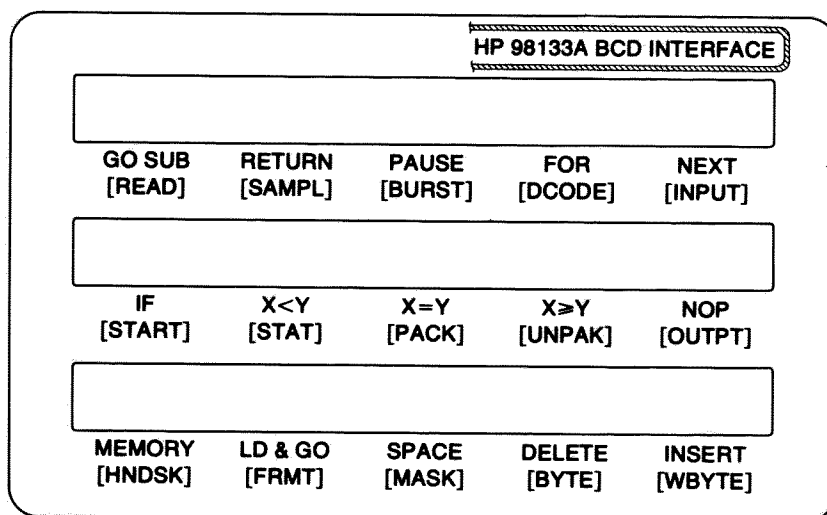

Key Overlay

I/O Control Instructions

HANDSHAKE Instruction



Stack

Handshake Mode $\pm(0, 1 \text{ or } 2) \rightarrow Y$
 $\pm(\text{any value}) \rightarrow X$

The I/O control mode and the logic levels used on the CTL and FLG lines are specified by the HANDSHAKE instruction (HNDSK).

The handshake-mode parameter specifies the handshake mode as follows:

- 0 specifies no handshake.
- 1 specifies a complete handshake.
- 2 specifies a pulsed handshake.

Timing diagrams and an explanation of each handshake mode begin below.


The logic level used by the CTL1 and CTL2 lines is set by the sign of the Handshake-mode parameter in Y. Negative-true logic is set with a negative parameter and positive-true logic is set with a positive parameter.

The logic level used by the FLG1 and FLG2 lines is set by the sign of the value in X.

The calculator, when first switched on, automatically sets a mode 1 (complete) handshake with positive-true CTL and FLG logic levels.


Input Timing Diagrams

Handshake Mode 0 (No Handshake)

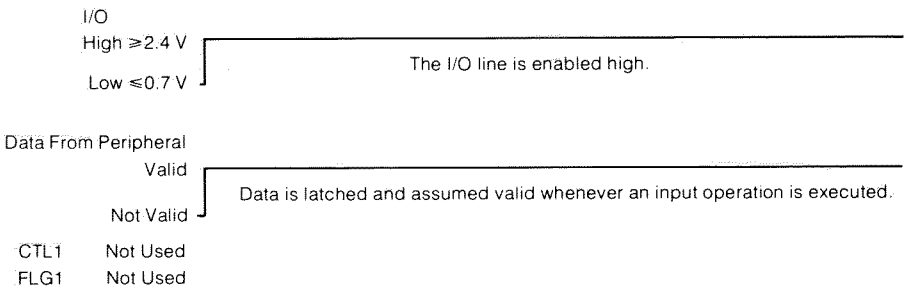


Handshake mode 0 does not use the CTL1 and FLG1 lines. The calculator sets the I/O line high ($\geq 2.4 \text{ V}$) when the mode is set. When an input instruction is executed, whatever data is on the input lines is latched.

Handshake Mode 1 (Complete Handshake)

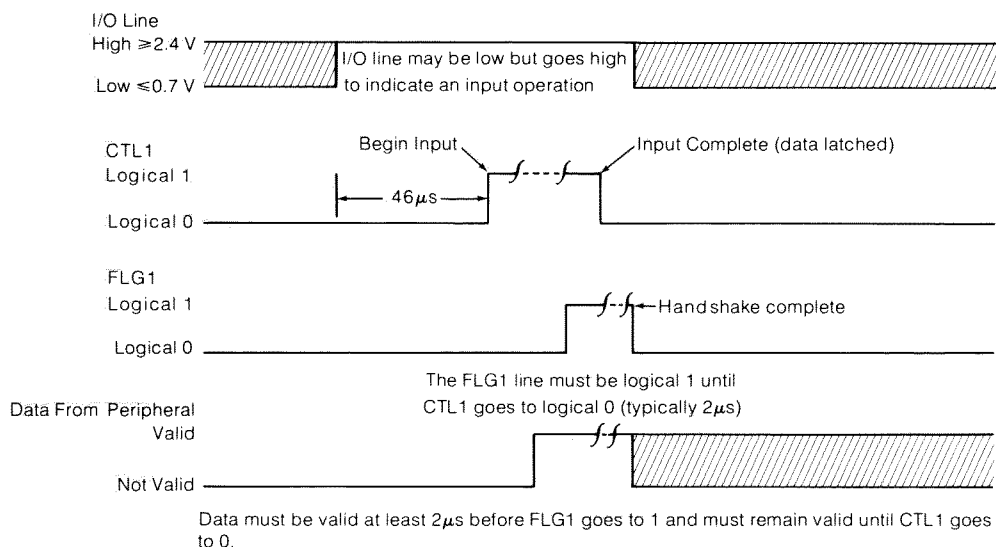

Handshake mode 1 is a complete peripheral-interface handshake. The calculator initiates the handshake by driving the I/O line high. After 46 μ s, the calculator drives the CTL1 line to a logical 1. The peripheral device should have the data sample valid at least 2 μ s before driving the FLG1 line to a logical 1. The interface then latches the data and drives the CTL1 line to a logical 0. The FLG2 pulse must be held at logical 1 until the CTL1 line goes to logical 0 (typically 2 μ s).


Handshake Mode 2 (Pulsed Handshake)

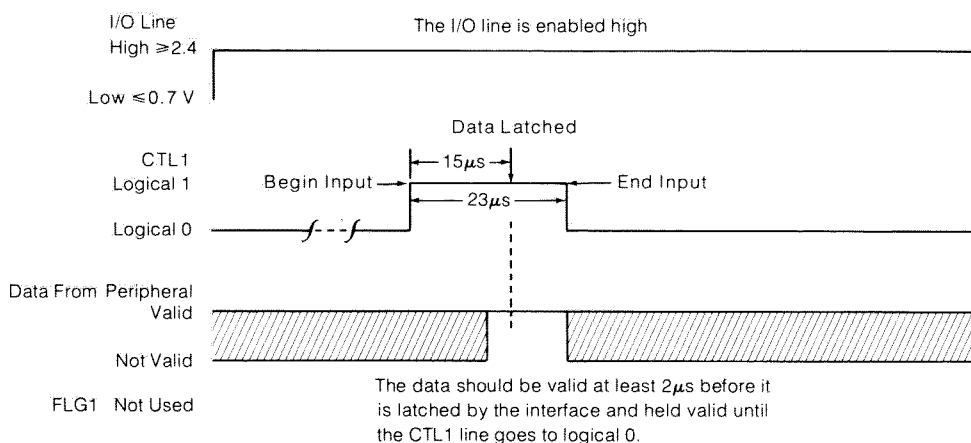

Handshake mode 2 is a pulsed interface handshake. The calculator enables the I/O line high (≥ 2.4 V) when the mode is set. When an input instruction is executed, the calculator drives the CTL1 line to logical 1 for a period of 23 μ s. The interface latches a data sample 15 μ s after the leading edge of the CTL1 pulse. The peripheral should have valid data on the input lines at least 2 μ s before the latch occurs, and the data should be valid until the calculator drives CTL1 line to logical 0. The FLG1 line is not used.


Output Timing Diagrams

Handshake Mode 0 (No Handshake)

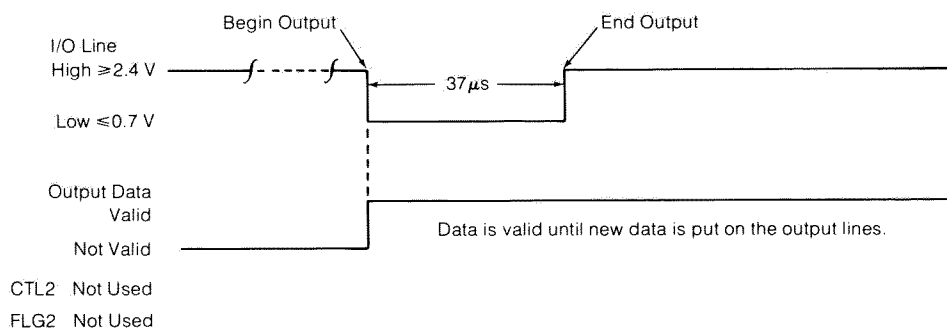


Handshake mode 0 does not use the CTL2 and FLG2 lines for output operations. The calculator drives the I/O line to a logical 0 and puts valid data on the output lines. After a period of $37\mu\text{s}$ the calculator drives the I/O line to logical 1, which ends the calculator output operation. The data remains valid on the output lines until new data replaces it.

Handshake Mode 1 (Complete Handshake)

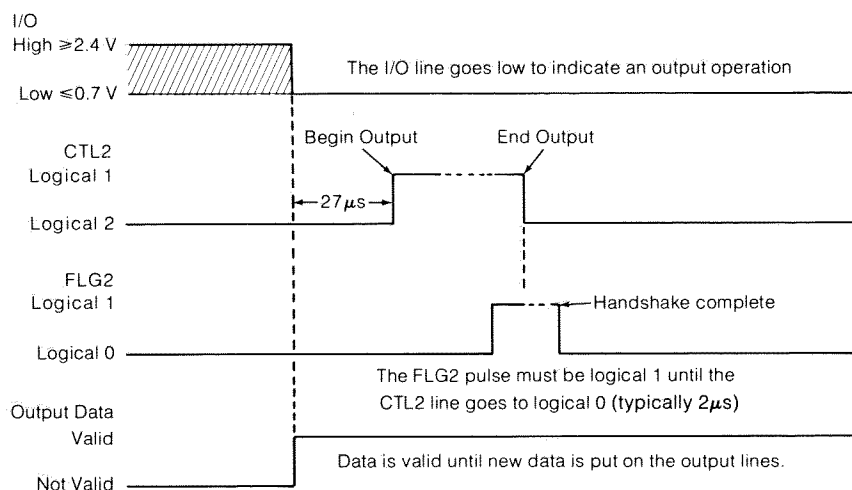

Handshake mode 1 is a complete interface-peripheral handshake. The calculator drives the I/O line low to initiate an output operation and puts data on the output lines. After $27\mu\text{s}$, the calculator drives the CTL2 line to logical 1. The CTL2 line remains at logical 1 until the peripheral device drives the FLG2 line to a logical 1. The calculator then drives the CTL2 line to logical 0, ending the calculator output operation. The FLG2 line can be driven to logical 0 any time after the CTL2 line goes to logical 0 (typical minimum FLG2 pulse is $2\mu\text{s}$). The data on the output lines remains valid until new data replaces it.

Handshake Mode 2 (Pulsed Handshake)

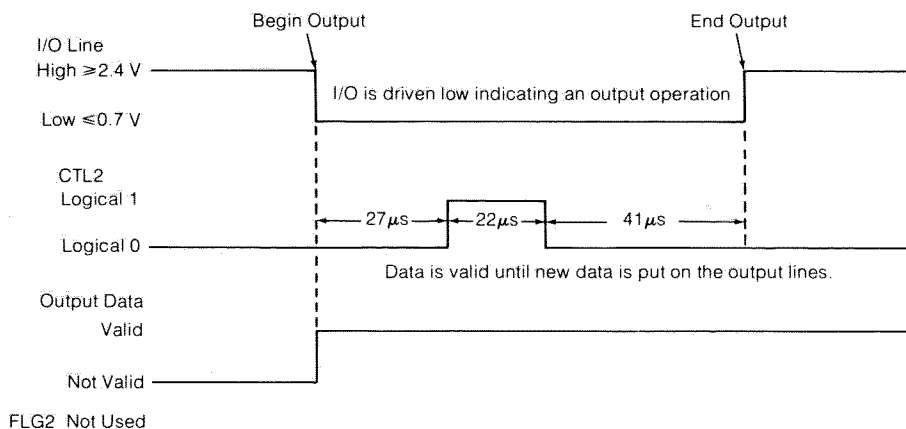

Handshake mode 2 is a pulsed interface handshake. The calculator initiates the output operation by driving the I/O line low and puts data on the data output lines. 27 μs after the leading edge of the I/O pulse, the calculator drives the CTL2 line to logical 1 for a period of 22 μs then drives it to logical 0. 41 μs after the trailing edge of the CTL2 pulse, the I/O line is driven high to end the output operation. The data remains valid on the output lines until new data replaces it. The FLG2 line is not used.

Data Control Instructions

FORMAT Instruction



Data Mode (0 or 1) $\rightarrow$ Z
 $\pm$ (Number of Digits for Sample 1) $\rightarrow$ Y
 $\pm$ (Number of Digits for Sample 2) $\rightarrow$ X

The FORMAT instruction (FRMT) specifies the form of the data for single-sample operations (one input peripheral) or split-sample operations (two input peripherals).

The Z parameter specifies the Data Mode Type. 0 specifies that one data code (digit A) will apply to the entire data block. 1 specifies that two data codes (digits A and B) will apply; digit A containing the data code for Sample 1 and digit B containing the data code for Sample 2.

The Y parameter specifies the number of digits in the mantissa of Sample 1.

The X parameter specifies the number of digits in the mantissa of Sample 2.

The sign of the X and Y parameters determines if an extra digit should be input and used as an exponent:

- + specifies a fixed-point (no exponent) form.
- - specifies an exponential form.

The calculator, when first switched on, automatically sets a FORMAT of Data Mode 0 with 9 digits in fixed-point form for sample 1 and 0 digits for sample 2.

The following table shows the maximum range for the X and Y parameters.

Format Parameter Range

Data Mode 0 One data code (digit A) is used for both samples; 9 data digits maximum; n equals the number of digits specified for sample 1.		
Case 1 - Both samples are in a fixed-point form.	Sample 1 Sample 2	$(n) \rightarrow Y$ $(9-n) \rightarrow X$
Case 2 - The first sample is an exponential form and the second sample is a fixed-point form.	Sample 1 Sample 2	$-(n) \rightarrow Y$ $(8-n) \rightarrow X$
Case 3 - The first sample is a fixed-point form and the second sample is an exponential form.	Sample 1 Sample 2	$(n) \rightarrow Y$ $-(8-n) \rightarrow X$
Case 4 - Both samples are in an exponential form.	Sample 1 Sample 2	$-(n) \rightarrow Y$ $-(7-n) \rightarrow X$

Data Mode 1 Two data codes (digit A is used for sample 1 and digit B is used for sample 2); 8 data digits maximum; n equals the number of digits specified for sample 1.		
Case 1 - Both samples are in a fixed-point form.	Sample 1 Sample 2	$n \rightarrow Y$ $(8-n) \rightarrow X$
Case 2 - The first sample is an exponential form and the second sample is a fixed-point form.	Sample 1 Sample 2	$-n \rightarrow Y$ $(7-n) \rightarrow X$
Case 3 - The first sample is a fixed-point form and the second sample is an exponential form.	Sample 1 Sample 2	$(n) \rightarrow Y$ $-(7-n) \rightarrow X$
Case 4 - Both samples are in an exponential form.	Sample 1 Sample 2	$-(n) \rightarrow Y$ $-(6-n) \rightarrow X$

To use either format mode to input a single sample, enter the number of digits for that sample into Y and a zero into X. This will cause the calculator to ignore the data on any remaining input lines after the first sample is input.

Example 1: The FORMAT instruction specifies the following parameters:

CALL
ALPHA

(select
code)

L

0 → Z

-4 → Y

3 → X

The digits (A through J) will be interpreted as follows:

Sample 1 - A (data code) B C D E Exponent F
 Sample 2 - A (data code) G H I

Since the total digits for both samples is less than 9, any excess digits (in this case only the digit J) are ignored.

Example 2: The FORMAT instruction specifies the following parameters:




 1 → Z
 3 → Y
 -4 → X

The digits (A through J) will be interpreted as follows:

Sample 1 - A (data code) C D E
 Sample 2 - B (data code) F G H I Exponent J

MASK Instruction





Mask Code → X

The MASK instruction enables an automatic check of incoming data for an overload condition and illegal characters.

The instruction also specifies the action to be taken (set flag 4 and abort reading) if the specified condition is found. The table below shows the conditions checked and the resulting actions that each mask code specifies.

When the calculator is first switched on, the automatic check is disabled.

Table of Mask Code Parameters

Mask Code	Check	Action
5	Overload condition	Set flag 4
6	Illegal characters	Set flag 4
7	Overload condition or illegal characters	Set flag 4
8	Overload condition	Abort reading
10	Illegal characters	Abort reading
11	Overload condition or illegal characters	Abort reading
13	Overload condition	Set flag 4 and abort reading
14	Illegal characters	Set flag 4 and abort reading
15	Overload condition or illegal characters	Set flag 4 and abort reading

Input Instructions

START Instruction



The START instruction sets the CTL1 line at logical 1 which initiates a data input operation. Once this instruction is executed the calculator can return either to a program or keyboard operation. Then as data becomes available, the interface automatically inputs the data (according to the current handshake mode) and holds it until it is input into the calculator with a READ. Executing any input or output instruction other than READ clears this data.

STATUS Instruction



The STATUS (STAT) instruction is used to check either the peripheral device status or the handshake status. The instruction returns one of the following interface status codes to the X register.

Status Codes	
Code	Condition
1	Handshake complete (CTL1 = logical 0)
-1	Handshake not complete (CTL1 = logical 1)
0	Peripheral FLG1 line = logical 0
-0	Peripheral FLG1 line = logical 1

If a START instruction is in effect, STAT checks the handshake status and returns either a 1 or -1 code to X. If a START instruction has not been executed, STAT checks the peripheral status and returns either a 0 or -0 code to X.

READ Instruction



The READ instruction inputs data from the output device into the stack. The samples are taken according to the currently set FORMAT instruction and are displayed according to the calculator number format (FIX, SCI or SCI 3). If two samples are specified by the FORMAT instruction, the first is entered into Y and the second into X.

A READ instruction must be used to input data being held by the interface as the result of a START instruction.

Automatic Data Input

The START, STAT and READ instructions can be used to program an automatic data-input cycle for use with slow-speed peripheral devices or in systems using slow sample cycles.

This program example uses START, STAT and READ to input and print data from a slow peripheral device while the calculator computes and displays values of A^2 .

The START instruction sets the interface to input and hold a data sample when it becomes available. The STAT instruction monitors the interface status. If the interface status is -1 (handshake not complete) the program branches to step 0013 where a value of A^2 is calculated and displayed. When the interface status is +1 (handshake complete) the data is input with a READ and then printed. The program resets the interface with a START instruction and continues displaying values of A^2 until the next data sample becomes available.

```

0000 CLRA+J
0001 START 4
0003 STAT 4
0005 IF -
0006 GOTO 0013
0008 READ 4
0010 PRINT
0011 GOTO 0011
0011 GOTO 0001
0013 RCL A
0014 ENTER↑
0015 *
0016 PAUSE
0017 1
0018 STO+ A
0019 GOTO 0003
0021 END

```

BURST Instruction



Number of Data Blocks → Y
Starting Data Register Number → X

The BURST instruction inputs data blocks, each consisting of 10 digits (including status digits), and stores them in data registers. The number of data blocks to be input is entered in Y and the starting data-register number is entered into X. Enough data registers to hold the specified number of data blocks must be assigned prior to executing a BURST instruction. If there are not enough data registers assigned, the calculator prints the error message "ILLEGAL ARGUMENT". If the starting address parameter specifies an unassigned data-register number, the calculator prints the error message "ILLEGAL ADDRESS".

The data blocks are stored in negative-true logic in the data registers, regardless of the logic sense specified by the data codes. The data blocks can only be recalled using SAMPLE and DECODE instructions. When the data is recalled, it is decoded in the logic sense specified by the data codes. The SAMPLE and DECODE instructions are explained next.

SAMPLE Instruction



Data Register Number → X

Data blocks that have been stored in registers by BURST instructions can be recalled to the stack with SAMPLE instructions (SAMPL). A SAMPLE instruction recalls the data from the register number specified in X and decodes it according to the current FORMAT instruction. The sample (or split-samples) are entered into the stack in the order shown below:

Single-Sample	Split-Sample
Sample → X	Sample 1 → Y
	Sample 2 → X

The following program uses FRMT, BURST and SAMPL instructions to input and recall these two data blocks:

	+Exponent +Mantissa +True Logic Not Overload	+Exponent -Mantissa +True Logic Not Overload	3	6	7	1	0	1	3	2
Block 1	0111	0101	0011	0110	0111	0001	0000	0001	0011	0010
	A	B	C	D	E	F	G	H	I	J

	+Exponent +Mantissa +True Logic Not Overload	-Exponent +Mantissa +True Logic Not Overload	4	3	7	1	5	2	3	2
Block 2	0110	0111	0100	0011	0111	0001	0101	0010	0011	0010
	A	B	C	D	E	F	G	H	I	J

The FORMAT instruction sets a Data Mode 1 with a split-sample of digits and an exponent (-3 parameter) for each sample (steps 0000-0005). The BURST instruction inputs the two data blocks and stores them in registers 1 and 2 (steps 0007-0010). A SAMPLE instruction recalls the data from reg 1 and it is printed (steps 0012-0020). Another SAMPLE instruction recalls the data from reg 2 and it is printed (steps 0021-0028.).

```
0000 1
0001 ENTER↑
0002 3
0003 +÷-
0004 ENTER↑
0005 FRMT 4
0007 2
0008 ENTER↑
0009 1
0010 BURST 4
0012 1
0013 SAMPL 4
0015 X≠Y
0016 PRINT
0017 ROLL↓
0018 PRINT
0019 SPACE
0020 SPACE
0021 2
0022 SAMPL 4
0024 X≠Y
0025 PRINT
0026 ROLL↓
0027 PRINT
0028 END
```

Here is the resulting printout.

```
3670.00
-1300.00

4370.00
5.23
```


DECODE Instruction




Number of Data Blocks → Y
Starting Data Register Number → X

The DECODE instruction (DCODE) decodes, or translates, data blocks which have been input and stored by BURST instructions. This instruction decodes the number of data blocks specified by the parameter in Y, beginning with the data-register number in X. After each data block is decoded into a valid sample, it is returned to the same register in which it was previously stored.

Data is assumed to be single-sample by DECODE instructions. The instruction decodes the sample according to the sample 1 parameters specified by the currently set FORMAT instruction. If a split sample is specified, the second sample is ignored. If a MASK instruction has been executed, the specified checks and actions are performed on each data sample. After a DECODE instruction has been executed, the decoded data can be recalled directly to the stack with .

PACK Instruction



Pack Type (0 or 1) → Z
Number of Data Blocks → Y
Starting Data Register Number → X

The PACK instruction allows you to input data blocks and store either two or four samples per data register.

The Z parameter specifies the pack type (0 or 1) to be used to store the data samples. Pack type 0 stores two 8-digit data samples (each includes data code, mantissa and exponent digits) per data register. Pack type 1 stores four 4-digit data samples (each consists of data code, mantissa, and exponent digits) per data register. The data is stored in positive-true logic of the logic level specified by the data code.

The Y parameter specifies the number of data blocks to be input and stored. If more data blocks are specified than can be stored in assigned registers, the calculator will print out the error message "ILLEGAL ARGUMENT". You should assign enough data registers to store the specified number of data blocks before executing a PACK instruction.

The X parameter specifies the starting register number in which data will be stored. If the register number specified is unassigned, the error message "ILLEGAL ADDRESS" is printed.

Typical assignment of data blocks for each pack type are shown in the diagrams on the next page.

Pack Type 0 –**Two Blocks (Single Sample) Per Register or One Block (Split Sample) Per Register**

Block 1	Data Code A	C
	D	E
	F	G
	H	I
Block 2	Data Code A	C
	D	E
	F	G
	H	I

Data Code A	C
D	E
Data Code B	F
G	H

Pack Type 1 –**Four Blocks (Single Sample) Per Register or Two Blocks (Split Sample) Per Register**

Block 1	Data Code A	C
	D	E
Block 2	Data Code A	C
	D	E
Block 3	Data Code A	C
	D	E
Block 4	Data Code A	C
	D	E

Block 1	Data Code A	C
	D	E
	Data Code B	F
Block 2	G	H
	Data Code A	C
	D	E
	Data Code B	F
	G	H

The data samples are input in the form specified by the current FORMAT instruction, **except that the data mode is assumed to be 1**. If more digits per sample are specified than can be accepted by the specified pack type, the excess digits are ignored. The FORMAT parameters should be set to match the number of digits acceptable by the pack type specified. This will prevent the loss of digits or exponents from the sample being input.

The following table gives the maximum number of digits per sample for FORMAT instruction parameters to be used with PACK instructions.

Format Parameters for Use With Pack Instructions

Pack Type	Samples Per Block	Blocks Stored Per Register	Range of FORMAT Instruction Parameters	
0	1 (Single-Sample)	2	(1 through 7) → Y Fixed 0 → X	
			-1 (through 6) → Y Exp. 0 → X	
0	2 (Split-Sample)	1	(n) → Y Fixed (6-n) → X Fixed	-(n) → Y Exp. (5-n) → Fixed
			(n) → Fixed -(5-n) → X Exp.	-(n) → Y Exp. -(4-n) → X Exp.
1	1 (Single-Sample)	4	(≤3) → Y Fixed 0 → X	
			-(≤2) → Y Exp. 0 → X	
1	2 (Split-Sample)	2	(≤3) → Y Fixed (≤3) → X Fixed	-(≤2) → Y Exp. 3 → X Fixed
			(≤3) → Y Fixed -(≤2) → X Exp.	-(≤2) → Y Exp. -(≤2) → X Exp.

UNPACK Instruction



Pack Type (0 or 1) → Y
Register No. → X

The UNPACK instruction (UNPAK) must be used to recall data from a register after it has been input and stored by a PACK instruction. The data is recalled according to the pack type specified and the current FORMAT instruction. The pack type parameter specified in Y should be the same type that was specified by the PACK instruction that stored the data. The FORMAT instruction should also be the same as the one set when the data was input.

If a MASK instruction has been executed, any checks and resulting actions are performed on the data before it is entered into the stack. Data is entered into the stack in the following order by UNPACK instructions:

Pack Type 0 Sample 1 → Y
 Sample 2 → X

Pack Type 1 Sample 1 → T
 Sample 2 → Z
 Sample 3 → Y
 Sample 4 → X

The following program uses FORMAT, PACK and UNPACK instructions to input and recall these data blocks:

+Exponent	-Exponent									
+Mantissa	+Mantissa									
+True Logic	+True Logic									
Not Overload	Not Overload	2	3	1	1	2	1	Not	Not	
		0011	0110	0010	0011	0001	0001	0010	0001	Used
		A	B	C	D	E	F	G	H	I
										J

+Exponent	+Exponent									
-Mantissa	-Mantissa									
+True Logic	+True Logic									
Not Overload	Not Overload	1	4	1	0	3	1	Not	Not	
		0101	0101	0001	0100	0001	0000	0101	0001	Used
		A	B	C	D	E	F	G	H	I
										J

The FORMAT instruction specifies that both data samples will be two digits and in exponential form (steps 0000-0005). The two data blocks are input and stored by the PACK instruction specifying Pack type 1 and register 0 (steps 0007-0012). The UNPAK instruction recalls the data samples to the stack and the values are then printed.

```
0000 1
0001 ENTER↑
0002 2
0003 +÷-
0004 ENTER↑
0005 FRMT 4
0007 1
0008 ENTER↑
0009 2
0010 ENTER↑
0011 0
0012 PACK 4
0014 1
0015 ENTER↑
0016 0
0017 UNPAK 4
0019 PRTSTK
0020 END
```

Here is the resulting printout.

```
230.00
1.20
-140.00
-30.00
```

INPUT Instruction



Number of Data Bytes → Y
Starting Register Number → X

The INPUT instruction inputs 8-bit binary bytes of data and stores 8 bytes per data register. The data is input on the digit A and B input lines with A-8 being the most significant bit and B-1 the least significant bit. The currently set handshake is used to input each byte.

The Y parameter specifies the number of data bytes to be input. The X parameter specifies the starting data register number in which the bytes will be stored.

Before executing an INPUT instruction, be sure that enough data registers have been allocated to hold the number of bytes (Y parameter) specified. If not, the calculator will print the error message "ILLEGAL ARGUMENT". If the starting register number (X parameter) specifies a data register that has not been allocated, the calculator will print the error message "ILLEGAL ADDRESS". In either case, the instruction will not be executed.

Data is stored in negative-true logic by INPUT instructions and can only be recalled with BYTE instructions or output to another device with OUTPUT instructions. These instructions are described next in this section.

BYTE Instruction



Decimal Equivalent of the Byte to be Stored $\rightarrow Y$
 $\pm(\text{Register} . \text{Byte}) \rightarrow X$

The BYTE instruction is used to either recall (+parameter) a specific 8-bit binary byte from a data register or to store (–parameter) an 8-bit binary byte into a specific location in a data register.

To recall a specific byte from a register, the parameter is of the form:

$+(\text{Register Number}) . (\text{Byte Position } 0 \text{ through } 7)$

For example to recall the third byte in register 1, the parameter entered in X would be 1.2. The decimal-equivalent value of the byte is returned to X when the instruction is executed.

To store an 8-bit binary byte in a register, the decimal equivalent of the byte is entered into Y. The register-number and byte-position parameter is entered in X in the form:

$-(\text{Register Number} . \text{Byte Position } 0 \text{ through } 7)$

For example, to store the binary byte 11010110 in register 2 at byte position 5, the parameters would be entered as follows:

$214 \rightarrow Y$
 $-2.4 \rightarrow X$

When the instruction is executed, the binary equivalent of 214_{10} is stored in register 2 at byte position 5. If there is a byte already in that position, the specified byte is stored in its place. Any other bytes in register 2 remain unchanged.

Output Instructions

OUTPUT Instruction




Number of Data Bytes $\rightarrow Y$
 Starting Register Number $\rightarrow X$

The OUTPUT instruction (OUTPT) outputs 8-bit binary data that has been stored in data registers. The instruction outputs the number of bytes specified in Y, starting with the register specified in X. The bytes are output in negative-true logic.

WRITE ALPHA Instruction



The WRT α instruction sets an Alpha mode, similar to the internal printer's Alpha mode. Now, pressing each key outputs (immediately) its corresponding ASCII character. To terminate the Alpha mode press **CALL ALPHA** again. The keyboard below shows each key's corresponding ASCII character.

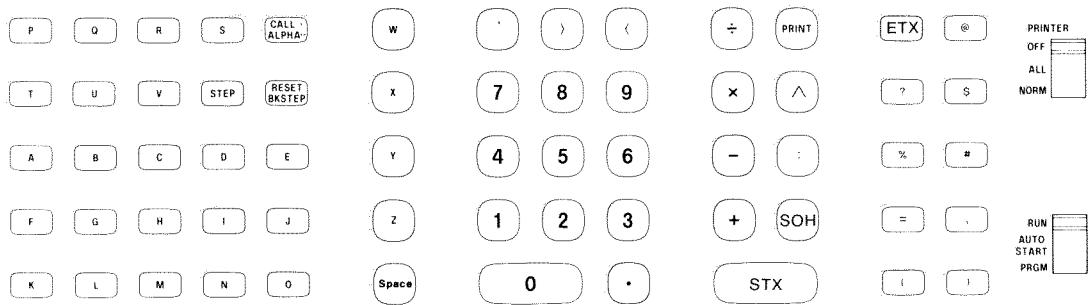

Alpha Keyboard

When the Alpha mode is set, the **PRINT** key outputs the value in the X register in ASCII code. The value is output, in the currently-set number format (FIX, SCI or SCI 3) with a leading space or minus sign followed by the number. All data output from the Alpha mode is in negative-true logic.

WRITE BYTE Instruction



Decimal Equivalent Value (0 to 255) $\rightarrow$ X

The WRITE BYTE instruction (WBYTE) outputs the 8-bit binary equivalent of the integer value in X. The number can range from 0 through 255. The error message "ILLEGAL ARGUMENT" indicates that a number is outside this range. A table of decimal and binary-equivalent numbers is in the Appendix.

Values are output with WBYTE instructions in negative-true logic and the data remains valid on the output lines until another instruction is executed.


3 Service

This section contains a brief description of interface operation and instructions to help you repair the interface. A complete circuit diagram and a list of replaceable parts are at the back of this section.

If you have difficulty repairing the interface or if you would rather have HP repair it, contact the nearest sales and service office for assistance; office locations are listed in the Appendix.

Theory of Operation

A block diagram of the interface is shown below. The A1 circuit board contains an instruction ROM, data buffers and interface status circuits. The A2 circuit board contains the input shift registers, the interface I/O control and the timing circuits.

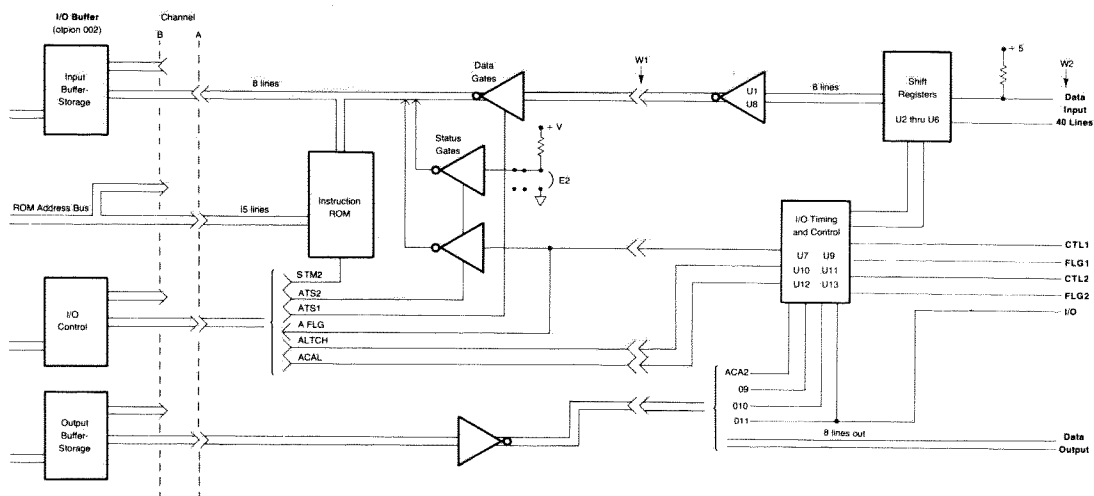

Interface Block Diagram

As shown in the block diagram, input data, interface status, and ROM information are transmitted to the calculator on the same Data In Lines. Control signals ATS1, ATS2, and STM2 determine which information is currently being transmitted.

The interface select code is determined by the position of programming plug E2. The interface responds to either select code 4 when the plug is in place, or select code 5 when the plug is removed (in its alternate position).

Data Output Sequence

This sequence occurs for each character output.

1. As an output instruction is executed from the calculator, the status gates are enabled.
2. The calculator puts data on the output lines and drives the I/O line low indicating an output operation.
3. The output operation is terminated according to the handshake mode specified (see "HANDSHAKE Instruction" in Section 2).
 - Mode 0: 37 μ s after the I/O line goes low, it is driven high again, terminating the output operation.
 - Mode 1: 27 μ s after the I/O line goes low, the ACAL line drives CTL2 to a logical 1 (the logic sense set by A2U10 and A2U12). The CTL2 line stays at 1 until the peripheral drives the FLG2 line to logical 1 indicating "done". The CTL2 line is then driven to 0 terminating the operation. The FLG2 line can go to 0 any time after CTL2 does (typical minimum FLG2 pulse is 2 μ s).
 - Mode 2: 27 μ s after the I/O line goes low, the ACAL line drives CTL2 to a 1 (as set by A2U10 and A2U12) and it is held at 1 for 22 μ s before it is driven to 0. 41 μ s after CTL2 goes to 0, the I/O line is driven high which terminates the operation.
4. In all handshake modes, the data remains valid on the output lines until new data replaces it.

Data Input Sequence

1. The status gates are enabled when an input instruction is executed.
2. The interface timing circuits (A2U9 and A2U10) are cleared and the shift registers (A2U2 through A2U6) are set to a parallel load condition.
3. The I/O line is driven high to indicate an input operation.
4. The input operation is completed according to the handshake mode specified (see "HANDSHAKE Instruction" in Section 2).
 - Mode 0: Data is assumed valid and then latched by pulsing the ACA2 line.
 - Mode 1: 46 μ s after the I/O line is drive high, the ACAL line drives CTL1 to a logical 1 (as set by A2U10 and A2U12) signalling "calculator ready" to the peripheral. The peripheral then drives the FLG1 line to logical 1 when valid data is available. The CTL1 line is driven to 0 (ACAL is cleared) when the data is latched by pulsing ACA2. The peripheral can drive the FLG1 line to 0 any time after CTL1 goes to 0 (typical minimum FLG1 pulse is 2 μ s).
 - Mode 2: The ACAL line drives CTL1 to a logical 1 (as set by A2U10 and A2U12). 15 μ s after the leading edge of the CTL1 pulse, the data is latched by pulsing ACA2. The data should be valid a minimum of 2 μ s before the latch occurs. 8 μ s after the data is latched, the CTL1 line is driven to 0 (ACAL is cleared). Total CTL1 pulse time is 23 μ s.
5. Each byte is input into the calculator and the next one shifted into position by 8 pulses from A2U9 and A2U10 (controlled by ACA2).
6. The data is transferred and stored in the calculator as specified by the input operation being executed.

Additional Theory

Refer to the fold-out circuit diagram while reading the following sections.

ROM Enable

A1U8 is a BCD-to-decimal decoder which, together with its associated circuitry, enables the ROM as each I/O instruction is executed. The signals on the ROM address bus are strobed continuously and have no steady state.

ROM Power-up

A1Q1 controls the -12 V supply for A1U7. A1Q1 is switched off except when the ROM is enabled by an I/O instruction. A1C1 enables A1Q1 to switch-on more rapidly.

Troubleshooting & Repair

Read the remainder of this section before attempting to service the interface. When you suspect that the interface is defective, first disconnect it from the calculator and verify calculator operation by running all applicable tests using the Utility and Test Cartridge. See Appendix 2 of the calculator operating manual for instructions.

Broken Trace Repair

If an internal trace on the circuit board is open or has high resistance, it should be bridged using insulated wire, on the back of the board.

CAUTION

TO HELP PREVENT DAMAGE TO THE CIRCUIT BOARD,
USE A LOW-TEMPERATURE SOLDERING IRON WHEN RE-
PLACING PARTS.

Equipment Required

- An HP 9815A Calculator, with option 002 (two channel I/O).
- Utility and Test Cartridge, HP P/N 09815-10004.
- An HP 427A voltmeter (or equivalent).
- A board extender card P/N 09815-66582.
- Test Connector HP P/N 1251-3334 (supplied with the Interface).
- An HP 10525A Logic Probe (or equivalent) with an appropriate power supply.

Test Setup

Switch the calculator off and disconnect all interfaces. Remove the BCD interface circuit boards from their cases. Connect the A1 circuit board to the calculator using the board extender (see the next photo). Connect the A2 board to A1 with the XA1 connecting cable. Be sure that both boards are connected with the component sides up, as shown in the photo.

Replace the XA2 connector on the A2 board with the Test Connector. The Test Connector (Rev. B) should be connected with the word "TOP" facing up. The photo below shows a Rev. A test connector which should be connected with the printing facing down.




Troubleshooting the Interface

Before switching the calculator on, first verify that the select code plug is in position for select code 4 (see page 3). Then check for broken wires on the connecting cable between the circuit boards; refer to the schematic on page 31.

Power-Up Check

1. Switch the calculator on.




2. If the display shown above does not appear, switch the calculator off, disconnect the interface boards and switch the calculator back on.
3. If the correct display appears when the interface is not connected, but does not appear when the interface is connected (try each I/O channel), disconnect the circuit boards and check for a shorted or low-resistance line on each calculator-to-interface pin. Use the GND pin on the Test Connector as a ground reference. All pins should measure greater than 1 M Ω to ground except these ($\pm$ 10% tolerance allowed):

A1 = 1K Ω
 A19, 20 = 200 Ω
 A21, 22, 23 = 0 Ω

B1 = 26K Ω
 B25 = 700 Ω

If an incorrect measurement is found, check the related components and circuit-board traces. Then reconnect the interface to the calculator and repeat step 1.

4. Set 



The number displayed on the right should be either 0376 (basic memory) or 1912 (option 001). If not, perform the ROM check procedure.

ROM Check

To check the ROM (A1U7), perform the ROM test included in the Utility and Test Cartridge supplied with your calculator. The test procedure is described in Appendix 2 of the Calculator Operating Manual under "ROM Test".

If the test fails, perform the following checks:

1. Using the logic probe to monitor A1U7 pin 15, press the sequence **CLEAR** **CALL ALPHA** **4** **M**. A negative pulse should be seen each time the sequence is executed. If not, replace A1U3 or A1U8.
2. Monitor A1U7 pin 13 and press the sequence **CLEAR** **CALL ALPHA** **4** **M**. A positive pulse should be seen each time the sequence is executed. If not, check A1Q1 and its related components.
3. If pulses are seen at A1U7 pins 13 and 15 in the checks above and the ROM test fails, replace A1U7.

Interface Operation Test

Insert the Utility and Test Cartridge into the calculator tape drive. To load the Interface Test Program from file -25:

Press: **CLEAR** **25** **+/-** **LOAD**

When the tape drive halts:

Press: **END** **RUN STOP**

If the interface passes the test, the calculator will print "Test Passed".

If the calculator prints "Test Failed" or does not print anything within 10 seconds, switch the calculator off, then on again. Check the connectors on the boards to be certain that they are properly connected and repeat the test procedure. If the test still fails, contact the nearest HP Sales and Service Office for assistance. See the back of the manual for the location of an office near you. If you wish to repair the interface yourself, follow the troubleshooting procedure given next in this section.

Output Data Check

This procedure verifies A1U4, A1U5, Part of A1U2, and the CTL2 and FLG2 circuits.

1. Connect the Test Connector to the A2 board as shown on page 26.


2. Set  Press

1 **ENTER +** **CALL ALPHA** **4** **K**

CLEAR **CALL ALPHA** **4** **0**

0.00

If the display remains “busy” as shown below, press  and go to step 5.



- 3. Now check each of the Data Out lines (O0-O7) on the A2 board. Each line should be high (≥ 2.4 V). If not, check its corresponding inverter, A1U4 or A1U5. Then repeat this step.
- 4. Press 255    and check each output line (O0-O7). Each line should be low (≤ 0.7).
- 5. Using the logic probe, check for a CTL pulse at each of the pins listed below, press this sequence for each check:

    (press , if needed, to cancel the busy display).

If a pulse is not seen, replace the indicated component(s).

Monitor:	Check:
XA1 pin A10 (ACAL)	(Calculator requires service)
XA2 pin A11 (CTL2)	A1R1, A2U11, A2U12, A2U13
XA2 pin A10 (FLG2)	Test Connector (see step 1)
A1U2 pin 7	A1U2

Data Input Check

This procedure verifies the following components:
A2U2 through A2U6, A2U9, A2U10, and the CTL1 and FLG1 circuits.

- 1. Connect the Test Connector to the A2 board as shown on page 26.


- 2. Set  Press

   ENTER   

   ENTER    

105      

- 3. The value returned to the display should be:



If any other value is returned, check the shift registers A2U2 through A2U6. If the display remains busy instead of returning a value, press  and go to step 4.

4. Using the logic probe, check for a CTL pulse at each of the pins listed below; press this sequence for each check:    (press  , if needed, to cancel the busy display). If a pulse is not seen, replace the indicated components.


Monitor:	Check:
XA1 pin A10 (ACAL)	(Calculator requires service)
XA1 pin A2 (CTL1)	A1R1, A2U11, A2U12, A2U13
XA2 pin A9 (FLG1)	Test Connector (see step 1)
A1U2 pin 7	A1U2

Replaceable Parts


REFERENCE DESIGNATOR	<i>-hp-</i> PART NO.	TQ	DESCRIPTION
A1 ROM Board	98133-69503	1	ROM PC Assembly
A1C1	0160-4387	1	Cap: 47 μ f, 200V
A1C2	0180-0228	1	Cap: 22 μ f, 15 V
A1C3, C4	0180-1704	2	Cap: 47 μ f, 6V
A1E1	1200-0471	1	Socket: 8-pin DIP
A1E2	1258-0124	1	Plug, select code
A1Q1	1853-0058	1	Transistor: Si., PNP
A1R1	1810-0162	1	R-Network: 14 pin DIP
A1R2, R4	0683-1025	2	Res: 1k, 1/4W, 5%
A1R3	0683-6825	1	Res: 6.8k, 1/4W, 5%
A1U1, U2	1820-1255	2	IC: Hex Inverter, DM8098
A1U3	1820-1144	1	IC: Quad, 2-input NOR Gate, SN74LS02N
A1U4, U5	1820-0471	2	IC: Hex Inverter/Driver, SN7406N
A1U7	1818-2639	1	IC: ROM
A1U8	1820-1418	1	IC: Decoder, SN74LS42J
W1	98133-61601	1	Cable Ass'y w/connectors
XA1	1251-4327	2	Connector, 30 pin
	5040-7781	1	A1 Cover, Top
	4040-7782	1	A1 Cover, Bottom
A2 I/O Board	98133-66501	1	I/O PC Assembly
A2C1, C3, C7, C8	0160-3847	4	Cap: .01 μ f, 25V
A2C2, C9	0160-3878	2	Cap: .001 μ f, 50V
A2C4	0180-0106	1	Cap: 60 μ f, 6V
A2C5, C6	0160-3879	2	Cap: .01 μ f, 100V
A2CR1	9101-0535	1	Diode, Hot Carrier
A2R1, R2, R8, R9,			
R11, R13	0683-1035	6	Res: 10K Ω , 1/4W, 5%
A2R3, R4	0683-4705	2	Res: 47 Ω , 1/4W, 5%
A2R5, R10, R12	0683-1515	3	Res: 150 Ω , 1/4W, 5%
A2R6, R7	0683-2225	2	Res: 2.2K Ω , 1/4W, 5%
A2RP1-RP5	1810-0055	5	R-Network
A2U1, U8	1820-1146	2	IC: CD4050AE
A2U2	1820-0977	1	IC: CD4034AD
A2U3, U4, U5, U6	1820-0970	4	IC: CD4014AE
A2U7	1820-1416	1	IC: SN74LS14N
A2U9	1820-1418	1	IC: SN74LS42N
A2U10	1820-1112	1	IC: SN746LS4N
A2U11	1820-1197	1	IC: SN74LS00N
A2U12	1820-1211	1	IC: SN74LS86N
A2U13	1820-0514	1	IC: SN7426N
W2	98133-61602	1	Cable Ass'y w/connectors
XA2	1251-3339	1	Connector, 60 pin
	5040-8035	1	A2 Cover, Top
	5040-8034	1	A2 Cover, Bottom
	5040-8025	2	A2 Cover, Ends
	1251-3339	1	Test Connector, 60 pin
	98133-90000	1	Operating and Service Manual
	98133-90010	1	Reference Card
	7120-5054	1	Key Overlay

Component Locator


A1 ROM Board

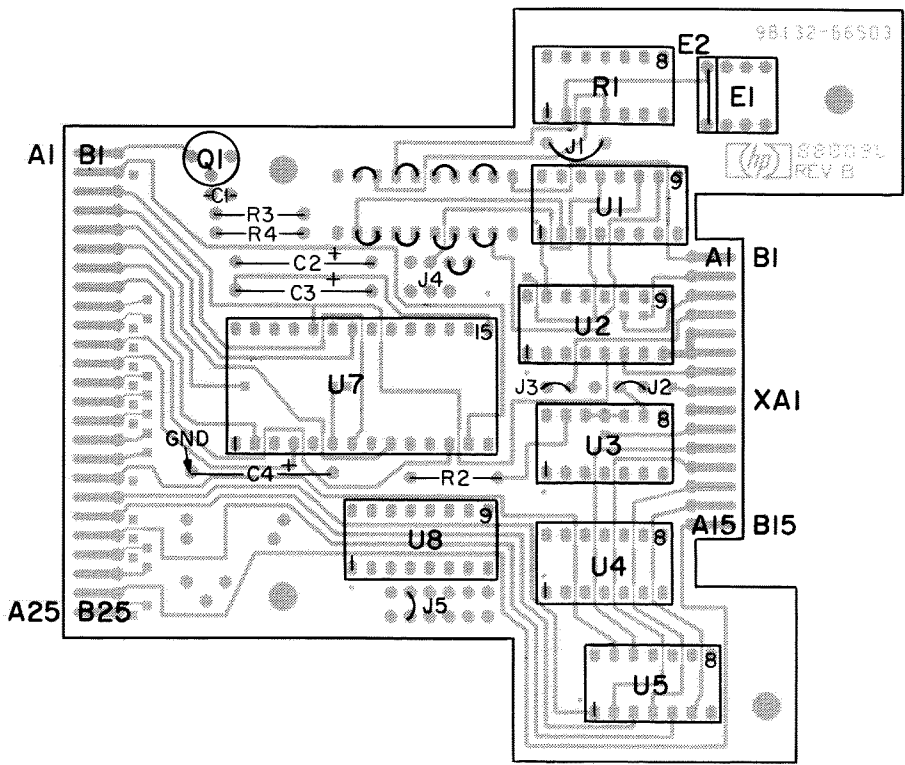


A2 I/O Board

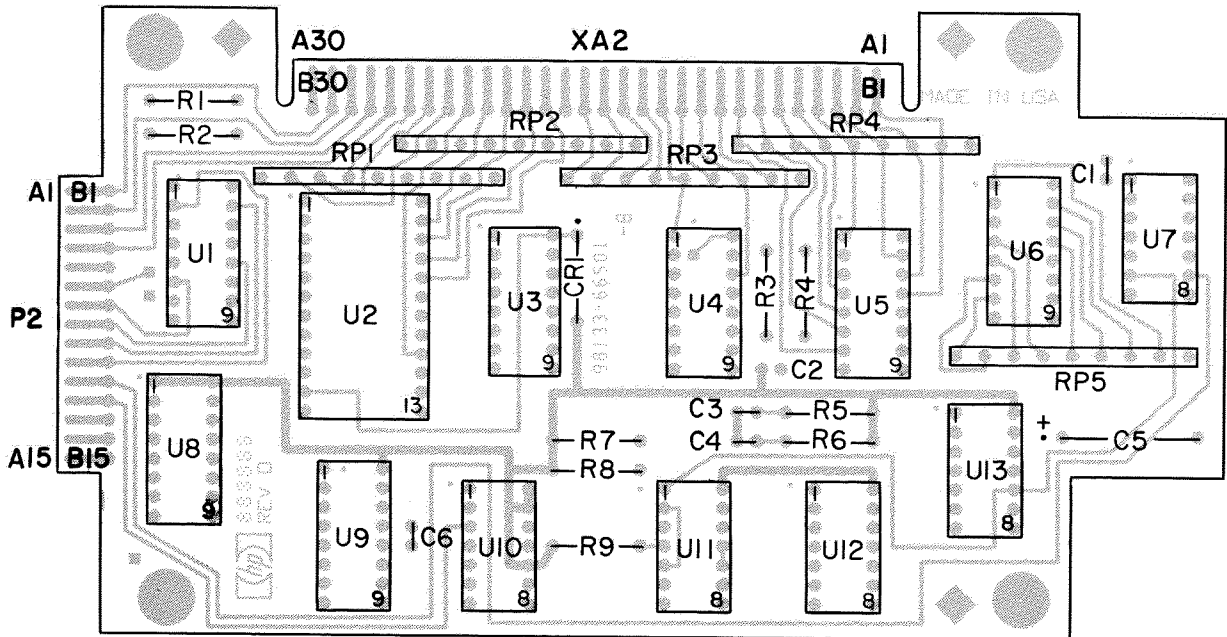


**XA1 Connector
to A1 Board**

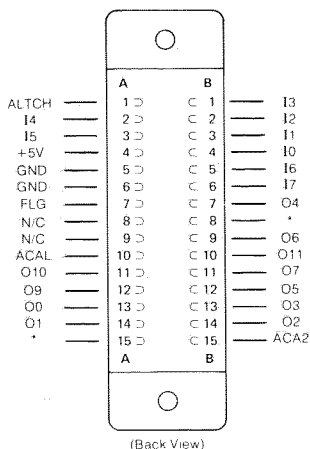

**P2 Connector
to A2 Board**

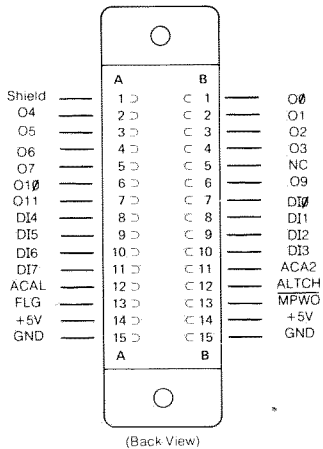

X A2 Wire Connections

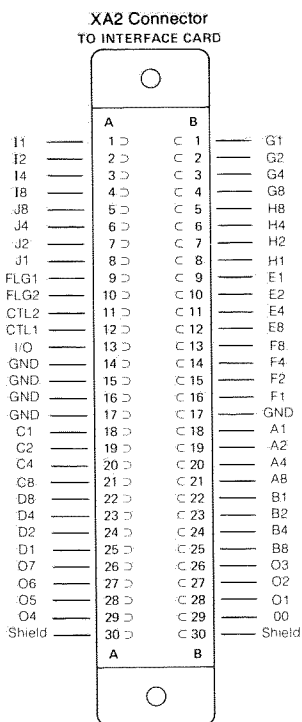


Signal	Wire Color	Signal	Wire Color
A8	Wht/Yel/Blu	H8	Wht/Brn/Blu
A4	Wht/Yel/Grn	H4	Wht/Brn/Vio
A2	Wht/Orn/Gry	H2	Wht/Brn/Gry
A1	Wht/Orn/Vio	H1	Wht/Red/Orn
B8	Wht/Grn/Vio	I8	Grn
B4	Wht/Grn/Blu	I4	Yel
B2	Wht/Yel/Gry	I2	Orn
B1	Wht/Yel/Vio	I1	Red
C8	Wht/Gry	J8	Blu
C4	Wht/Vio	J4	Vio
C2	Wht/Blu	J2	Gry
C1	Wht/Grn	J1	Wht
D8	Wht/Blk/Brn	O7	Wht/Blk/Grn
D4	Wht/Blk/Red	O6	Wht/Blk/Blu
D2	Wht/Blk/Orn	O5	Wht/Blk/Vio
D1	Wht/Blk/Yel	O4	Wht/Blk/Gry
E8	Wht/Red/Vio	O3	Wht/Grn/Gry
E4	Wht/Red/Blu	O2	Wht/Blu/Vio
E2	Wht/Red/Grn	O1	Wht/Blu/Gry
E1	Wht/Red/Yel	00	Wht/Vio/Gry
F8	Wht/Red/Gry	FLG1	Wht/Blk
F4	Wht/Orn/Yel	FLG2	Wht/Brn
F2	Wht/Orn/Grn	CTL2	Wht/Red
F1	Wht/Orn/Blu	CTL1	Wht/Orn
G8	Wht/Brn/Grn	I/O	Wht/Yel
G4	Wht/Brn/Yel	GND	Blk
G2	Wht/Brn/Orn	GND	Brn
G1	Wht/Brn/Red	Shield	Shield

Schematic Notes:


- Unless indicated otherwise, resistor values are shown in ohms and capacitor values are shown in microfarads.
- See page 2 before changing the position of E2, the select code plug.
- Wire color code is the same as resistor color code: The first number indicates the base color, second number indicates the wider strip, and third color indicates the narrower strip (e.g., 924 = white, red, yellow).

0 = Black	5 = Green
1 = Brown	6 = Blue
2 = Red	7 = VBiolet
3 = Orange	8 = Grey
4 = Yellow	9 = White

A1 ROM Board Schematic

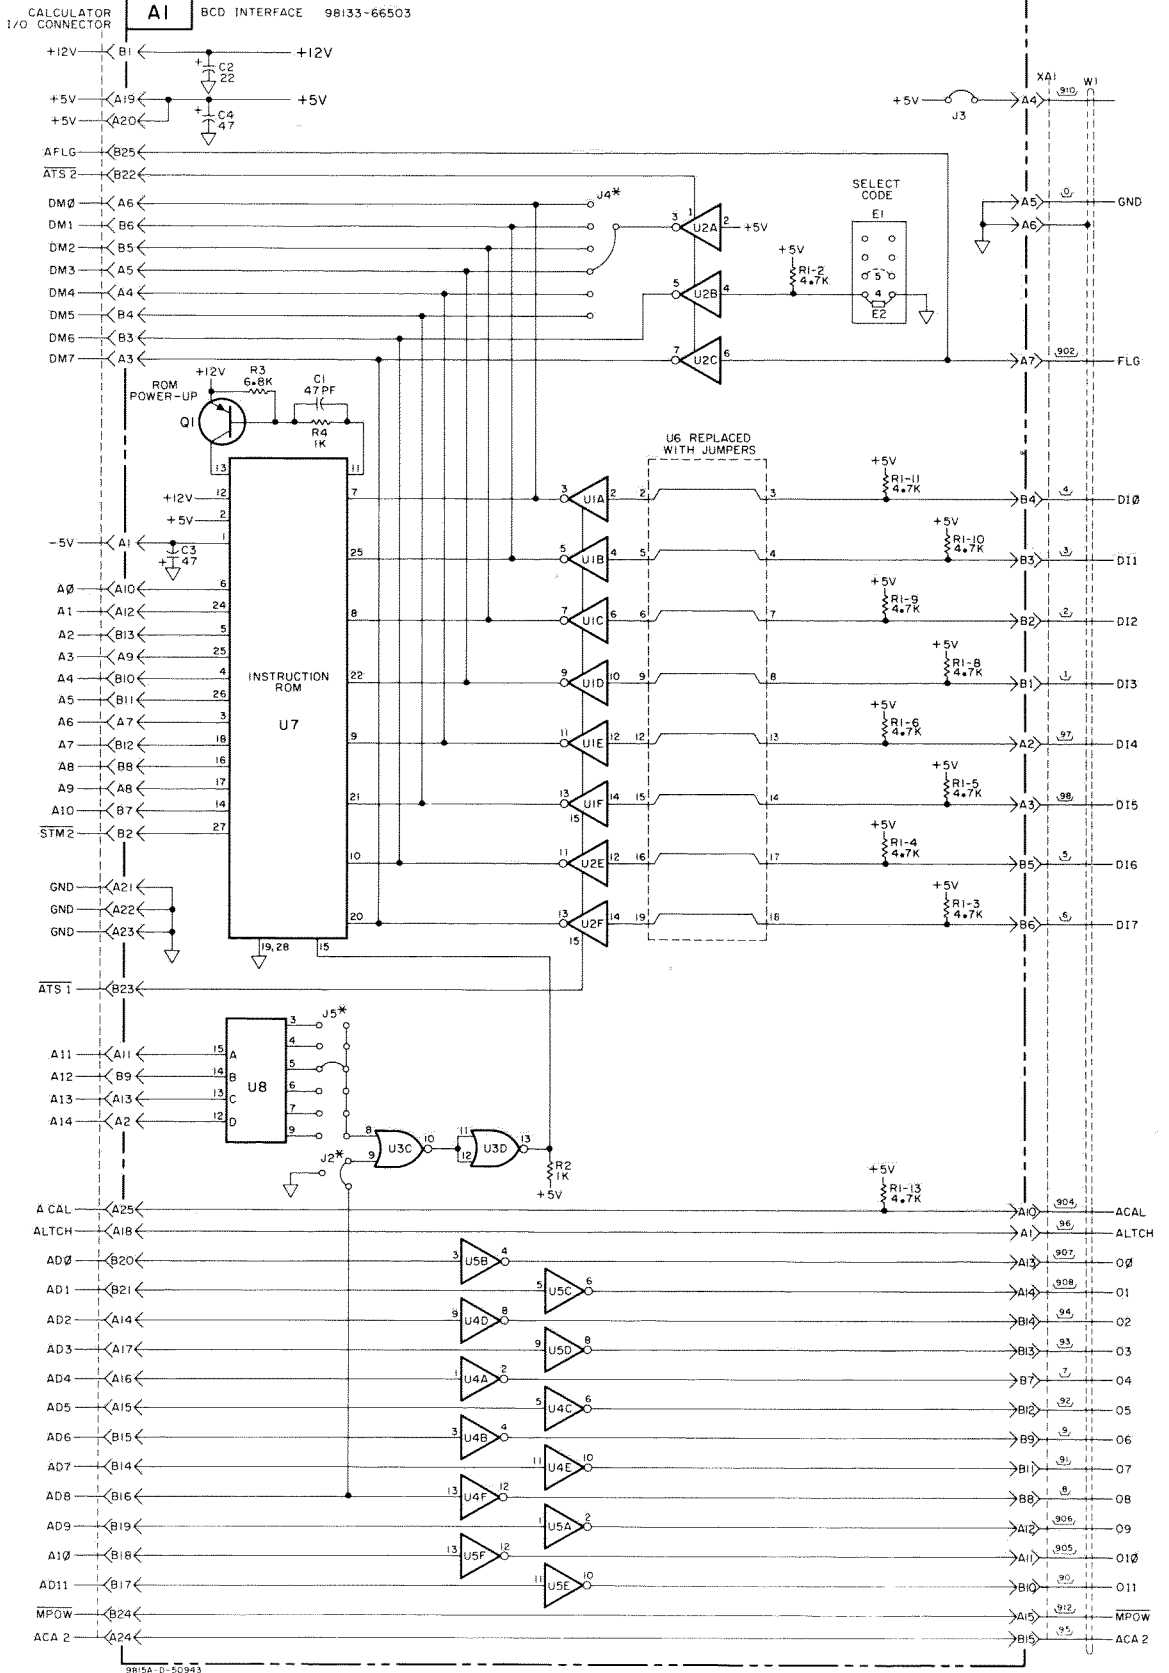

A2 I/O Circuit Board Schematic

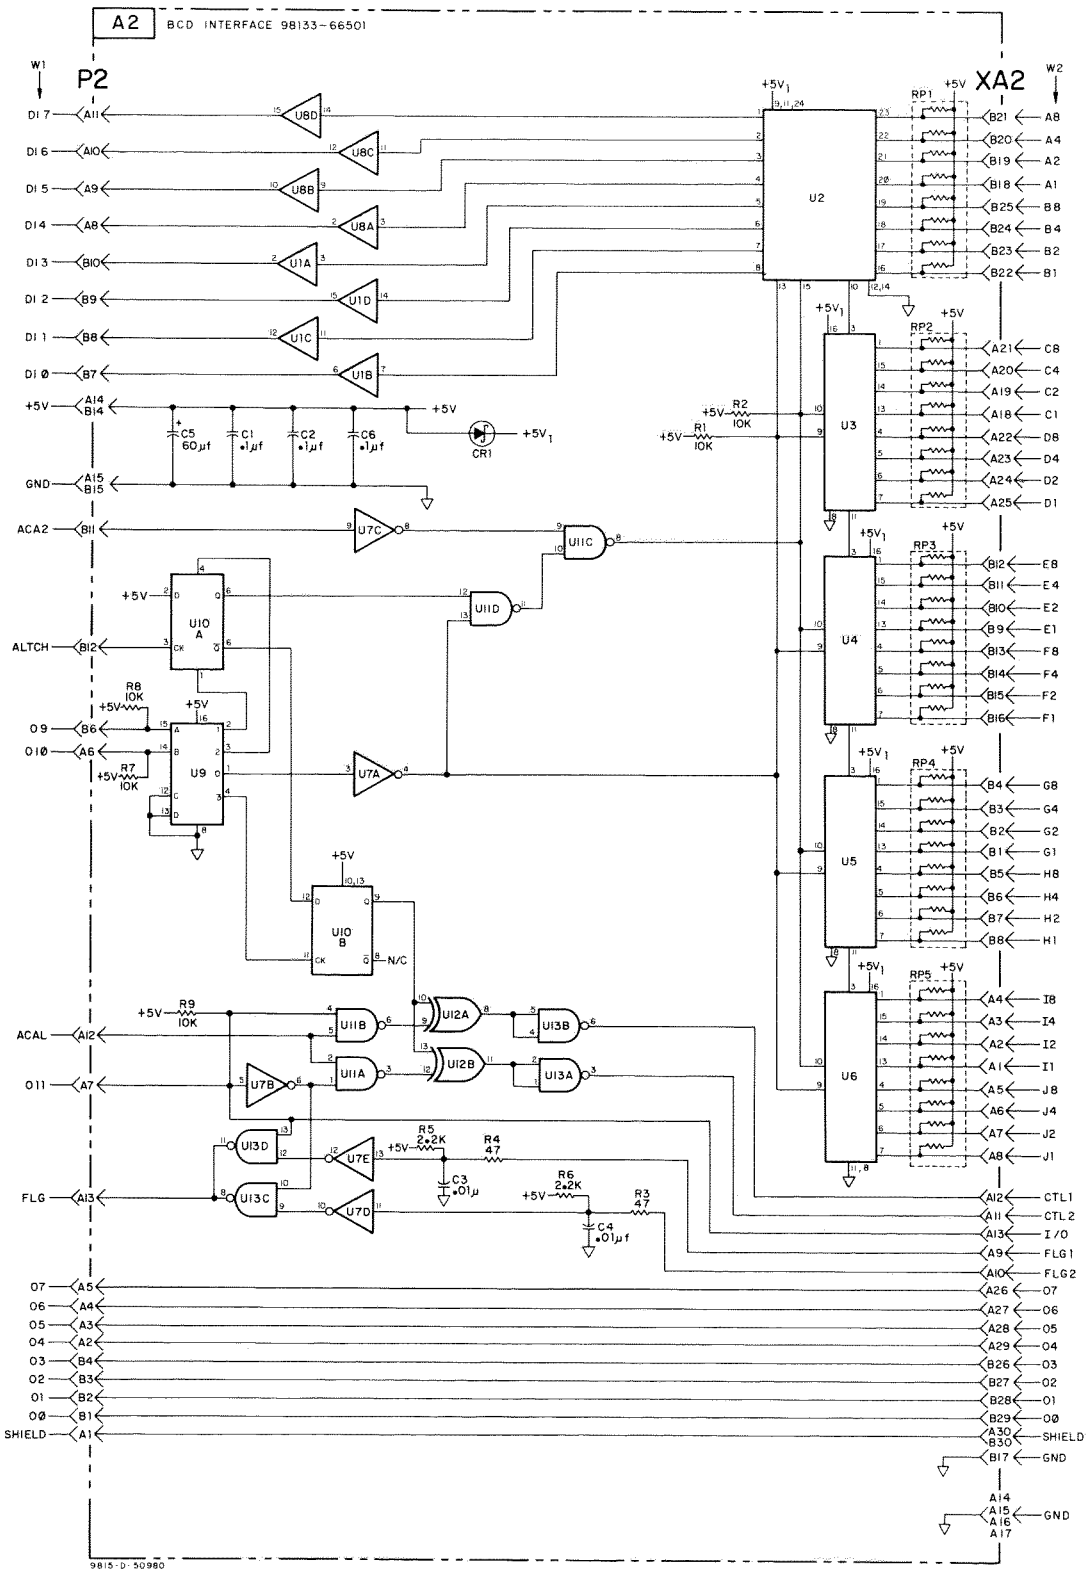

Appendix

Binary Coding and Conversions

Binary is a base 2 number system using only 1's and 0's. By giving the 1's and 0's positional value, any decimal number can be represented. For example, this diagram shows how decimal 41 = binary 101001:

Decimal		Binary					
10^1	10^0	2^5	2^4	2^3	2^2	2^1	2^0
↓	↓	↓	↓	↓	↓	↓	↓
10	1	32	16	8	4	2	1
4	1	1	0	1	0	0	1

Binary-Coded Decimal

The primary code for representing numeric values with this interface is Binary Coded Decimal (BCD). BCD is a four-bit binary code; each four bits represents a decimal digit from 0 through 9.

For example, to convert the BCD code 010000110110, to decimal:

BCD representation	0100	0011	0110
	↓	↓	↓
Decimal Value	4	3	6

The decimal equivalent number is found by breaking up the 12-bit binary number into groups of 4 bits (starting from the right) and converting each group into a decimal number. Valid BCD characters include 0 through 9 and the decimal point (14 or 15).

Binary-Decimal Conversions

To convert from binary to decimal, the positional values for the 1's are added up. From the above example this would be:

$$2^5 + 2^3 + 2^0 = 32 + 8 + 1 = 41$$

To convert from decimal to binary, the decimal number is repeatedly divided by 2. The remainder is the binary equivalent. For example:

	Remainder (read up)
$2 \overline{)41}$	→ 1
$2 \overline{)20}$	→ 0
$2 \overline{)10}$	→ 0
$2 \overline{)5}$	→ 1
$2 \overline{)2}$	→ 0
$2 \overline{)1}$	→ 1

Octal-Binary Conversions

Octal is a base 8 number system. Octal numbers are often used since conversion from binary to octal and vice-versa is easy by using electronic circuits.

To convert from binary to octal, the octal number is broken up into groups of three bits (starting from the right). Each group of 3 bits represent an octal number.

For example, to convert binary 10110100011001 to octal:

Binary Number	10	110	100	011	001
	↓	↓	↓	↓	↓
Octal Number	2	6	4	3	1

Notice that only values from 0 through 7 are used in octal.

To convert from octal to binary, the process is reversed:

Octal Number	1	4	0	7	2	6
	↓	↓	↓	↓	↓	↓
Binary Number	001	100	000	111	010	110

ASCII

Binary is often used as a code to represent not only numbers, but also alphanumeric characters such as "A" or "," or "?" or "x" or "2". One of the most common binary codes used is ASCII¹. ASCII is an eight-bit code, containing seven data bits and one parity bit. The BCD Interface uses 7 bit ASCII without a parity bit. For example:

Character	ASCII Binary Code	ASCII Decimal Code
A	01000001	65
B	01000010	66
?	00111111	63

A complete list of ASCII characters and their equivalent binary and decimal representations is on pages 36-37.

¹American Standard Code for Information Interchange.

NOTES

ASCII Character Codes

ASCII Char.	EQUIVALENT FORMS			Alpha Mode
	Binary	Octal	Dec	
NULL	00000000	000	0	
SOH	00000001	001	1	
STX	00000010	002	2	
ETX	00000011	003	3	
EOT	00000100	004	4	
ENQ	00000101	005	5	
ACK	00000110	006	6	
BELL	00000111	007	7	
BS	00001000	010	8	
HTAB	00001001	011	9	
LF	00001010	012	10	
VTAB	00001011	013	11	
FF	00001100	014	12	
CR	00001101	015	13	
SO	00001110	016	14	—
SI	00001111	017	15	—
DLE	00010000	020	16	
DC ₁	00010001	021	17	
DC ₂	00010010	022	18	
DC ₃	00010011	023	19	
DC ₄	00010100	024	20	
NAK	00010101	025	21	
SYNC	00010110	026	22	
ETB	00010111	027	23	
CAN	00011000	030	24	—
EM	00011001	031	25	—
SUB	00011010	032	26	—
ESC	00011011	033	27	—
FS	00011100	034	28	—
GS	00011101	035	29	—
RS	00011110	036	30	—
US	00011111	037	31	—

ASCII Char.	EQUIVALENT FORMS			Alpha Mode
	Binary	Octal	Dec	
space	00100000	040	32	
!	00100001	041	33	
"	00100010	042	34	
#	00100011	043	35	
\$	00100100	044	36	
%	00100101	045	37	
&	00100110	046	38	
'	00100111	047	39	
(	00101000	050	40	
)	00101001	051	41	
*	00101010	052	42	
+	00101011	053	43	
,	00101100	054	44	
-	00101101	055	45	
.	00101110	056	46	
/	00101111	057	47	
0	00110000	060	48	
1	00110001	061	49	
2	00110010	062	50	
3	00110011	063	51	
4	00110100	064	52	
5	00110101	065	53	
6	00110110	066	54	
7	00110111	067	55	
8	00111000	070	56	
9	00111001	071	57	
:	00111010	072	58	
;	00111011	073	59	
<	00111100	074	60	
=	00111101	075	61	
>	00111110	076	62	
?	00111111	077	63	

ASCII Char.	EQUIVALENT FORMS			Alpha Mode
	Binary	Octal	Dec	
@	01000000	100	64	ⓐ
A	01000001	101	65	ⓐ
B	01000010	102	66	ⓑ
C	01000011	103	67	ⓒ
D	01000100	104	68	ⓓ
E	01000101	105	69	ⓔ
F	01000110	106	70	ⓕ
G	01000111	107	71	ⓖ
H	01001000	110	72	ⓓ
I	01001001	111	73	ⓔ
J	01001010	112	74	ⓖ
K	01001011	113	75	ⓗ
L	01001100	114	76	ⓓ
M	01001101	115	77	ⓓ
N	01001110	116	78	ⓓ
O	01001111	117	79	ⓓ
P	01010000	120	80	ⓓ
Q	01010001	121	81	ⓓ
R	01010010	122	82	ⓓ
S	01010011	123	83	ⓓ
T	01010100	124	84	ⓓ
U	01010101	125	85	ⓓ
V	01010110	126	86	ⓓ
W	01010111	127	87	ⓓ
X	01011000	130	88	ⓓ
Y	01011001	131	89	ⓓ
Z	01011010	132	90	ⓓ
[	01011011	133	91	ⓓ
\	01011100	134	92	ⓓ
]	01011101	135	93	ⓓ
^	01011110	136	94	ⓓ
_	01011111	137	95	ⓓ

ASCII Char.	EQUIVALENT FORMS			Alpha Mode
	Binary	Octal	Dec	
`	01100000	140	96	ⓓ
a	01100001	141	97	ⓓ
b	01100010	142	98	ⓓ
c	01100011	143	99	ⓓ
d	01100100	144	100	ⓓ
e	01100101	145	101	ⓓ
f	01100110	146	102	ⓓ
g	01100111	147	103	ⓓ
h	01101000	150	104	ⓓ
i	01101001	151	105	ⓓ
j	01101010	152	106	ⓓ
k	01101011	153	107	ⓓ
l	01101100	154	108	ⓓ
m	01101101	155	109	ⓓ
n	01101110	156	110	ⓓ
o	01101111	157	111	ⓓ
p	01110000	160	112	ⓓ
q	01110001	161	113	ⓓ
r	01110010	162	114	ⓓ
s	01110011	163	115	ⓓ
t	01110100	164	116	ⓓ
u	01110101	165	117	ⓓ
v	01110110	166	118	ⓓ
w	01110111	167	119	ⓓ
x	01111000	170	120	ⓓ
y	01111001	171	121	ⓓ
z	01111010	172	122	ⓓ
{	01111011	173	123	ⓓ
	01111100	174	124	ⓓ
}	01111101	175	125	ⓓ
~	01111110	176	126	ⓓ
DEL	01111111	177	127	ⓓ

HEWLETT PACKARD

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA Telecel Empresa Técnica de Equipamentos Eléctricos, S.A.R.L. R. Barbosa Rodrigues, 42-1 DT. Caixa Postal. 6487 Luanda Tel: 35515/6 Cable: TELECTRA Luanda	HONG KONG Schmidt & Co (Hong Kong) Ltd. P.O. Box 297 Connaught Centre 39th Floor Connaught Road, Central Hong Kong Tel: H-255291-5 Telex: 74766 SCHMC HX Cable: SCHMIDTCO Hong Kong	INDIA Blue Star Ltd. Kasturi Buildings Jamshedji Tata Rd Bombay 400 020 Tel: 29 50 21 Telex: 001-2156 Cable: BLUEFROST Blue Star Ltd. Sahas 414-2 Vir Savarkar Marg Prabhadevi Bombay 400 025 Tel: 45 78 87 Telex: 011-4093 Cable: FROSTBLUE Blue Star Ltd. Band Box House Prabhadevi Bombay 400 025 Tel: 45 73 01 Telex: 011-3751 Cable: BLUESTAR Blue Star Ltd. 7 Hare Street P.O. Box 506 Calcutta 700 001 Tel: 23-0131 Telex: 021-7655 Cable: BLUESTAR Blue Star Ltd. 7th & 8th Floor Bhandari House Bombay 400 025 Tel: 23-0131 Telex: 021-7655 Cable: BLUESTAR Blue Star Ltd. 11-11A Magarath Road Bangalore 560 025 Tel: 55668 Telex: 043-430 Cable: BLUESTAR Blue Star Ltd. Meakeshi Mandiran xxx-1678 Mahatma Gandhi Rd Cochin 682 016 Tel: 32069, 32161, 32282 Telex: 0885-514 Cable: BLUESTAR Blue Star Ltd. 11-117-1 Sarojini Devi Road Secunderabad 500 003 Tel: 70126, 70127 Telex: 391-212-995 HEWPP-BR Cable: HEWPAARD Rio de Janeiro	Yokogawa-Hewlett-Packard Ltd Kumagaya Asahi Hachijuni Building 4th Floor 3-4, Tsukuba Kumagaya, Saitama 360 Tel: 0485-24-6563	KENYA Technical Engineering Services/E.A. Ltd. P.O. Box 18311 Nairobi Tel: 557726/556762 Cable: PROTTON Medical Only International Aeradio(E.A.) Ltd. P.O. Box 19012 Nairobi Airport Nairobi Tel: 336055/56 Telex: 22201/22301 Cable: INTAERIO Nairobi	KOREA Samsung Electronics Co., Ltd. 20th Fl. Dongbang Bldg. 250, 2-KA C.P.O. Box 2775 Taepyeong-Ro, Chung-Ku Seoul Tel: (23) 6811 Telex: 22575 Cable: ELEKSTAR Seoul	MALAYSIA Teknik Mutu Sdn Bhd 2 Lorong 13-6A Section 13 Petaling Jaya, Selangor Tel: 54994/5496 Telex: MA 37605 Protel Engineering P.O. Box 1917 Lot 259, Satok Road Kuching, Sarawak Tel: 2400 Cable: PROTENG	MOZAMBIQUE A.N. Gonçalves, Lda 162-1, Apt. 14 Av. D. Luis Caixa Postal 107 Loureiro Marques Tel: 27091, 27114 Telex: 6-203 NEGON Mo Cable: NEGON	NEW ZEALAND Hewlett-Packard (N.Z.) Ltd. 162-1, Apt. 14 Av. D. Luis Caixa Postal 107 Loureiro Marques Tel: 27091, 27114 Telex: 6-203 NEGON Mo Cable: NEGON	PHILIPPINES The Online Advanced Systems Corporation Rico House Amorsolo cor. Herrera Str Legaspi Village, Makati Manila Tel: 85-35-81, 85-34-91 Telex: 3274 ONLINE	ANALYTICAL/MEDICAL ONLY Medical Supplies N.Z. Ltd. Scientific Division 79 Carlton Gore Rd., Newmarket P.O. Box 1234 Auckland Tel: 75-289 Cable: DENTAL Auckland Analytical/Medical Only Medical Supplies N.Z. Ltd. P.O. Box 1994 147-161 Tory St Wellington Tel: 850-799 Telex: 3858 Cable: DENTAL, Wellington Analytical/Medical Only Medical Supplies N.Z. Ltd. P.O. Box 309 239 Stanmore Road Christchurch Tel: 892-019 Cable: DENTAL, Christchurch Analytical/Medical Only Medical Supplies N.Z. Ltd. 303 Great King Street P.O. Box 233 Dunedin Tel: 88-817 Cable: DENTAL, Dunedin	NIGERIA The Electronics Instrumentations Ltd NEB 779 Oyo Road Oluseun House P.M.B. 5402 Ibadan Tel: 61577 Telex: 31231 TEIL, Nigeria Cable: THETEL Ibadan The Electronics Instrumentations Ltd 144 Agege Motor Road, Mushin P.O. Box 6645 Lagos Cable: THETEL Lagos	PAKISTAN Mushko & Company, Ltd Osman Chambers Abdullah Haroon Road Karachi-3 Tel: 27091, 27114 Telex: 512927 Cable: COOPERATOR Karachi Mushko & Company, Ltd 388 Satellite Town Rawalpindi Tel: 41524 Cable: FEMUS Rawalpindi	PERU Hewlett-Packard (Peru) S.A. 1020 Morrison Dr. Ottawa K2H 8K7 Tel: (613) 820-6483 Telex: 610-563-1636 Hewlett-Packard (Canada) Ltd. 800 Windmill Road Mississauga L4V 1M8 Tel: (416) 678-9430 Telex: 610-492-4246	RHODESIA Field Technical Sales 45 Kelvin Road North Salisbury P.O. Box 3458 Salisbury Tel: 705231 (5 lines) Telex: RH 4122 SINGAPORE Hewlett-Packard Singapore (Pte.) Ltd. 1150 Depot Road Alexandra P.O. Box 58 Singapore 4 Tel: 270-2355 Telex: HPSG RS 21486 Cable: HEWPACK, Singapore	TAIWAN Hewlett-Packard Far East Ltd. Taiwan Branch 39 Chung Hsiao West Road Sec. 1, 7th Floor Taipei Tel: 3819160-4 Cable: HEWPACK TAIPEI Hewlett-Packard Far East Ltd. Taiwan Branch 68-2 Chung Cheng 3rd Road Kaohsiung Tel: (07) 242318-Kaohsiung Analytical Only San Kwang Instruments Co., Ltd. No. 20, Yung Sun Road Taipei Tel: 371571-4 (5 lines) Telex: 22894 SANKWANG Cable: SANKWANG TAIPEI	TANZANIA Medical Only International Aeradio (E.A.), Ltd. P.O. Box 861 Dar es Salaam Tel: 21251 Ext. 265 Telex: 41030	THAILAND UNIMESA Co., Ltd. Elcom Research Building 2538 Sukumvit Ave. Bangkok Tel: 393287, 3930338 Cable: UNIMESA Bangkok	UGANDA Medical Only International Aeradio(E.A.), Ltd. P.O. Box 2577 Kampala Tel: 54388 Cable: INTAERIO Kampala	ZAMBIA R.J. Tibury (Zambia) Ltd. P.O. Box 2792 Lusaka Tel: 3793 Cable: ARJAYTEE, Lusaka
OTHER AREAS NOT LISTED, CONTACT: Hewlett-Packard Intercontinental 3200 Hillview Ave Palo Alto, California 94304 Tel: 415-493-1501 TWX 910-373-1267 Cable: HEWPACK Palo Alto																			

AUSTRIA Hewlett-Packard Ges m b H. Handelskai 52 P.O. Box 7 A-1205 Vienna Tel: (0222) 351621 to 27 Cable: HEWPAK Vienna Telex: 75923 hewpak a BELGIUM Hewlett-Packard Benelux S.A./N.V. Avenue du Col-Vert, 1. (Gronkraglaan) B-1170 Brussels Tel: (02) 672 22 40 Cable: PALOBEN Brussels Telex: 23 494 paloben bru CYPRUS Kyprionics I. Gregorios & Xenopoulos Rd. P.O. Box 1152 Cy-O. Nicosia Tel: 45628/29 Cable: KYPRIONICS PANDEHIS Telex: 3018 CZECHOSLOVAKIA Vývojova a Provozní Zakladna Výzkumných Ústavů v Bechovicích CSSR-25097 Bechovice u Prahy Tel: 89 93 41 Telex: 121333 Institute of Medical Biomics Výzkumný Ústav Lékařské Biologie Jedlůva 6 CS-88346 Bratislava-Kramare Tel: 44-551-45-541 DDR Entwicklungslabor der TU Dresden Forschungsinstitut Mensberg DDR-7305 Waldheim/Meinsberg Tel: 37 667 Telex: 112145 Export Contain AG Zurich Guenther Forgher Schlegelstrasse 15 1040 Berlin Tel: 42-74-12 Telex: 111889 DENMARK Hewlett-Packard A/S Tatavej 52 DK-3660 Birkerød Tel: (02) 81 66 40 Cable: HEWPAK AS Telex: 37409 hpas dk Hewlett-Packard A/S Navevej 1 DK-8600 Silkeborg Tel: (06) 82 71 66 Telex: 37409 hpas dk Cable: HEWPAK AS FINLAND Hewlett-Packard OY Nahkahuone 5 P.O. Box 6 SF-00211 Helsinki 21 Tel: (90) 6923031 Cable: HEWPAK OY Helsinki Telex: 12-1563 HEWPA SF FRANCE Hewlett-Packard France Quartier de Courtaubouff Boite Postale No. 6 F-91401 Orsay Cédex Tel: (1) 907 78 25 Cable: HEWPAK Orsay Telex: 500048 Hewlett-Packard France Agence Régionale "Le Saquin" Chemin des Mouilles B.P. 152 F-69130 Ecullay Tel: (78) 33 81 25 Cable: HEWPAK Ecullay Telex: 31 06 17	Hewlett-Packard France Agence Régionale Périmètre de la Cèpre Chemin de la Cèpre, 20 F-31300 Toulouse-Le Mirail Tel: (61) 40 11 12 Cable: HEWPAK 51957 Telex: 510957 F-13721 Marignane Tel: (91) 89 12 36 Cable: HEWPAK MARGN Telex: 410770 Hewlett-Packard France Agence Régionale Aéroport principal de Marseille-Mariangne F-13500 Marseille Tel: (91) 89 12 36 Cable: HEWPAK MARGN Telex: 410770 Hewlett-Packard France Agence Régionale 53, Avenue de Rochester B.P. 1124 F-35014 Rennes Cédex Tel: (99) 36 33 21 Cable: HEWPAK 74912 Telex: 740912 Hewlett-Packard France Agence Régionale 74, Allée de la Robertsau F-67000 Strasbourg Tel: (88) 35 23 20 21 Telex: 890112 Cable: HEWPAK STRBG Telex: 890112 Hewlett-Packard France Agence Régionale Centre Vauban 201, rue Albert F-59000 Lille Tel: (20) 51 44 14 Telex: 820744 Hewlett-Packard France Centre d'Affaires Paris-Nord Bâtiment Ampère Rue de la Commune de Paris B.P. 300 F-93153 Le Blanc Mesnil Cédex Tel: (01) 931 88 50 GERMAN FEDERAL REPUBLIC Hewlett-Packard GmbH Vertriebszentrale Frankfurt Bernstrasse 117 Postfach 560 140 D-6000 Frankfurt 56 Tel: (0611) 50 04-1 Cable: HEWPAKSA Frankfurt Tel: (0611) 50 04-1 Cable: HEWPAKSA Frankfurt Telex: 04 13249 hpfmd Hewlett-Packard GmbH Technisches Büro Böblingen Herrenbergerstrasse 110 D-7030 Böblingen, Württemberg Tel: (07031) 667-1 Cable: HEPAK Böblingen Telex: 07265739 bbn Hewlett-Packard GmbH Technisches Büro Düsseldorf Emanuel-Leutze-Str. 1 (Seestern) D-4000 Düsseldorf 11 Tel: (0211) 59711 Telex: 085/86 533 hppd Hewlett-Packard GmbH Technisches Büro Hamburg Wendenstrasse 23 D-2000 Hamburg 1 Tel: (040) 24 13 93 Cable: HEWPAKSA Hamburg Telex: 21 63 032 hpnh Hewlett-Packard GmbH Technisches Büro Hannover Am Grossmarkt 6 D-3000 Hannover 91 Tel: (0511) 46 60 01 Telex: 092 3259	Hewlett-Packard GmbH Werk Göttingen Ohmstrasse 6 D-7500 Karlsruhe 41 Tel: (0721) 69 40 06 Telex: 825707 Hewlett-Packard GmbH Technisches Büro Nuremberg Neumeyer Str. 90 D-8500 Nuremberg Tel: (0911) 56 30 83/85 Telex: 0623 860 Hewlett-Packard GmbH Technisches Büro München Unterföhringer Strasse 28 ISAR Center D-8012 Ottobrunn Tel: (089) 601 30 61/7 Cable: HEWPAKSA München Telex: 0524985 Hewlett-Packard GmbH Technisches Büro Berlin Keith Strasse 2-4 D-1000 Berlin 30 Tel: (030) 24 90 86 Telex: 18 3405 hpbm d Greece Kostas Karayannis D. Omirou Street GR-Athens 133 Tel: 3237371 Cable: RAKAR Athens Tel: 21 59 52 Kar gr Analytical Only "INTECO" G. Papathanassiou & Co Marni 17 GR - Athens 103 Tel: 522 1915 Cable: INTEKNA Athens Telex: 21 5329 INTE GR Medical Only Technion Hellas Ltd 52, Skousta Street GR - Athens 135 Tel: 682 6872, 363 3830 Cable: ETALAK athens Telex: 21-4693 ETAL GR HUNGARY MTA Műszertudományi és Mérőtechnikai Szolgálat Lenn Krt. 67 1391 Budapest VI Tel: 42 03 38 Telex: 22 51 14 ICELAND Medical Only Eding Trading Company Inc. Hafnarhvoli, Tryggvatoru IS-Reykjavik Tel: 1 58 20 Cable: ELIDING Reykjavik IRAN Hewlett-Packard Iran Ltd No. 13, Fourteenth St. Narmad Avenue P.O. Box 41/2419 IR-Tehran Tel: 851082-7 Telex: 21 25 74 khm ir IRAQ Hewlett-Packard Trading Co. 46 B Mansoor City Baghdad Tel: 5517827 Telex: 2455 hpepar iq Cable: HEWPAQDAD. Baghdad Iraq IRELAND Hewlett-Packard Ltd King Street Lane GB-Winnerah, Wokingham Berk. RG11 5AR Tel: (0734) 78 47 74 Telex: 847178/848179	ITALY Hewlett-Packard Italiana S.p.A. Via Amerigo Vesputici 2 Casella postale 3645 I-20100 Milano Tel: (02) 5251 (10 lines) Cable: HEWPAKIT Milano Telex: 32046 Hewlett-Packard Italiana S.p.A. Via Pietro Maroncelli 40 (Lana Via Vissenti) I-35100 Padova Tel: (49) 66 48 88 Telex: 41612 Hewpacki Medical only Hewlett-Packard Italiana S.p.A. Via d'Aghard, 7 I-56100 Pisa Tel: (050) 2 32 04 Telex: 32046 via Milano Hewlett-Packard Italiana S.p.A. Via G. Arminini 10 I-40138 Roma Tel: (06) 54 69 61 Telex: 61514 Cable: HEWPAKIT Roma Hewlett-Packard Italiana S.p.A. Corso Giovanni Lanza I-10131 Torino Tel: (011) 682245/659308 Medical/Calculators only Hewlett-Packard Italiana S.p.A. Via Principe Nicola 43 G/C I-95126 Catania Tel: (095) 37 05 04 Hewlett-Packard Italiana S.p.A. Via Amerigo Vesputici, 9 I-80142 Napoli Tel: (081) 33 77 11 Hewlett-Packard Italiana S.p.A. Via E. Masi, 9/B I-40127 Bologna Tel: (051) 30 78 87 KUWAIT Al-Khadiya Trading & Contracting Co. P.O. Box 830-Saft Kuwait Tel: 424910-411726 Telex: 2481 areg kt Cable: VISCONT LUXEMBURG Hewlett-Packard Benelux S.A./N.V. Avenue du Col-Vert, 1. Helmkruglaan B-1170 Brussels Tel: (02) 672 22 40 Cable: PALOBEN Brussels Telex: 23 494 MOROCCO Gerep 190, Blvd. Brahim Roudani Casablanca Tel: 25-16-76/25-90-99 Cable: Gerep-Casa Telex: 23739 NETHERLANDS Hewlett-Packard Benelux N.V. Van Heuven Gedeonhantlaan 121 P.O. Box 667 NL-1134 Amstelveen Tel: (020) 47 20 21 Cable: PALOBEN Amsterdam Telex: 13 216 hepa nl NORWAY Hewlett-Packard Norge A/S Nesvæn 13 Box 149 N-1344 Haslum Tel: (02) 53 83 60 Telex: 16621 hpnas n	POLAND Buro Informacji Technicznej Hewlett-Packard Ul. Stawki 2, 6P 00-950 Warszawa Tel: 39092, 395187 Telex: 81 24 53 hepa pl UNIPAN Zaklad Doswiadczalny Budowy Aparatury Naukowej P.O. Skrajowej Rady Narodowej 51/55 00-800 Warszawa Tel: 32046 Telex: 81 46 48 Zaklady Naprawcze Sprzetu Medycznego Plac Komuny Paryskiej 6 00-007 Lodz Tel: 334-41, 337-83 Tel: (031) 49 09 50 Telex: 10721 Via Bromma Office PORTUGAL Electra-Empresa Técnica de Equipamentos Eléctricos S.a.r.l. Rua Rodrigo da Fonseca 103 P.O. Box 2531 P - Lisbon Tel: (19) 68 60 72 Cable: ELECTRA Lisbon Telex: 12598 Medical only Mundus Inter Intercomercial Mundial de Comércio S.a.r.l. Av. A. de Aguiar 138 P.O. Box 2761 P - Lisbon Tel: (19) 53 21 31/7 Cable: INTERCAMBIO Lisbon Telex: 10440 ROMANIA Hewlett-Packard Reprezentanta BD. N. Balcescu 16 Bucharest Tel: 58023/38885 Telex: 10440 I.L.R.U.C. Intreprinderea Pentru Intretinere Si Reparatie Utilitatilor de Calcul Bd. Mihail Dimitrie Pompei 6 Bucharest-Sectorul 2 Tel: 12 64 30 Telex: 11716 SAUDI ARABIA Modern Electronic Establishment Khalid Abdul Aziz str. (Head office) P.O. Box 1228 Jeddah Tel: 31173-322201 Cable: ELECTRA P.O. Box 2728 (Service center) Riyadh Tel: 62396-66232 Cable: RAOUFCO SPAIN Hewlett-Packard Española, S.A. Jerez, Calle 3 E-Madrid 16 Tel: (1) 458 26 00 (10 lines) Telex: 23515 hpe Hewlett-Packard Española, S.A. Milanesado 21-23 E-Barcelona 17 Tel: (3) 203 6200 (5 lines) Telex: 52603 hpbe e Hewlett-Packard Española, S.A. Av. Ramón y Cajal 1 Edificio Sevilla, planta 9. E-Seville 5 Tel: 64 44 54/58 Hewlett-Packard Española, S.A. Edificio Albia II 7 B E-Bilbao 1 Tel: 23 83 06/23 82 06 Calculators Only Hewlett-Packard Española, S.A. Gran Via Fernando El Católico, 67 E-Valencia 8 Tel: 326 67 28/326 85 55	SWEDEN Hewlett-Packard Sverige AB Enghjertsågen 1-3 Fack S-161 20 Bromma 20 Tel: (08) 730 05 50 Cable: MEASUREMENTS Stockholm Telex: 10721 Hewlett-Packard Sverige AB Ostra Vintergatan 22 S-702 40 Örebro Tel: (019) 14 07 20 Hewlett-Packard Sverige AB Frolingsgatan 30 S-421 32 Västra Frölunda Tel: (031) 49 09 50 Telex: 10721 Via Bromma Office SWITZERLAND Hewlett-Packard (Schweiz) AG Zürcherstrasse 20 P.O. Box 307 CH-8952 Schlieren-Zürich Tel: (01) 730 52 40/730 18 21 Cable: HPAG CH Telex: 53933 hpag ch Hewlett-Packard (schweiz) AG Château Bloc 19 CH-1219 Le Lignon-Geneva Tel: (022) 96 05 22 Cable: HEWPAKAG Geneva Telex: 27 333 hpag ch SYRIA Medical/Calculator only Sawah & Co Place Azme Beyrouth SYR-Damascus Tel: 16367, 19687, 14268 Cable: SAWAH, Damascus Telex: 30439 TURKEY Telekom Engineering Bureau P.O. Box 437 Istanbul TR-Ankara Tel: 49 40 40 Cable: TELEMIATION Istanbul Telex: 23609 Medical only E.M.A. Mühendislik Kolektif Sirketi Adakale Sokak 41/6 TR-Ankara Tel: 175622 Analytical only Yilmaz Ozyurak Mili Müdatta Cad No. 16/6 Kizilay TR-Ankara Tel: 25 03 09 Telex: 42576 özek tr UNITED KINGDOM Hewlett-Packard Ltd King Street Lane GB-Winnerah, Wokingham Berk. RG11 5AR Tel: (0734) 78 47 74 Cable: Hewpie London Telex: 847178/9 Hewlett-Packard Ltd Fratley House Navigation Road Aldricham Cheshire WA14 1NU Tel: (061) 928 6422 Telex: 960688 Hewlett-Packard Ltd Lygon Court Hawley Rise Dudley Road Halesowen West Midlands B62 8SD Tel: (021) 550 9911 Telex: 339105	WEST GERMANY Hewlett-Packard Ltd Wendg. Haus 798, London Road GB-Thornthorpe Heath Surrey CR4 6XL Tel: (01) 684 0103/8 Telex: 946825 Hewlett-Packard Ltd c/o Makro South Service Wholesale Centre Wear Industrial Estate Washington GB-New Town, County Durham Tel: Washington 464001 ext. 57/58 Hewlett-Packard Ltd 10, Wesley St GB-Castleford West Yorkshire WF10 1AE Tel: (09775) 50402 Telex: 557355 Hewlett-Packard Ltd 1, Wallace Way GB-Hitchin Herts Tel: (0462) 52824-56704 Telex: 825981 Hewlett-Packard Ltd 2C, Avonbeg Industrial Estate Longwell Green Dublin 12 Tel: Dublin 509458 Telex: 30439 YUGOSLAVIA Iskra-standard Hewlett-Packard Miklosiceva 38/VII 61000 Ljubljana Tel: 31 58 79/32 16 74 Telex: 31583 SOCIALIST COUNTRIES NOT SHOWN PLEASE CONTACT: Hewlett-Packard Ges m b H P.O. Box 7 A-1205 Vienna, Austria Tel: (0222) 35 16 21 to 27 Cable: HEWPAK Vienna Telex: 75923 hewpak a MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT: Hewlett-Packard S.A. Mediterranean and Middle East Operations 35, Kolokotroni Street Plosta Kefallariou GR-Kifissia-Athens, Greece Tel: 608033/7-559-429 Telex: 21-6588 Cable: HEWPAKSA Athens FOR OTHER AREAS NOT LISTED CONTACT: Hewlett-Packard S.A. 7, rue du Bois-du-Lan P.O. Box CH-1217 Meyrin 2 - Geneva Switzerland Tel: (022) 82 70 90 Cable: HEWPAKSA Geneva Telex: 2 24 86
--	--	---	---	--	--	--

UNITED STATES

ALABAMA 8290 Whitesburg Dr., S. E P.O. Box 4207 Huntsville 35802 Tel: (205) 881-4591 Medical Only 228 W. Valley Ave. Room 220 Birmingham 35209 Tel: (205) 942-2081/2 ARIZONA 2336 E. Magnolia St Phoenix 85034 Tel: (602) 244-1361 2424 East Aragon Rd. Tucson 85706 Tel: (602) 294-3148 *ARKANSAS Medical Service Only P.O. Box 5646 Brady Street Little Rock 72215 Tel: (501) 376-1844 CALIFORNIA 1430 East Orangeforth Ave. Fullerton 92631 Tel: (714) 870-1000 3939 Lankershim Boulevard North Hollywood 91604 Tel: (213) 877-1282 TWX 910-499-2671 5400 West Rosecrans Blvd P.O. Box 92105 World Way Postal Center Los Angeles 90009 Tel: (213) 970-7500 *Los Angeles Tel: (213) 776-7500 3003 Scott Boulevard Santa Clara 95050 Tel: (408) 249-7000 TWX 910-338-0518	*Ridgcrest Tel: (714) 446-6165 646 W. North Market Blvd Sacramento 95834 Tel: (916) 929-7222 9606 Aero Drive P.O. Box 23333 San Diego 92123 Tel: (714) 279-3200 COLORADO 5600 South Ulster Parkway Englewood 80110 Tel: (303) 771-3455 CONNECTICUT 12 Lunar Drive New Haven 06525 Tel: (203) 389-6551 TWX 710-465-2029 FLORIDA P.O. Box 24210 2806 W. Oakland Park Blvd Ft. Lauderdale 33311 Tel: (305) 731-2020 *Jacksonville Medical Service Only Tel: (904) 398-0663 P.O. Box 13910 6177 Lake Ellenor Dr. Orlando 32809 Tel: (305) 859-2900 P.O. Box 12826 Pensacola 32575 Tel: (904) 476-8422 GEORGIA P.O. Box 105005 Atlanta 30348 Tel: (404) 955-1500 TWX 810-766-4890 Medical Service Only *Augusta 30903 Tel: (404) 736-0592 P.O. Box 2103 Warner Robins 31098 Tel: (912) 922-0449	HAWAII 2875 So. King Street Honolulu 96814 Tel: (808) 955-4455 Telex: 723-705 ILLINOIS 5201 Tolliver Dr. Rolling meadows 60008 Tel: (312) 255-9800 TWX 910-687-2260 INDIANA 1301 North Shadeland Ave. Indianapolis 46250 Tel: (317) 642-1000 TWX 810-260-1797 IOWA 2415 Heinz Road Iowa City 52240 Tel: (319) 338-9466 KENTUCKY Medical Only Atkinson Square 3901 Atkinson Dr. Suite 407 Atkinson Square Louisville 40218 Tel: (502) 456-1573 LOUISIANA P.O. Box 840 3239-39 Williams Boulevard Kenner 70063 Tel: (504) 443-6201 MARYLAND 6707 Whitestone Road Baltimore 21207 Tel: (301) 944-5400 TWX 710-862-9157 2 Choke Cherry Road Rockville 20850 Tel: (301) 948-6370 TWX 710-828-9684 MASSACHUSETTS 32 Hartwell Ave. Lexington 02173 Tel: (617) 292-1320 TWX 710-326-6904	MICHIGAN 23855 Research Drive Farmington Hills 48024 Tel: (313) 476-5400 724 West Centre Ave. Kalamazoo 49002 Tel: (606) 323-8362 MINNESOTA 2400 N. Prior Ave. St. Paul 55113 Tel: (612) 636-0700 MISSISSIPPI *Jackson Medical Service only Tel: (601) 982-3563 MISSOURI 11131 Colorado Ave. Kansas City 64137 Tel: (816) 763-8000 TWX 910-771-2087 1024 Executive Parkway St. Louis 63141 Tel: (314) 878-0200 NEBRASKA Medical Only 7171 Mercy Road Suite II Omaha 68106 Tel: (402) 392-0948 NEW JERSEY W. 129 Century Rd Paramus 07652 Tel: (201) 265-5000 TWX 710-990-4951 NEW YORK 6 Automation Lane Computer Park Albany 12205 Tel: (518) 458-1550 201 South Avenue Poughkeepsie 12601 Tel: (914) 454-7330 TWX 510-253-5981 650 Perinton Hill Office Park Fairport 14450 Tel: (716) 223-9950 5858 East Molloy Road Syracuse 13211 Tel: (315) 454-2486 TWX 710-541-0482 1 Crossways Park West Woodbury 11797 Tel: (516) 921-0300 TWX 710-990-4951 NORTH CAROLINA P.O. Box 5188 1923 North Main Street High Point 27626 Tel: (919) 885-8101 OHIO 16500 Sprague Road Cleveland 44130 Tel: (216) 243-7300 TWX 810-423-9430 330 Progress Rd Dayton 45449 Tel: (513) 859-8202 1041 Kingsmill Parkway Columbus 43209 Tel: (614) 436-1041	156 Wyatt Drive Las Cruces 88001 Tel: (505) 526-2484 TWX 910-9983-0550 NEW YORK 6 Automation Lane Computer Park Albany 12205 Tel: (518) 458-1550 201 South Avenue Poughkeepsie 12601 Tel: (914) 454-7330 TWX 510-253-5981 650 Perinton Hill Office Park Fairport 14450 Tel: (716) 223-9950 5858 East Molloy Road Syracuse 13211 Tel: (315) 454-2486 TWX 710-541-0482 1 Crossways Park West Woodbury 11797 Tel: (516) 921-0300 TWX 710-990-4951 NORTH CAROLINA P.O. Box 5188 1923 North Main Street High Point 27626 Tel: (919) 885-8101 OHIO 16500 Sprague Road Cleveland 44130 Tel: (216) 243-7300 TWX 810-423-9430 330 Progress Rd Dayton 45449 Tel: (513) 859-8202 1041 Kingsmill Parkway Columbus 43209 Tel: (614) 436-1041	OKLAHOMA P.O. Box 32008 Oklahoma City 73132 Tel: (405) 721-0200 OREGON 18750 SW Lower Boones Ferry Road Tualatin 97062 Tel: (503) 620-3350 PENNSYLVANIA 111 Zeta Drive Pittsburgh 15238 Tel: (412) 732-0400 1021 8th Avenue King of Prussia Industrial Park King of Prussia 19406 Tel: (215) 265-7000 TWX 510-660-2670 SOUTH CAROLINA 6941-N. Tremholm Drive Bellevue 29604 Tel: (803) 782-8493 TENNESSEE Medical Service only Tel: (615) 523-5022 3027 Vanguard Dr Director's Plaza Memphis 38131 Tel: (901) 346-8370 Nashville Medical Service only Tel: (615) 244-5448 TEXAS P.O. Box 1270 201 E. Arapahoe Rd Richardson 75080 Tel: (214) 231-6101	10535 Harwin Dr. Houston 77036 Tel: (713) 776-6400 205 Billy Mitchell Road San Antonio 78226 Tel: (512) 434-8241 UTAH 2180 South 3270 West Street Salt Lake City 84119 Tel: (801) 972-4711 VIRGINIA P.O. Box 12778 No. 7 Koger Exec. Center Suite 212 Norfolk 23502 Tel: (804) 661-4025/6 P.O. Box 9669 2914 Hungary Springs Road Richmond 23228 Tel: (804) 285-3431 WASHINGTON Bellevue Office Pk 1203-114th Ave. S.E. Bellevue 98004 Tel: (206) 454-3971 TWX 910-443-2446 *WEST VIRGINIA Medical/Analytical Only Charleston Tel: (304) 345-1640 WISCONSIN 9004 West Lincoln Ave West Allis 53227 Tel: (414) 341-0550 FOR U.S. AREAS NOT LISTED: Contact the regional office nearest you: Atlanta, Georgia North Hollywood, California Rockville, Maryland Rolling Meadows, Illinois Their complete addresses are listed above
--	--	--	--	--	--	--

Subject Index

a

Addressing (Select Code)	2
Alpha Mode	22
ASCII Code	34
ASCII Table	36
Automatic Data Input	14

b

Binary Codes and Conversions	33
Block, Definition	5
Block Diagram (Interface)	23
Broken Trace Repair	25
BURST Instruction	15
BYTE Instruction	21

c

Cable Length	1
Calculator Option 002	2
Circuit Diagrams	32
Circuits, Peripheral	3
Code Conversions	33
Component Locator	30
Connectors, XA1 and XA2	32
Control Lines	1

d

Data Control Instructions	11
Data Input Instructions	14
Data Input Lines	1
Data Mode (FORMAT)	11
Data Output Instructions	21
Data Output Lines	1
Data Stability, Input	4
DECODE Instruction	17
Definition of Terms	5

e

Equipment Required, Troubleshooting	25
Error Messages	42

f

Flag Circuit (Interface)	4
FORMAT Instruction	11
FORMAT Parameter Ranges	12
FORMAT Parameters with PACK Instructions	19

h

HANDSHAKE Instruction	8
Handshake Timing Diagrams (Input)	8
Handshake Timing Diagrams (Output)	10

i

I/O Control Instruction	8
Input Operations	14, 15, 17, 20
INPUT Instruction	20
Input Timing Diagrams	8
Installation Procedure	2

k

Key Overlay	7
-------------------	---

l

Logic Levels	2
--------------------	---

m

MASK Instruction	13
Memory Usage	2

o

Octal-Binary Conversions	33
OUTPUT Instructions	21
Output Operations	21, 22
Output Timing Diagrams	10

p

PACK Instruction	17
Parts List	29
Pin Outs (XA1 and XA2)	32
Plug In Procedure	2

r

READ Instruction	14
Receiving Circuits, Peripheral	3
ROM Check	27
ROM Enable	25
ROM Power Up	25

S

Sales and Service Offices	38
SAMPLE Instruction	15
Schematics	32
Select Code	2
Service	23
Signal Levels	2
START Instruction	14
STATUS Instruction	14
Summary of the Interface Instructions	6

t

Technical Specifications	1
Temperature Range	1
Terms (Definitions)	5
Test Setup	25
Theory of Operation	23
Timing Diagrams	8, 9, 10, 11
Transmitting Circuits, Peripheral	4
Troubleshooting and Repair	25

u

UNPACK Instruction	19
--------------------------	----

w

Wire Connections	32
WRITE ALPHA Instruction	22
WRITE BYTE Instruction	22

X

XA1 Connector	32
XA2 Connector	32

ERROR MESSAGES

* OVERFLOW	Number or result exceeds calculating range.
* SORT OF NEG #	
* DIVISION BY ZERO	
* LOG OF # ≤ 0	
* NO I/O DEVICE	Peripheral device or interface not connected.
ILLEGAL ADDRESS	Improper step address or storage register specified.
ILLEGAL ARGUMENT	The number of data blocks exceeds the number of assigned registers or the range of an instruction has been exceeded.
MEMORY OVERFLOW	Program instruction, storage register assignment, or program loaded from tape exceeds available memory.
GOSUB OVERFLOW	More than seven subroutines (including special functions) nested at a time.
KEY NOT DEFINED	Special function just called is not defined.
IMPROPER SYNTAX	Incorrect use of 
* CHECKSUM ERROR	Program or data loaded into calculator not identical to that in file; this usually indicates a dirty tape head or a worn tape.
* VERIFY FAILED	Program or data in file not identical to that in calculator.
WRONG FILE TYPE	Attempting to load an empty, extra, or binary file; recording on an extra file.
END OF TAPE	End of tape reached during MARK operation. Also indicates a broken or defective tape; if the tape does not appear to be broken, (advance it using the drive wheel), replace the cartridge, press  , and continue.
PROTECTED TAPE	The cartridge RECORD slide is positioned to prevent MARK and RECORD operations.
SECURED MEMORY	Attempting to list, edit, or record a secured program.
MISSING FOR STMT	
LABEL NOT FOUND	
FILE NOT FOUND	
CARTRIDGE OUT	
MISSING GOSUB	

*These messages are suppressable; see "Flags" in Section 3 of the calculator operating manual.

HEWLETT  PACKARD



PART NO. 98133-90000
MICROFICHE NO. 98133-99000

PRINTED IN U.S.A.
February 3, 1978

Scan Copyright ©
The Museum of HP Calculators
www.hpmuseum.org

Original content used with permission.

Thank you for supporting the Museum of HP
Calculators by purchasing this Scan!

Please to not make copies of this scan or
make it available on file sharing services.