


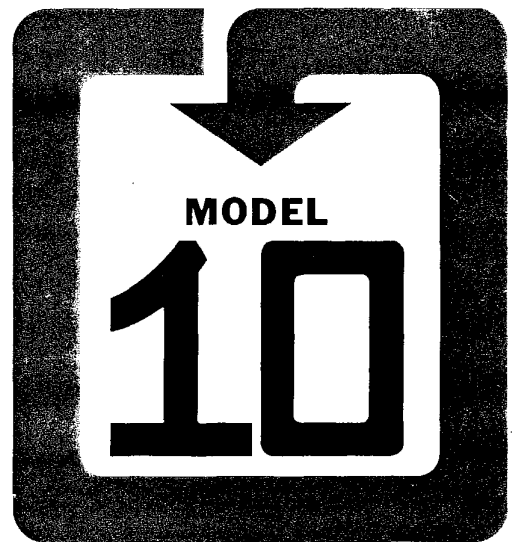

 **HEWLETT-PACKARD 9810A CALCULATOR
11211A PRINTER ALPHA ROM**

OPERATING MANUAL

TABLE OF CONTENTS

CHAPTER 1: GENERAL INFORMATION

General Description	1-1
Compatibility with Other ROM's	1-1
Equipment Supplied	1-1
Installation Procedure	1-1
Electrical Inspection	1-2

CHAPTER 2: ALPHA KEYBOARD

INTRODUCTION

Alpha Mode	2-1
Key Index	2-1
Side-of-Key Characters	2-1

CHARACTER KEYS 2-2

ALPHA CONTROL KEYS

FMT	2-2
CLEAR	2-3
CONTINUE	2-4
STOP	2-4
PAPER	2-5

NON-ESSENTIAL KEYS 2-5

PROGRAMMING SUGGESTIONS

Listed Key Mnemonics	2-6
Use of STEP PRGM	2-6
Labelling Alpha Messages	2-6
Use of LABEL	2-6
Sample Alpha Program	2-7

ALPHA KEYBOARD INDEX 2-11

SALES & SERVICE OFFICES

The 11211A Printer Alpha Read-Only-Memory (Alpha ROM) enables the 9810A Calculator with the Option 004 printer to print 54 separate alphanumeric and mnemonic characters. Alpha messages (data labels, printed instructions, etc.) may be printed directly from the keyboard or from programmed instructions.

NOTE

Please read the INSTALLATION PROCEDURE before plugging in your Alpha ROM.

The Alpha ROM also enhances the calculator's keylog and list operations by adding key mnemonics to the information normally printed during either operation. These added mnemonics are shown in the program listing on Page 2-8 .

The Alpha ROM may be used concurrently with other ROM's available for your 9810A Calculator. A brief description of other ROM's may be found in the 9810A Operating Manual.

The following table lists equipment furnished with the -hp- 11211A Printer Alpha ROM.

Table 1. Equipment Supplied

DESCRIPTION	QUANTITY	-hp- PART NUMBER
Magnetic Card Alpha Printer Exerciser	1	09810-90024
Operating Manual	2	09810-90003

The procedure given below should be used to plug in the Alpha ROM.

CAUTION

THE PRINTER ALPHA ROM MUST BE INSTALLED ONLY IN ROM SLOT 3.

CALCULATOR POWER SHOULD BE OFF WHEN INSTALLING OR REMOVING A ROM.

GENERAL DESCRIPTION

COMPATIBILITY WITH OTHER ROM'S

EQUIPMENT SUPPLIED

INSTALLATION PROCEDURE

**INSTALLATION
PROCEDURE**
(continued)**NOTE**

This ROM may be used only if your Calculator contains a printer (Option 004).

1. Switch the calculator power off.
2. Position the Alpha ROM as shown in Figure 1, then push it straight down through the opening until the ROM is firmly seated.
3. Switch the calculator power on.

To verify ROM electrical performance, proceed to the section titled ELECTRICAL INSPECTION.

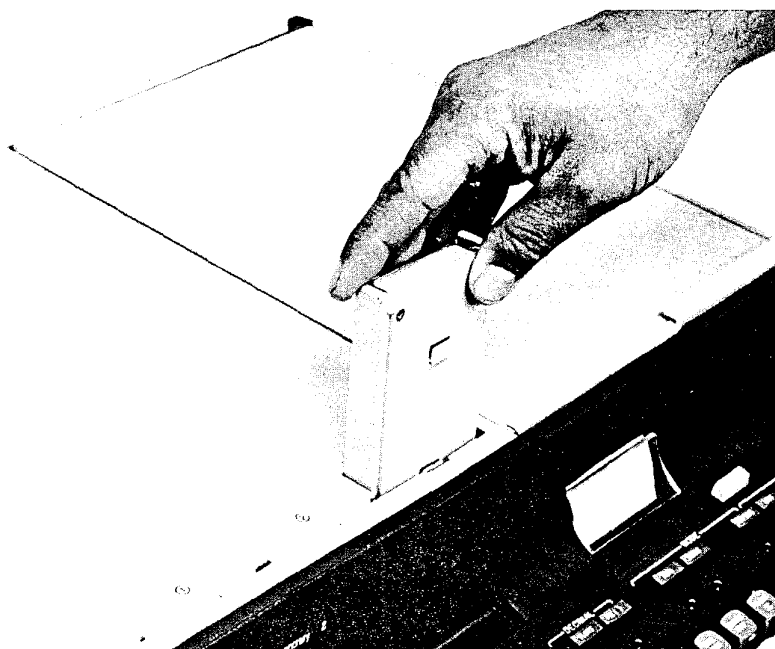


Figure 1. Installation Procedure

**ELECTRICAL
INSPECTION**

The magnetic card supplied with your Alpha ROM contains two programs. One program (side 1) exercises both the printer and the Alpha ROM. The other program (side 2) exercises the Mathematics ROM.

To exercise the Alpha ROM and printer:

SWITCH:  LINE
ON

GENERAL INFORMATION

1-3

PRESS:

RUN

STOP

END

LOAD

Insert side 1 of the magnetic card into the upper slot of the magnetic card reader. After the program is loaded (the calculator display will return):

PRESS:

END

CONTINUE

HARD COPY:

ALPHA PRINTER
EXERCISER

ALPHA KEYBOARD

=====
AFK PUZ r1+, =?
BGL QV@ /789 \$()
CHM RW *456 %
DIN SX -123 "1
EJO TY +0 . #0
=====

'LABEL K'
PRINTOUT

ALPHA CHARACTERS

ABCDEFGHIJ
KLMNOPQRST
UVWXYZ

NUMERICS

0123456789

SYMBOLS

r r + -
* W # = %
\$ @

PUNCTUATION

, . () ? " ' /


=====
/////////////////
=====

END OF PROGRAM

'LABEL ÷'
PRINTOUT

**ELECTRICAL
INSPECTION**
(continued)

Place the hard copy just printed next to the above sample. Compare each line of print and note any unprinted or partially printed characters. Your printer may require maintenance if any of the diagonal lines in your hard copy (corresponding to the 'LABEL ÷' area in the sample) are not completely printed. This portion of the exerciser may be repeated by pressing:

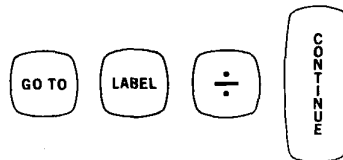


NOTE

Ignore the STATUS light when printing separate 'LABEL' messages from this program.

If the 'LABEL ÷' portion of your hardcopy is not completely printed, remove the Alpha ROM from your calculator and check the printer by performing the electrical inspection in Chapter 6 of your 9810A Operating Manual. The Alpha ROM cannot be accurately checked if the printer is defective. If the printer functions correctly, replace the Alpha ROM and continue inspecting it by reloading the exerciser and reprinting the 'LABEL K' portion of the exerciser according to the following directions.

If the 'LABEL ÷' portion of your hard copy is completely printed but one or more other characters are not printed correctly, your Alpha ROM is defective. The 'LABEL K' portion of the exerciser may be repeated by pressing:

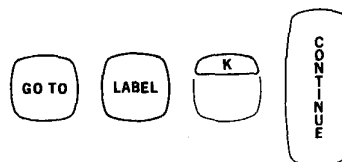

Compare both printouts with the preceding sample. Any characters printed incorrectly or not printed indicates that your ROM is defective.

NOTE

The 'LABEL K' portion of the exerciser printout represents a partial index of the Alpha Keyboard. A complete Alpha Keyboard index is located at the back of this manual.

To verify the STOP instruction during alpha printing:

PRESS:    

PRESS:     

Your calculator should return to the display mode and no printer operation should occur.

PRESS:       

HARD COPY: ABCD

If your Alpha ROM is defective, contact your local -hp- Sales and Service Office for assistance.

2-0

NOTES

INTRODUCTION

This chapter describes the function of each key when the calculator keyboard is redefined by the Alpha ROM to enable alpha characters to be printed. The last section of this chapter shows a sample program containing typical methods for programming alpha messages.

When the alpha mode is set, the entire calculator keyboard is redefined to include printing of alphanumeric characters. This 'alpha keyboard' contains 54 character-entry keys, 5 operational keys, and 16 "non-essential" keys. These non-essential keys are either inoperative or duplicate other keys during the alpha mode.

NOTE

During the alpha mode, the keylog feature is deactivated, thus any keys pressed are not logged.

An index of the alpha keyboard is located on the foldout at the back of this manual. The user should refer to the key index until he is thoroughly familiar with the alpha keyboard. The exerciser program supplied with your Alpha ROM generates a printout which also may be used as an alpha keyboard index. To obtain a copy of this printout, see the preceding electrical inspection.

The small characters on the front side of most keyboard keys may be used to identify keys during alpha printing. The side-of-key characters printed in dark green do not apply to the alpha keyboard.

**ALPHA
MODE****KEY
INDEX****SIDE-OF-KEY
CHARACTERS**

CHARACTER KEYS

Pressing any of the unshaded keys shown in Figure 2 during the alpha mode will cause the key's alpha character to be printed in line-printer fashion. The printer operates as a line-printer in that each character is not immediately printed, but an entire line (16 characters) is first stored and then printed. The printout occurs as the 16th character is entered.

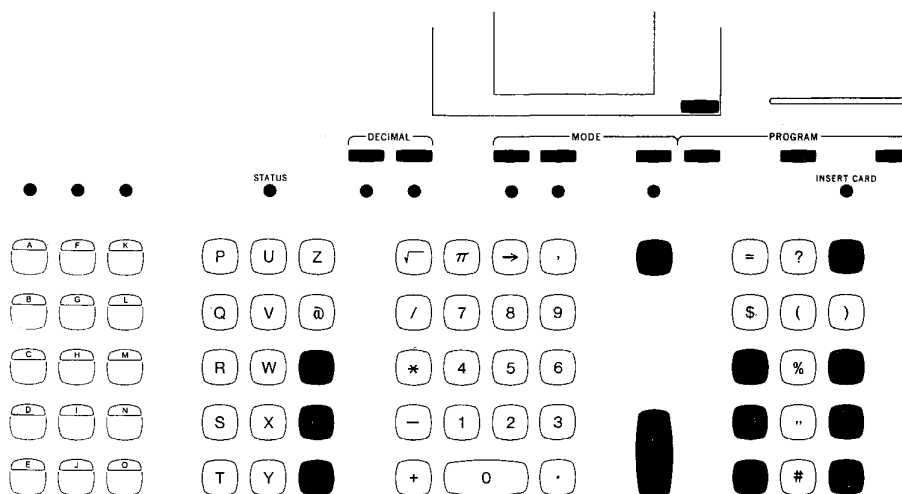


Figure 2. Character Keys

ALPHA CONTROL KEYS

During the alpha mode, the following keys are pressed to perform various printing operations.

FMT

FMT

Redefines the keyboard to the alpha mode, after which character keys may be pressed.

FMT

After the last character is entered, pressing FMT will cause a line print, line feed, and return the keyboard to normal operation.

NOTE

The calculator display is blanked during the alpha mode, although the contents of the X, Y and Z registers remain unchanged.

ALPHA CONTROL KEYS

EXAMPLE:

Print the alphabet.

PRESS:    PRESS:  (through)  
ZHARD COPY: ABCDEFGHIJKLMNOP
QRSTUVWXYZ

Causes a line print and advances the printer to the next line (i.e., like a typewriter carriage-return and line feed operation). The alpha mode remains set after this instruction. Successive CLEAR instructions will cause the printer to advance without printing, one line for each instruction.



EXAMPLE:

Print a list of numbers.

PRESS:  PRESS:   1 2 . 5
)PRESS: PRESS:   - 3 7 . 8
)PRESS: PRESS:   0 . 7 5
)

(continued)

CLEAR

(continued)

CONTINUE

STOP

ALPHA CONTROL KEYS

PRESS:

FMT

HARD COPY:

A) 12.5
 B) -37.8
 C) 0.75

REZ-TZOD

Inserts a blank space in the printed line; similar in operation to the space bar on a typewriter.

STOP

Terminates the alpha mode without a line print or line feed. Any characters entered but not printed will be erased when STOP is pressed.

NOTE

This instruction is not programmable and should not be used while programming alpha messages.

The following example shows how an entered alpha message may be corrected without a line print.

EXAMPLE:

An error is made while entering the message:
 "ENTER → X"

PRESS:

RUN

FMT

FMT

PRESS:

E

N

X→()

J

T

While entering the message, an error is made ("J" entered instead of "E").

ALPHA KEYBOARD

25

ALPHA CONTROL KEYS

To cancel the message:

PRESS: 

To reenter the message and print it:

PRESS:  

PRESS:      

PRESS:   

HARD COPY: ENTER → X

PAPER is a manual paper advance control. This operation is not programmable.

PAPER

NON-ESSENTIAL KEYS

The shaded keys in the alpha keyboard index (see the foldout at the back of this manual) are not essential for alpha printing operations. The non-essential keys which are programmable duplicate the SPACE key, while most of the non-programmable keys are 'locked-out' (i.e., not operational) during alpha printing operations.

NOTE

Pressing BACK STEP or STEP PRGM will cause 1 or 0, respectively, to be printed.

LISTED KEY
MNEMONICS

USE OF

STEP
PRGMLABELLING
ALPHA
MESSAGES

USE OF

LABEL

\$


PROGRAMMING SUGGESTIONS

When listing a program which contains alpha printing, the listed keycode and related mnemonics for each program step will correspond to the key's *normal* keyboard function rather than the key's alpha function. Many examples of this appear in the sample alpha program listing (i.e. steps: 0007, 0009, 0013, 0015, etc.).

When stepping through a program (the run mode is set) with the STEP PRGM key, an entire Alpha message will be automatically printed once the program is stepped to the FMT, FMT instruction. STEP PRGM operates normally when the calculator is in the program mode.

Assigning Alpha messages 'labels' and loading the actual messages at the end of the program may save the programmer considerable editing time if the messages require rewriting or rearranging in the program. This procedure is especially helpful when editing long programs. Examples of labelled messages appear in both the Printer Alpha Exerciser and the sample alpha program.

A program branching anomaly may result from use of the '\$' character in a programmed alpha message if a branching instruction, in the same program, contains the LABEL key. The following partial program listing is used to illustrate the possible anomaly.

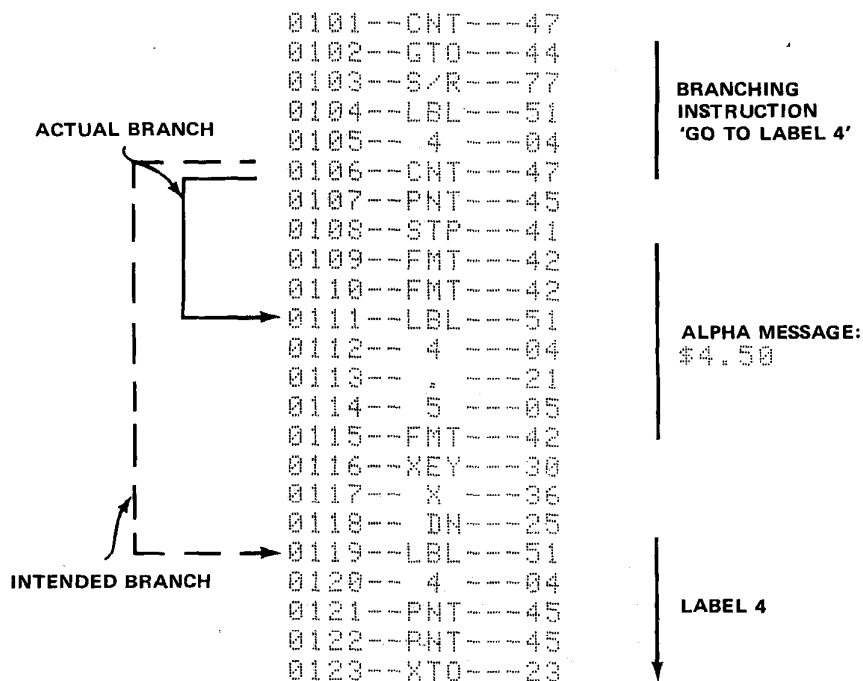

PROGRAMMING SUGGESTIONS

Notice that during execution of the above program, the program will branch to step 0111 instead of to step 0119 as intended.

This unwanted branching anomaly can be avoided by either: not using a label address containing any key which also immediately follows the '\$' character in an alpha message, or loading all alpha messages at the end of the program (see LABELLING ALPHA MESSAGES on Page 2-6).

The following program contains various types of programmed alpha messages. Although the application of this program may be more entertaining* than practical, it is presented here to show how alpha messages may be programmed to: label input data, instruct the operator, or record program results. Loading and running this program are not required, however, user instructions are included at the bottom of Page 2-9 .

Referring to the program and printout, notice that alpha messages may be inserted wherever they are needed to improve program operation (such as, where they are 'labeled' and 'called' to inform the operator of program decisions, or where they are used as data input instructions). Also notice that data and data labels (alpha) must always be printed on separate lines thus the proper use of line feed instructions is important in order to locate the message next to its corresponding printed data.

SAMPLE ALPHA PROGRAM

*This program computes a pseudo-random number between 0 and 9 from a number entered by the operator, then asks the operator to guess the unknown computed number within 3 guesses.

PROGRAMMING SUGGESTIONS

0000--CLR---20		0068--YTO---40		0136--FMT---42	
0001--FMT---42		0069--YTO---40		0137--FMT---42	
0002--FMT---42		0070--CNT---47		0138--D---63	
0003--CLR---20		0071--M---70		0139--A---62	
0004--CLR---20		0072--XFR---67		0140--a---13	
0005--E---60		0073--CNT---47		0141--N---73	
0006--N---73		0074--GTO---44		0142--.---21	
0007--XTO---23		0075--CNT---47		0143--.---21	
0008--E---60		0076--X<Y---52		0144--.---21	
0009--a---13		0077--0---00		0145--XFR---67	
0010--CNT---47		0078--EEX---26		0146--0---71	
0011--A---62		0079--9---11		0147--1/X---17	
0012--N---73		0080--PSE---57		0148--CNT---47	
0013--XFR---67		0081--FMT---42		0149--IND---31	
0014--CNT---47		0082--STP---41		0150--I---65	
0015--GTO---44		0083--PNT---45		0151--N---73	
0016--FMT---42		0084--UP---27		0152--FMT---42	
0017--STP---41		0085--a---13		0153--CNT---47	
0018--PNT---45		0086--X>Y---53		0154--GTO---44	
0019--PNT---45		0087--GTO---44		0155--1---01	
0020--XEY---30		0088--LBL---51		0156--7---07	
0021--.---21		0089--A---62		0157--7---07	
0022--1---01		0090--CNT---47		0158--LBL---51	
0023--+---33		0091--X=Y---50		0159--L---72	
0024--XEY---30		0092--GTO---44		0160--FMT---42	
0025--r---76		0093--LBL---51		0161--FMT---42	
0026--UP---27		0094--B---66		0162--CLR---20	
0027--INT---64		0095--CNT---47		0163--YTO---40	
0028--.---34		0096--FMT---42		0164--0---71	
0029--1---01		0097--FMT---42		0165--a---13	
0030--0---00		0098--XTO---23		0166--a---13	
0031--X---36		0099--0---71		0167--XFR---67	
0032--DN---25		0100--0---71		0168--.---21	
0033--INT---64		0101--CNT---47		0169--.---21	
0034--XTO---23		0102--L---72		0170--.---21	
0035--a---13		0103--A---62		0171--I---65	
0036--FMT---42		0104--a---13		0172--CNT---47	
0037--FMT---42		0105--G---15		0173--IND---31	
0038--3---03		0106--E---60		0174--I---65	
0039--CNT---47		0107--CLX---37		0175--N---73	
0040--C---61		0108--CLR---20		0176--FMT---42	
0041--H---74		0109--CLR---20		0177--FMT---42	
0042--A---62		0110--FMT---42		0178--FMT---42	
0043--N---73		0111--GTO---44		0179--L---72	
0044--C---61		0112--5---05		0180--E---60	
0045--E---60		0113--1---01		0181--XTO---23	
0046--YTO---40		0114--LBL---51		0182--YTO---40	
0047--CNT---47		0115--A---62		0183--CNT---47	
0048--XTO---23		0116--FMT---42		0184--1---56	
0049--0---71		0117--FMT---42		0185--L---72	
0050--FMT---42		0118--XTO---23		0186--A---62	
0051--1---01		0119--0---71		0187--XFR---67	
0052--XTO---23		0120--0---71		0188--CNT---47	
0053--+---33		0121--CNT---47		0189--A---62	
0054--b---14		0122--YTO---40		0190--G---15	
0055--b---14		0123--M---70		0191--A---62	
0056--UP---27		0124--A---62		0192--I---65	
0057--4---04		0125--L---72		0193--N---73	
0058--X=Y---50		0126--L---72		0194--CLR---20	
0059--GTO---44		0127--CLX---37		0195--CLR---20	
0060--LBL---51		0128--CLR---20		0196--FMT---42	
0061--L---72		0129--CLR---20		0197--GTO---44	
0062--CNT---47		0130--FMT---42		0198--0---00	
0063--FMT---42		0131--GTO---44		0199--END---46	
0064--FMT---42		0132--5---05			
0065--G---15		0133--1---01			
0066--1/X---17		0134--LBL---51			
0067--E---60		0135--B---66			

Prints Instruction:
ENTER ANY #

Print Entered #.

Computes Pseudo-
Random Number From
Entered (Number #).

Prints Instructions:
3 CHANCES TO

Chance Counter
(Go to Label L
after 3 chances.)

Prints Instruction:
GUESS MY #
(0-9)

Print Entered Guesses.

Prints Decision:
TOO LARGE,

Label A
Prints Decision:
TOO SMALL,

Label B
Prints Conclusion:
DARN...YOU
WIN

Label L
Prints Conclusion:
SORRY...I
WIN

Prints Request:
LETS PLAY
AGAIN

Figure 3. Sample Alpha Program Listing

PROGRAMMING SUGGESTIONS

The following printout illustrates operation of the sample alpha program*.

**SAMPLE
ALPHA
PROGRAM
(continued)**

ENTER ANY #	Request for number entry
140.*	
3 CHANCES TO	Request for first guess
GUESS MY # (0÷9)	(enter number)
9.*	
TOO LARGE,	Program decision and request
GUESS MY # (0÷9)	for another guess.
1.*	
TOO SMALL,	Program decision and request
GUESS MY # (0÷9)	for another guess.
5.*	
TOO SMALL,	
SORRY...I WIN	Final program decision and
LETS PLAY AGAIN	request.
ENTER ANY #	


*This program may be loaded, beginning at step 0000, and run in your Model 10. After loading the program, press RUN, FIX, '0', END, CONTINUE. After entering each number requested from the printout, press CONTINUE. If unfamiliar with program loading, see the programming chapter of your Model 10 Operating Manual.

2-10

NOTES

ALPHA KEYBOARD

2-11

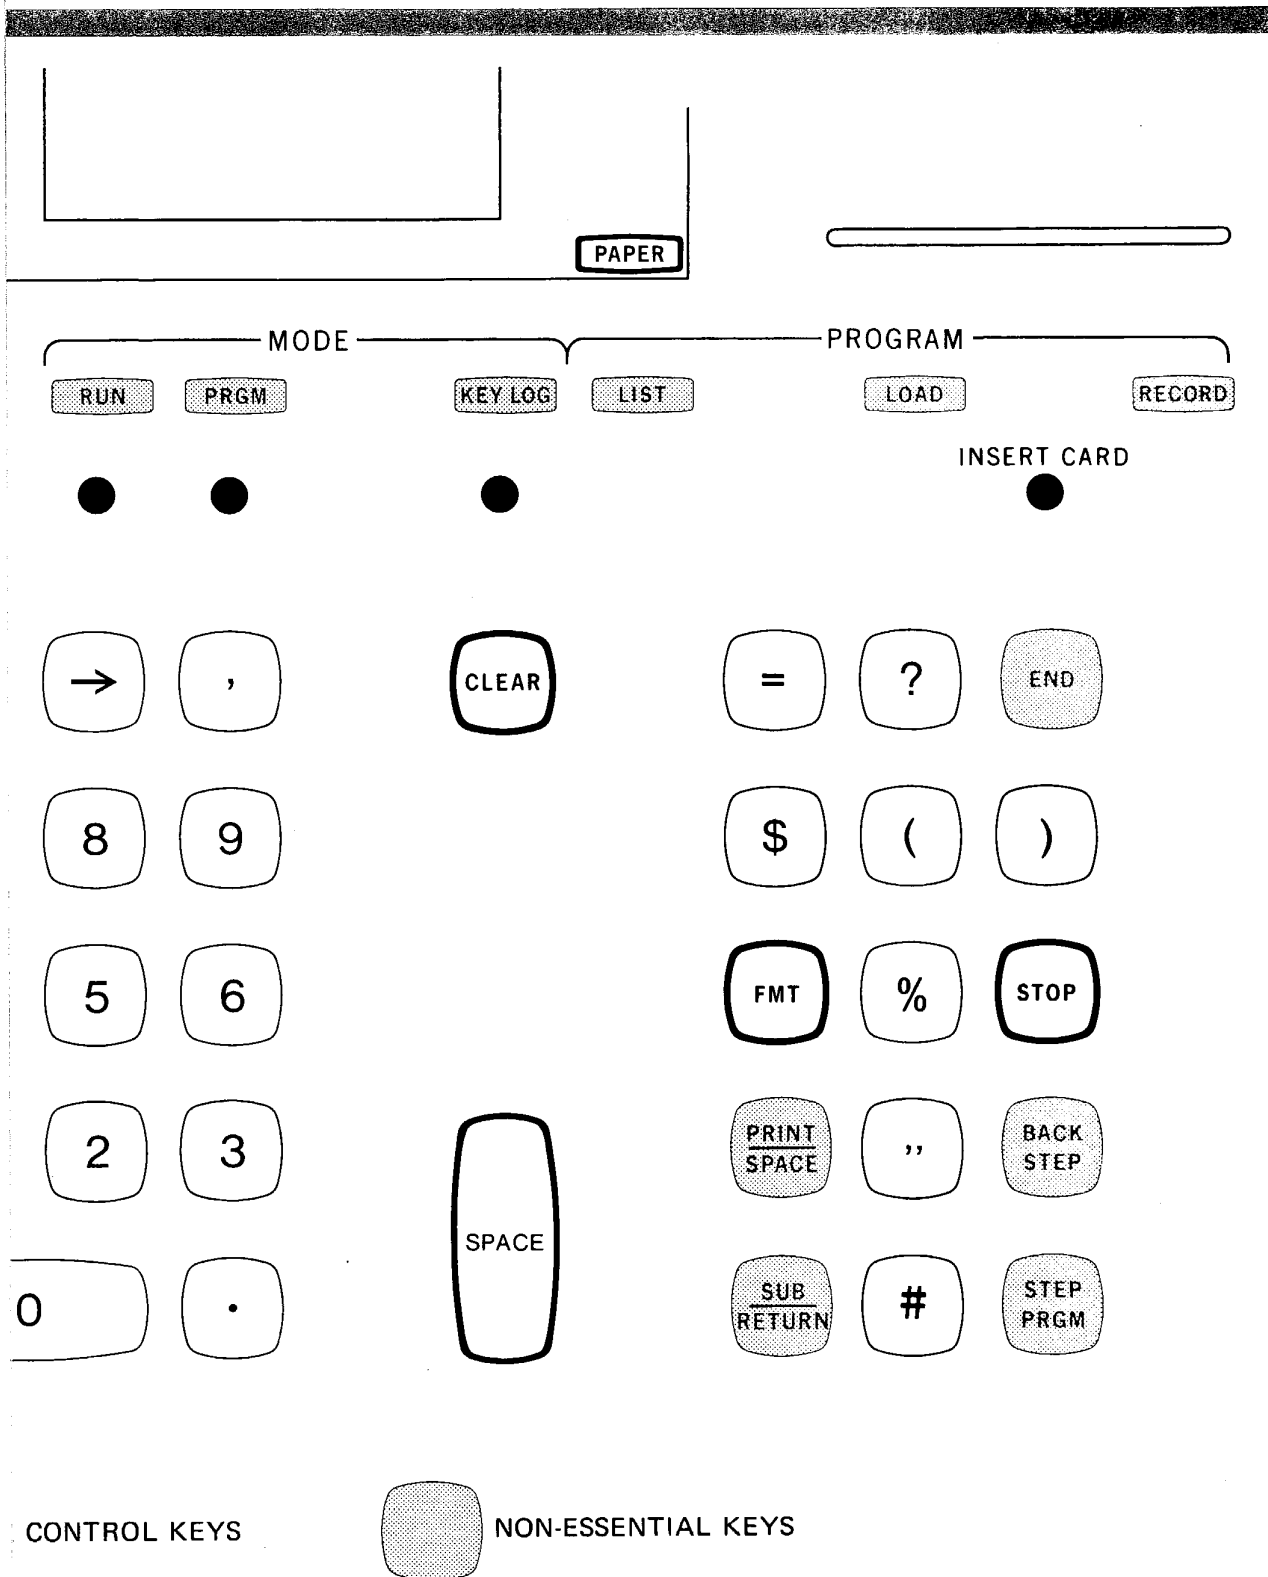


DECIMAL
FLOAT FIX ()

STATUS


A	F	K
B	G	L
C	H	M
D	I	N
E	J	O

P	U	Z
Q	V	@
R	W	↓
S	X	xzy
T	Y	↑

√	π
/	7
*	4
-	1
+	



CHARACTER KEYS



ALPH

ALPHA PRINTER USER'S GUIDE

FMT **FMT** Redefines the keyboard to the alpha mode. Calculator display blanked during alpha mode. Any character keys may be pressed. The printer will line print, line feed after 16 characters are pressed.

CONTINUE Enters a print space (space between words).

DURING ALPHA MODE { **CLEAR** Causes a line print of any entered characters, and a line feed (paper advances one line).

STOP Returns keyboard to normal run mode (no line print or line feed).

FMT Causes a line print, line feed (if any characters are entered) and returns the keyboard to the run mode.

PAPER Manually advances printer paper at any time.

ALPHA KEYBOARD

The diagram shows the Alpha Keyboard layout with the following sections:

- DECIMAL:** FLOAT, FIX ()
- MODE:** RUN, PRGM
- KEY LOG:** KEY LOG, LIST
- PROGRAM:** LOAD, RECORD
- STATUS:** (indicated by a dot)
- INSERT CARD:** (indicated by a dot)

Character Keys (5x3 grid):

A	F	K
B	G	L
C	H	M
D	I	N
E	J	O

Alpha Control Keys (3x3 grid):

P	U	Z
Q	V	@
R	W	↓
S	X	xzy
T	Y	↑

Non-Essential Keys:

- √, π, →, ,
- /, 7, 8, 9
- *, 4, 5, 6
- , 1, 2, 3
- +, 0, .
- CLEAR
- =, ?, END
- \$(,)
- FMT, %, STOP
- PRINT SPACE, ", BACK STEP
- SUB RETURN, #, STEP PRGM

Legend:

- ☐ CHARACTER KEYS
- ☐ ALPHA CONTROL KEYS
- ☐ NON-ESSENTIAL KEYS

NOTE

Entered or computed DATA CANNOT BE PRINTED when the keyboard is in the alpha mode.

NOTE

PRINTER LINE WIDTH IS 16 CHARACTERS.

ELECTRONIC

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 910-726-2204

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX: 910-951-1330

5737 East Broadway
Tucson 85711
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX: 910-592-1288

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

6305 Arizona Place
Los Angeles 90045
Tel: (213) 649-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 Aero Drive
P.O. Box 23323
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando, 32809
Tel: (305) 859-2900
TWX: 810-850-0113

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 840
3239 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-3400
TWX: 710-867-9157

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
17 Hailwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-376-6904

MICHIGAN
23855 Research Drive
Farmington 48024
Tel: (313) 476-6400
TWX: 810-742-2900

MINNESOTA
2450 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 910-764-0830

***NEVADA**
Las Vegas
Tel: (702) 382-5777

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1655

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 910-252-0890

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (201) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 910-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 910-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 910-221-2168

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (619) 885-8101
TWX: 910-926-1516

OHIO
25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

330 Progress Rd.
Dayton 45449
Tel: (513) 859-8202
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA
P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200
TWX: 910-830-6862

OREGON
17890 SW Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
TWX: 910-467-8714

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
East Providence 02914
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND
873 Waterman Ave.
Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

***TENNESSEE**
Memphis
Tel: (901) 274-7472

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78228
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (803) 285-3431
TWX: 910-956-0157

WASHINGTON
Bellefield Office Pk.
1203 - 11th SE
Bellevue 98004

Tel: (206) 454-3971
TWX: 910-443-2303

***WEST VIRGINIA**
Charleston
Tel: (304) 345-1640

WISCONSIN
9431 W. Beloit Road
Suite 117
Milwaukee 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.
*Service Only

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton
Tel: (403) 452-3670
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
4608 Canada Way
North Burnaby 2
Tel: (604) 433-8213
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
Winnipeg
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 210
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa 3
Tel: (613) 255-6180, 255-6530
TWX: 610-562-8968

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Tel: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex: 012-1009
Cable: HEWPACK ARG

BOLIVIA
Stambuk & Mark (Bolivia) LTDA.
Av. Mariscal, Santa Cruz 1342
La Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUKMAR

BRAZIL
Hewlett-Packard Do Brasil
I.E.C. Ltda.
Rua Frei Caneca 1119
01307-Sao Paulo-SP
Tel: 288-7111, 287-5858
Telex: 309151/2/3
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil
I.E.C. Ltda.
Praça Dom Feliciano, 78
90000-Porto Alegre-RS
Rio Grande do Sul (RS) Brasil
Tel: 25-8470
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil
I.E.C. Ltda.
Rua da Matriz, 29
20000-Rio de Janeiro-GB
Tel: 266-2643
Telex: 210079 HEWPACK
Cable: HEWPACK Rio de Janeiro

CHILE
Héctor Calcaín y Cia, Ltda.
Casilla 16.475
Santiago
Tel: 423 96
Cable: CALCAGNI Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aéreo 6287
Bogotá, D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Tel: 444001NSTCO

COSTA RICA
Lic. Alfredo Gallegos Gurdán
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Laboratorios de Radio-Ingeniería
Calle Guayaquil 1245
Post Office Box 3199
Quito
Tel: 212-496; 219-185
Cable: HORVATH Quito

EL SALVADOR
Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalón 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA
IPESA
5a via 2-01, Zona 4
Guatemala City
Tel: 63-6-27 & 64-7-86
Telex: 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana,
S.A. de C.V.
Torres Adalid No. 21, 11° Piso
Col. del Valle
Mexico 12, D.F.
Tel: 543-42-32
Telex: 017-74-507

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 230833
Telex: 3481103, Curunda,
Canal Zone
Cable: ELECTRON Panama City

PARAGUAY
Z. J. Melamed S.R.L.
Division: Aparatos y Equipos
Medicos
Division: Aparatos y Equipos
Scientificos y de
Investigacion
P.O. Box 676
Chile, 482, Edificio Victoria
Asunción
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU
Compañía Electro Médica S.A.
Ave. Enrique Canasual 312
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de León 154
Pda. 3, 97A de Tierra
San Juan 00906
Tel: (809) 725-3342, 722-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela
C.A.
Apartado 50933
Edificio Segre
Tercera Transversal
Los Ruices Norte
Caracas 107
Tel: 35-00-11
Telex: 21146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED,
CONTACT:
Hewlett-Packard
Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelska 52/3
P.O. Box 7
A-1205 Vienna
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1,
(Groenkraslaan)
B-1170 Brussels
Tel: (02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494 paloben bru

DENMARK
Hewlett-Packard A/S
Datavej 38
DK-3460 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAK AS
Telex: 166 40 hp as
Hewlett-Packard A/S
Torvet 9
DK-8600 Silkeborg
Tel: (06) 82-71-66
Telex: 166 40 hp as
Cable: HEWPAK AS

FINLAND
Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
SF-00120 Helsinki 12
Tel: (90) 13730
Cable: HEWPAK OY Helsinki
Telex: 12-15363 hel

FRANCE
Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
F-91401 Orsay
Tel: (1) 807 78 25
Cable: HEWPAK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Étroits
F-69321 Lyon Cedex 1
Tel: (78) 42 63 45
Cable: HEWPAK Lyon
Telex: 31617
Hewlett-Packard France
29 rue de la Gare
F-31700 Bagnac
Tel: (61) 85 82 29
Telex: 51957

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernerstrasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50 04-1
Cable: HEWPAKSA Frankfurt
Telex: 41 32 49 fra

Hewlett-Packard GmbH
Vertriebsbüro Böblingen
Herrenbergerstrasse 11b
D-7030 Böblingen, Württemberg
Tel: (07031) 66 72 87
Cable: HEPAK Böblingen
Telex: 72 65 739 bbn

Hewlett-Packard GmbH
Vertriebsbüro Düsseldorf
Vogelsanger Weg 38
D-4000 Düsseldorf
Tel: (0211) 63 80 31/35
Telex: 85/86 533 hpd d

Hewlett-Packard GmbH
Vertriebsbüro Hamburg
Wendenstr. 23
D-2000 Hamburg 1
Tel: (0411) 24 13 93
Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hph d

Hewlett-Packard GmbH
Vertriebsbüro Hannover
Mellendorfer Strasse 3
D-3000 Hannover - Kleefeld
Tel: (0311) 55 06 26

Hewlett-Packard GmbH
Vertriebsbüro München
Unterhachinger Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: (0811) 601 30 61/7
Telex: 52 49 85
Cable: HEWPAKSA München
(West Berlin)
Hewlett-Packard GmbH
Vertriebsbüro Berlin
Wilmsdorfer Strasse 113/114
D-1000 Berlin W. 12
Tel: (0311) 3137046
Telex: 18 34 05 hblin d

GREECE
Kostas Karayannis
18, Ermou Street
GR-Athens 126
Tel: 3230-303, 3230-305
Cable: RAKAR Athens
Telex: 21 59 62 /kar gr

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
CB Slough, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 848413

Hewlett-Packard Ltd.
The Graftons
Stamford New Road
Altrincham, Cheshire, England
Tel: (061) 928-8626
Telex: 668068

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
I-20124 Milan
Tel: (2) 8251 (10 lines)
Cable: HEWPAKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Piazza Marconi, 25
I-00144 Rome - Eur
Tel: (6) 5912544/5, 5915947
Cable: HEWPAKIT Rome
Telex: 61514

Hewlett-Packard Italiana S.p.A.
Vicolo Pastori, 3
I-35100 Padova
Tel: (49) 66 40 62
Telex: 32046 via Milan
Hewlett-Packard Italiana S.p.A.
Via Colli, 24
I-10129 Turin
Tel: (11) 53 82 64
Telex: 32046 via Milan

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1,
(Groenkraslaan)
B-1170 Brussels
Tel: (03/02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

NETHERLANDS
Hewlett-Packard Benelux/N.V.
Weerdestein 117
Box 149
NL-1344 Huisum
Tel: (020) 42 77 77, 44 29 65
Cable: PALOBEN Amsterdam
Telex: 13 216 hpa nl

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
Box 149
N-1344 Håslum
Tel: (02) 53 83 60
Telex: 16621 hpnas n

PORTUGAL
Teletra-Empresa Técnica de
Eléctricos S.A./L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-Lisbon 1
Tel: (19) 68 60 72
Cable: TELETRA Lisbon
Telex: 1598

SPAIN
Hewlett-Packard Española, S.A.
Jerez No 8
E-Madrid 16
Tel: 458 26 00
Telex: 23515 hpe
Hewlett-Packard Española, S.A.
Milanesado 21-23
E-Barcelona 17
Tel: (3) 203 62 00
Telex: 52803 hpe e

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 1-3
Fack
S-161 20 Bromma 20
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

Hewlett-Packard Sverige AB
Hagakersgatan 9C
S-431 41 Mölndal
Tel: (031) 27 68 00/01
Telex: Via Bromma

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 64
CH-8952 Schlieren Zurich
Tel: (01) 98 18 21/24
Cable: HPAG CH
Telex: 53933 hpag ch

Hewlett-Packard (Schweiz) AG
9, Chemin Louis-Pictet
CH-1214 Vernier—Geneva
Tel: (022) 41 4950
Cable: HEWPAKSA Geneva
Telex: 27 333 hpsa ch

TURKEY
Telekom Engineering Bureau
Saglik Sok No. 15/1
Ayaspaşa-Beyoğlu
P.O. Box 437 Beyoğlu
TR-Istanbul
Tel: 49 40 40
Cable: TELEMAISON Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
GB-Slough, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 848413
Hewlett-Packard Ltd.
"The Graftons"
Stamford New Road
GB-Altrincham, Cheshire
Tel: (061) 928-8626
Telex: 668068

Hewlett-Packard Ltd's registered
address for V.A.T. purposes
only:
70, Finsbury Pavement
London, EC2A1SX
Registered No: 690597

SOCIALIST COUNTRIES
PLEASE CONTACT:
Hewlett-Packard Ges.m.b.H.
Handelska 52/3
P.O. Box 7
A-1205 Vienna
Ph: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

ALL OTHER EUROPEAN COUNTRIES CONTACT:
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
P.O. Box 85
CH-1217 Meyrin 2 Geneva
Switzerland
Tel: (022) 41 54 00
Cable: HEWPAKSA Geneva
Telex: 2 24 86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Teletra-Empresa Técnica
de Equipamentos Electricos
SARL
Rua de Barbosa, Rodrigues,
42-1°, D1°
P.O. Box 6487
Luanda
Cable: TELETRA Luanda

AUSTRALIA
Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPAK Melbourne
Telex: 31 024

Hewlett-Packard Australia
Pty. Ltd.
31 Bridge Street
Pymble,
New South Wales, 2073
Tel: 449 6556
Telex: 21561
Cable: HEWPAK Sydney
Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 44 8151
Cable: HEWPAK Adelaide

Hewlett-Packard Australia
Pty. Ltd.
1st Floor, Suite 12/13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 25-6800
Cable: HEWPAK Perth
Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPAK Canberra ACT
Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, 49 Gregory Terrace
Brisbane, Queensland, 4000
Tel: 29 1544

CEYLON
United Electricals Ltd.
P.O. Box 681
60, Park St.
Colombo 2
Tel: 26696
Cable: HOTPOINT Colombo

CYPRUS
Kyprionics
19 Gregorios & Xenopoulos Road
P.O. Box 1152
CY-Nicosia
Tel: 45628/29
Cable: KYPRIONICS PANDEHIS

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
15th Floor
10, Chater Road
Hong Kong
Tel: 240168, 232735
Telex: HX4766 SCHMCO
Cable: SCHMIDTCO Hong Kong

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamsheji Tata Rd.
Bombay 400 020
Tel: 29 50 21
Telex: 3751
Cable: BLUEFROST
Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 3751
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kampur 208 001
Tel: 6 88 82
Cable: BLUESTAR
Blue Star, Ltd.
7 Hare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lajpat Nagar
New Delhi 110 024
Tel: 52 32 76
Telex: 463
Cable: BLUESTAR
Blue Star, Ltd.
Blue Star House
11/11A Magarath Road
Bangalore 560 025
Tel: 51473
Telex: 430
Cable: BLUESTAR

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
1-59-1 Yoyogi
Shibuya-ku, Tokyo
Tel: 03-370-2281/92
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724
Yokogawa-Hewlett-Packard Ltd.
Nishi Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: (0726) 23-1641
Telex: 5332-385 YHP OSAKA
Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
No. 24 Kamisasaizima-cho
Nakamura-ku, Nagoya City
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd.
Nitto Bldg.
2-4-2 Shinohara-Kita
Kohoku-ku
Yokohama 222
Tel: 045-432-1504
Telex: 382-3204 YHP YOK

Blue Star, Ltd.
1-1-137/1
Sarajini Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

Blue Star, Ltd.
23/24 Second Line Beach
Madras 600 001
P.O. Box 718
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star, Ltd.
18 Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 64
Cable: BLUESTAR
Telex: 240

INDONESIA
Bah Bolton Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915; 51560
Cable: ILMU
Telex: 08-809

IRAN
Multicorp International Ltd.
Avenue Soraya 130
P.O. Box 1212
IR-Teheran
Tel: 83 10 35-39
Cable: MULTICORP Tehran
Telex: 2893 MCI TN

ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd.
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: 33569

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
94-96 Dixon Street
P.O. Box 9443
Courtenay Place,
Wellington
Tel: 59-559
Telex: 3898
Cable: HEWPAK Wellington

Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
Box 51092
Pakuranga
Tel: 569-651
Cable: HEWPAK, Auckland

NIGERIA
TEI (Mascon Division)
25 Moronu Street, Suru-Lere,
P.O. Box 5707
Lagos
Tel: 34545
Cable: THETEL Lagos

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.
Rm. 603 3,
2-Chome
IZUMI-CHO,
Mito, 310
Tel: 0292-25-7470

KENYA
Kenya Kinetics
P.O. Box 18311
Nairobi, Kenya
Tel: 57726
Cable: PROTON

KOREA
American Trading Company
Korea,
I.P.O. Box 1103
Dae Kyung Bldg., 8th Floor
107 Sejong-Ro,
Chongro-Ku, Seoul
Tel: (4 lines) 73-8924-7
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
P.O. Box 7213
R.L.-Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A.N. Gonçalves, Lda.
162, Av. D. Luis
P.O. Box 107
Lourenço Marques
Tel: 27091, 27114
Telex: 6-203 Negon Mo
Cable: NEGON

PAKISTAN
Mushko & Company, Ltd.
Oosman Chambers
Abdullah Haroon Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
38B, Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
Electromex, Inc.
6th Floor, Amalgamated
Development Corp. Bldg.
Ayala Avenue, Makati, Rizal
C.C.P.O. Box 1028
Makati, Rizal
Tel: 86-18-87, 87-76-77,
87-86-88, 87-18-45, 88-91-71,
83-81-12, 83-82-12
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion
Engineering Company Ltd.
10/12, Jalan Kilang
Red Hill Industrial Estate
Singapore, 3
Tel: 647151 (7 lines)
Cable: MECOMB Singapore
Hewlett-Packard Far East
Area Office
P.O. Box 87
Alexandra Post Office
Singapore 3
Tel: 633022
Cable: HEWPAK SINGAPORE

SOUTH AFRICA
Hewlett-Packard South Africa
(Pty.), Ltd.
P.O. Box 31716
Braamfontein Transvaal
Minerton
30 De Beer Street
Johannesburg
Tel: 725-2080, 725-2030
Telex: 0226 JH
Cable: HEWPAK Johannesburg
Hewlett-Packard South Africa
(Pty.), Ltd.
Breecastle House
Bree Street
Cape Town
Tel: 2-6941/2/3
Cable: HEWPAK Cape Town
Telex: 0006 CT

TAIWAN
Hewlett-Packard Taiwan
39 Chung Shiao West Road
Sec. 1
Overseas Insurance
Corp. Bldg. 7th Floor
Taipei
Tel: 389160, 1, 2, 375121,
Ext. 240-249
Cable: TP824 HEWPAK
Cable: HEWPAK Taipei

THAILAND
UNIMESA Co., Ltd.
Chongkinee Building
56 Suriwongse Road
Bangkok
Tel: 37956, 31300, 31307,
37540
Cable: UNIMESA Bangkok

UGANDA
Uganda Tele-Electric Co., Ltd.
P.O. Box 4449
Kampala
Tel: 57279
Cable: COMCO Kampala

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20-805, 93398
Cable: PENTRA, SAIGON 242

ZAMBIA
R. J. Tibury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa
Tel: 37393
Cable: ARIAYTEE, Lusaka

MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard
Co-ordination Office for
Mediterranean and Middle
East Operations
Piazza Marconi 25
I-100144 Rome-Eur, Italy
Tel: (6) 59 40 29
Cable: HEWPAKIT Rome
Telex: 61514

OTHER AREAS NOT LISTED, CONTACT:
Hewlett-Packard
Export Trade Company
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
(Feb. 71 493-1501)
TWX: 910-378-1267
Cable: HEWPAK Palo Alto
Telex: 034-8300, 034-8493



PART NO. 09810-90003
MICROFICHE NO. 09810-99003

PRINTED IN U.S.A.
OCTOBER 1971

Scan Copyright ©
The Museum of HP Calculators
www.hpmuseum.org

Original content used with permission.

Thank you for supporting the Museum of HP
Calculators by purchasing this Scan!

Please to not make copies of this scan or
make it available on file sharing services.