

Hewlett-Packard 9825A Desktop Computer Matrix Programming



HEWLETT  PACKARD

Warranty Statement

Hewlett-Packard products are warranted against defects in materials and workmanship. For Hewlett-Packard Desktop Computer Division products sold in the U.S.A. and Canada, this warranty applies for ninety (90) days from date of delivery.* Hewlett-Packard will, at its option, repair or replace equipment which proves to be defective during the warranty period. This warranty includes labor, parts, and surface travel costs, if any. Equipment returned to Hewlett-Packard for repair must be shipped freight prepaid. Repairs necessitated by misuse of the equipment, or by hardware, software, or interfacing not provided by Hewlett-Packard are not covered by this warranty.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

*For other countries, contact your local Sales and Service Office to determine warranty terms.

Matrix Programming



HP 9825A Desktop Computer

Hewlett-Packard Desktop Computer Division
3404 East Harmony Road, Fort Collins, Colorado 80525
(For World-wide Sales and Service Offices see back of manual.)
Copyright by Hewlett-Packard Company 1976

Table of Contents

Chapter 1: Introduction

ROM Description	1
Inspection & Installation	1
Syntax	2
Error Messages	2

Chapter 2: General Information

Description	3
Dimensioning Arrays	4
Specifying Bounds for Dimensions	4
Array Elements	5
Range of Values of Array Elements	5
Types of Operations	6

Chapter 3: Input and Output of Array Data

Data Input	7
Array Initialization	8
Array Output	8
Other Methods of Input and Output	9

Chapter 4: Array Operations

Array Addition	11
Array Subtraction, Multiplication, and Division	12
Copying Arrays	13
Scalar Multiplication of Arrays	13
Redimensioning Arrays	16

Chapter 5: Matrix Operations

Matrix Multiplication	19
The Identity Matrix	22
Transposition of Matrices	23
Matrix Inversion and Determinant	24

Appendix

Sales and Service Offices	27
Array Operations	29
Matrix Operations	30
Index	31
Error Messages	Inside Back Cover

Preface

Before using this manual, you should be familiar with the 9825A Calculator and the HPL programming language described in the HP 9825A Operating and Programming Manual.

Chapter 1

Introduction

ROM Description

The Matrix ROM (Read Only Memory) provides additional statements to the HPL language for performing mathematical operations on matrices and arrays. The Matrix ROM uses no read/write memory when installed in the HP 9825A Calculator.

Inspection and Installation

The Matrix ROM can be plugged into any one of the four ROM slots located on the bottom front of the calculator, as shown below.



ROM Installation

To install your ROM card, first turn the calculator off. With the label right side up, slide the ROM through the ROM slot door. Press it in until the front of the ROM card is even with the front of the calculator. Then turn your calculator on.

Refer to the HP 9825A System Test Booklet to check the operation of the Matrix ROM.

Syntax

The following conventions apply to the syntax for the Matrix ROM statements found in this manual.

`dot matrix` - All items in dot matrix are required, exactly as shown.

[] - All items in square brackets are optional, unless the brackets are in dot matrix.

... - Three dots indicate that the previous item may be duplicated.

All Matrix ROM statements can be executed from the keyboard, in live keyboard mode, and within a program.

Error Messages

The Matrix ROM adds error messages M1 through M5. Explanations of these errors can be found inside the back cover of this manual.

Chapter 2

General Information

Description

An array is a collection of data elements having any number of dimensions. Two special kinds of arrays are called matrices and vectors. A matrix is a two-dimensional table of data or any collection of data elements arranged in rows and columns. A vector is a collection of data elements arranged in a single column or row. The terms array and array variable are used interchangeably to specify an entire array; array element or element is used to specify a single item in an array.

Here is an example of a matrix:

Grade	Boys	Girls
1	10	7
2	9	8
3	9	10
4	7	9
5	7	10
6	9	11

Here is an example of a vector:

Test Scores

93
85
79
89
68
95
100

Dimensioning Arrays

An array must initially be defined in a dimension (**dim**) statement. A dim statement reserves storage space for arrays. Array names can be any single upper case letter from A through Z.

The following statement dimensions three arrays:

```
dim A[100], B[30, 5], C[X, Y, Z]
```

Array A is a vector with 100 rows containing 1 element each, for a total of 100 elements.

Array B is a matrix with 30 rows of 5 elements each, for a total of 150 elements.

Array C is three dimensional array whose dimensions are given by the values of the simple variables X, Y, and Z.

When a dimension statement that defines an array is executed, all elements of that array are initialized to zero.

The working size of an array can be smaller than its defined size (the memory space reserved for it by the dim statement). For example, A[20,20] can store fewer than 400 data elements; the dim statement specifies only the maximum number of elements. The dimensions of an array can be redefined; see Redimensioning Arrays on page 16.

Specifying Bounds for Dimensions

A dimension may be specified by giving lower and upper bounds. The lower bound must be specified before the upper bound. The two are separated by a colon. The bounds must be in the range from -32767 through 32767. For example:

This statement reserves 12 matrix elements ♦

```
dim A[1976:1978, 4]
```

The same amount of memory is reserved by ♦

```
dim B[3, 4]
```

The elements in array A can be referenced as follows:

A[1976,1]	A[1976,2]	A[1976,3]	A[1976,4]
A[1977,1]	A[1977,2]	A[1977,3]	A[1977,4]
A[1978,1]	A[1978,2]	A[1978,3]	A[1978,4]

If a lower bound is not specified, as in `B[3,4]`, it is assumed to be 1, as in `B[1:3,1:4]`.

Array Elements

Array elements are specified by the array name followed by brackets which enclose the numbers specifying the array element. For example, `X[1]` specifies element 1 in vector X; `X[23]` specifies element 23 in vector X.

Range of Values of Array Elements

The internal representation of numbers used in the 9825A is floating-point format, with one digit to the left of the decimal point (scientific notation).

The Matrix ROM does not require that its final results be within the storage range as in the basic calculator. Results can have any values within the calculation range (exponents of 0 ± 511).

Final results, therefore, are treated the same as results in the calculation range with one exception: whenever a matrix or array operation generates a final result outside the normal storage range, the ROM sets flag 15. (Note that the operations of copying an array or transposing a matrix do not generate any new results, but only relocate existing values; these operations do not affect flag 15.)

Whenever attempts are made to use these out-of-range results in non-matrix operations, they are treated just like any other out-of-range results. For example, an attempt to print or display such a result without setting flag 14 will result in error 74 or 75. If flag 14 is set, the storage range default value is printed (the actual stored value is not changed to the default value, however). One way to view the digits contained in such out-of-range quantities is to multiply or divide the values by some constant to bring the result into the storage range.

Types of Operations

The operations performed by the Matrix ROM can be divided into two classes: matrix operations and array operations. The matrix operations (inv, mat, trn, & idn) can be performed only using arrays having 1 or 2 dimensions. All others are array operations, and can be used with arrays having any number of dimensions.

Each statement of the Matrix ROM can perform only one operation, except in those cases such as aprt (array print), where a single statement can be used to cause the indicated operation to be performed on more than one array. Thus, an operation such as: `ara A+B+C+D` is not allowed. Such an operation requires two steps: `ara A+B+D`; `ara C+D+D`.

Chapter 3

Input and Output of Array Data

Methods for storing data in an array and for printing data from an array are described next.

Data Input

Values can be assigned to array elements by individual assignment statements or by a single assignment statement within a loop.

Here's an example that uses individual assignment statements.

```
0: dim A[3,2]
1: 1→A[1,1];2→A[
  1,2]
2: 3→A[2,1];4→A[
  2,2]
3: 5→A[3,1];6→A[
  3,2]
```

Values can also be assigned to array elements using a loop.

```
4: dim B[3,2];
  1→I
5: I→B[I,1]→B[I,
  2]
6: I+1→I; if I<4;
  jmp -1
```

With the for/next loop capabilities of the Advanced Programming ROM, values can be assigned as shown:

```
0: dim C[3,2]
1: for I=1 to 3
2: for J=1 to 2
3: I+J→C[I,J]
4: next J
5: next I
```

The enter (**ent**) or enter print (**enp**) statements can also be used to assign values to array elements as in this example:

```
0: dim L[5]
1: for X=1 to 5
2:   ent L[X]
3: next X
4: end
```

Array Initialization

An array can have all of its elements set to a single value specified by a number or simple variable A through Z using the initialize array (**ina**) statement.

Syntax: **ina** array variable [#: number or simple variable]
 [#: array variable [#: number or simple variable]...]

If a number or simple variable is not specified, zero is assumed. Multiple arrays can be initialized in a single statement:

```
ina A, B:4, C:X
```

This statement initializes each element of array A to zero; each element of array B to 4; and each element of array C to the value of the simple variable X.

Array Output

The array print (**aprt**) statement is used to print each element of an array on the 9825A's printer.

Syntax: **aprt** array variable [#: array variable...]

Any number of array variables can be printed using a single aprt statement, as in **aprt A, B, C**.

In the following example, the array A is printed.

Array A

1	4
2	5
3	6

```
0: dim A[3,2]
1: 1+A[1,1];2+A[
  2,1];3+A[3,1]
2: 4+A[1,2];5+A[
  2,2];6+A[3,2]
3: aprt A
```

```
A[1,1] 1.00
A[2,1] 2.00
A[3,1] 3.00

A[1,2] 4.00
A[2,2] 5.00
A[3,2] 6.00
```

Notice that the leftmost subscript increments most rapidly.


All array elements are printed using the current fixed or float setting. The elements are printed column by column with a space after each column. For arrays with more than two dimensions, an additional space is inserted each time the third subscript is incremented. The aprt statement also inserts a space before an array is printed and three spaces following the end of the array.

Other Methods of Input and Output

With the General I/O ROM, data for arrays can be entered from peripherals such as tape readers, card readers, and digital voltmeters using the read (**red**) statement. This is often the quickest method for entering data into large arrays.

In the following example, data is entered into an array X from a paper tape reader set at select code 3.

The tape has this format ♦

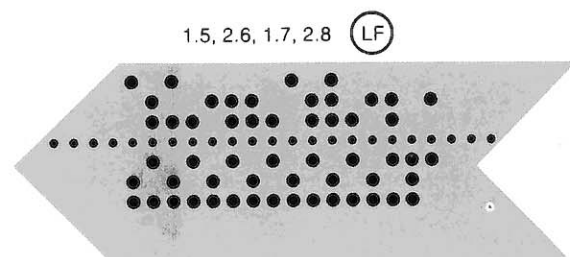

The following program segment is used to enter and print data from the tape ♦

```
0: dim X[4]
1: 1→I
2: red 3,X[I];
   jmp (I+1→I)>4
3: aprt X
```

The printout is ♦

```
1.50
2.60
1.70
2.80
```

Data in many different formats can be entered using the read statement with the format (**fmt**) statement. For more details, see the General I/O Programming Manual.

To output an array to a peripheral device, the aprt statement cannot be used. The write (**wrt**) statement from the General I/O ROM must be used. In the following example, all of the data from array X (above) is printed on the HP 9871A Printer at select code 6.

Execute this program segment ♦

```
4: 1→I
5: wrt 6,X[I];
   jmp (I+1→I)>4
6: stop
```

The following printout is obtained:

```
1.50
2.60
1.70
2.80
```

The element from an array can be output in many different forms using the write statement in conjunction with the format statement. For details, see the General I/O Programming Manual.

Chapter 4

Array Operations

The operations described in this chapter can be performed on arrays having any number of dimensions. Those operations that can be performed only on matrices are described in Chapter 5.

Array Addition

The corresponding elements of two arrays can be added together using the array arithmetic (**ara**) statement.

Syntax: `ara array variable + array variable + array variable`

Each element in the first array is added to the corresponding element in the second array and the result is stored in the corresponding position in the third array. The dimensions of the three arrays must be the same: the subscripts need not be the same, but the number of elements in each dimension must be the same. The number of dimensions must also be the same, even if some of the dimensions are 1. Thus A cannot be added to B if A is dimensioned [3] and B is dimensioned [3,1].

In the following example, matrices A and B are added together and stored in C. All three matrices are dimensioned as:

```
dim A[2,3], B[2,3], C[2,3]
```

Matrices A and B have the following elements:

Matrix A			Matrix B		
1	4	3	4	2	1
2	6	5	3	8	7

After executing `ara A+B→C`, matrix C contains:

Matrix C		
5	6	4
5	14	12

Calculator memory space can be saved if the result is accumulated in one of the arrays already containing data, as with X in the line:

`ara A+X→X`

Array Subtraction, Multiplication, and Division

The corresponding elements of two arrays can be subtracted, multiplied, or divided using the array arithmetic (**ara**) statement. The rules which apply to addition also apply to these three operations.

Syntax:

- `ara array variable − array variable → array variable`
- `ara array variable × array variable → array variable`
- `ara array variable array variable → array variable`
- `ara array variable / array variable → array variable`

Note that two forms are allowed for multiplication. The `×` sign can be omitted for implied multiplication.

As an example, these three operations are performed on matrices A and B and the result is stored in matrix C:

Matrix A			Matrix B		
4	2	1	5	1	4
7	5	2	4	3	1

```
ara A - B → C
```

```
ara A * B → C
ara AB → C
```

```
ara A / B → C
```

Matrix C

-1	1	-3
3	2	1
20	2	4
28	15	2
0.80	2.00	0.25
1.75	1.67	2.00

Two other statements involve multiplication: scalar multiply (**smPY**, below) and matrix multiply (**mat**, page 19).

Copying Arrays

The data elements in one array can be copied into the corresponding positions in another array.

Syntax: `ara variable name → variable name`

To copy array C into array A, execute:

```
ara C → A
```

The two variables must have the same dimensions, as described under Array Addition on page 11.

Scalar Multiplication of Arrays

Each element of an array can be multiplied by a number or by the value of any simple variable A through Z by using the scalar multiply (**smPY**) statement. The number or simple variable must precede the array variable.

Syntax: `smPY number or simple variable * array variable → array variable`

The `*` sign may be omitted for implied multiplication.

The array variable being multiplied and the array variable where the result is stored must both have the same dimensions, as in array addition.

In the following example, matrix X is multiplied by the scalar 4 and the result is stored in matrix Y.

Matrix X

4	2	1
3	5	3

After executing the statement `emp y 4 * X + Y`, the matrix Y contains:

Matrix Y

16	8	4
12	20	12

Example

Below are two tables containing the Math, Science, and Reading grades achieved by five students during two quarters of one school year.

First Quarter

Student No.	Math	Science	Reading
1	80	85	78
2	71	80	72
3	97	92	83
4	77	82	98
5	93	94	98

Second Quarter

Student No.	Math	Science	Reading
1	78	81	80
2	73	82	88
3	93	90	85
4	81	88	94
5	91	90	84

We will use the grades in the first quarter for array A, and in the second quarter for array B:

Array A			Array B		
80	85	78	78	81	80
71	80	72	73	82	88
97	92	83	93	90	85
77	82	98	81	88	94
93	94	98	91	90	84

If the statement `array A+B→C` is executed, array C contains:

158	166	158
144	162	160
190	182	168
158	170	192
184	184	182

The grades for each student in each class have been added. We can now find the average of the two term grades for each student in each class by executing:

`array .5C→C`

The result in C is now:

79	83	79
72	81	80
95	91	84
79	85	96
92	92	91

The array now represents the average grade for each student in each of the three subjects:

Average Mid-Year Grades			
Student No.	Math	Science	Reading
1	79	83	79
2	72	81	80
3	95	91	84
4	79	85	96
5	92	92	91

Redimensioning Arrays

Arrays previously dimensioned using a dim statement can be redimensioned using the redimension (**rdm**) statement, with these limitations: In each array, the number of elements cannot exceed the original number, and the number of dimensions must be the same as the original number.

Syntax: `rdm item [, item...]`

where item is:

array variable `[ [number or simple variable #] number or simple variable ]`

If an array is redimensioned more than once, the number of elements is limited only by the number of elements defined in the original dim statement; subsequent redimensioning to a smaller size does not further limit the size available.

Redimensioning an array does not change the amount of memory space reserved for the array; it merely permits the user to use the allocated space (or part of it, if the new size is smaller) in a different way. If the element values are to be recoded in a data file on the tape cartridge, the tape file size must be large enough to record the number of elements specified in the original dim statement.

In the following example, the 2×3 matrix A is redimensioned several times. The value associated with each element in the matrix represents its location in the original matrix (e.g., 21 represents A [2,1]).

```
0: dim A[2,3]
1: 11+A[1,1]
2: 12+A[1,2]
3: 13+A[1,3]
4: 21+A[2,1]
5: 22+A[2,2]
6: 23+A[2,3]
```

◆ Dimensions matrix and stores element values.

```
7: prt "A[2,3]:"
   !aprt A
```

A[2,3]:

```
11.00
21.00
```

```
12.00
22.00
```

```
13.00
23.00
```

```
8: rdm A[1971:1976,11]
   prt "A[1971:1976,11]:"
   aprt A
```

```
A[1971:1976,11]:
11.00
21.00
12.00
22.00
13.00
23.00
```

```
9: rdm A[3,11]
   prt "A[3,11]:"
   aprt A
```

```
A[3,11]:
11.00
21.00
12.00
```

Notice in all cases that by incrementing the leftmost subscript most rapidly the values are revealed in the same order as in the original matrix.

Chapter 5

Matrix Operations

The operations described in this chapter can be performed only with matrices and vectors (arrays having either one or two dimensions). Other restrictions on the dimensions apply to each of the operations, as stated below.

Matrix Multiplication

Matrices can be multiplied only when the number of columns in the first matrix equals the number of rows in the second matrix; the resulting matrix must have the same number of rows as the first matrix and the same number of columns as the second matrix.

Syntax: `mat array variable * array variable → array variable`

The `*` sign can be omitted for implied multiplication.

The matrix to the left of the assignment arrow must not appear to the right of the assignment arrow, (i.e., you cannot say `mat X*Y→X`).

For a matrix, the left subscript represents the row and the right subscript represents the column. Thus, in a matrix A, `A[4,2]` represents the element in the 4th row, 2nd column.

In matrix multiplication, for `mat A * B → C`, the elements in each column of Matrix B are multiplied by the corresponding elements in each row of Matrix A. The row products are then added together and stored in the appropriate row and column of Matrix C.

Mathematically, the product of two matrices, $\text{not } AB \rightarrow C$, is represented as follows:

$$C(I,K) = \sum_{J=1}^N A(I,J) \cdot B(J,K)$$

Where N is the number of columns in Matrix A, and rows in Matrix B.

In Summary

For any matrix multiplication, $\text{not } AB \rightarrow C$, if the dimensions of A are $[M,N]$ and the dimensions of B are $[N,P]$, the result is a matrix of dimensions $[M,P]$. For example, a 5 by 4 matrix multiplied by a 4 by 1 matrix results in a 5 by 1 matrix. The value of N, above, must be the same in the two matrices. Also, the result of $\text{not } BA \rightarrow C$ is not necessarily the same as $\text{not } AB \rightarrow C$.

Following are examples of matrix multiplication:

Below is a table of ticket sales for four bus routes, and a table of ticket prices for the three kinds of tickets. Matrix multiplication can give you the total sales for each route.

Table A. Ticket Sales By Route

Route	Single	Round	Commuter
	Trip	Trip	
1	143	200	19
2	49	97	24
3	314	77	22
4	82	65	16

Table B. Ticket Prices

	Price
Single Trip	.25
Round Trip	.45
Commuter	18.00

Here are the instructions to enter the values into Arrays A and B, respectively, and perform the matrix multiplication:

**Without Advanced
Programming ROM**

```
0: dim A[4,3],
   B[3],C[4]
1: 1→I→J
2: ent A[I,J];
  jmp (I+1+1)>4
3: 1→I;if (J+
  1→J)<4;jmp -1
4: ent B[1],B[2]
   ,B[3]
5: mat AB→C;ifxd
  2!aprt C
```

**With Advanced
Programming ROM**

```
0: dim A[4,3],
   B[3],C[4]
1: for I=1 to 4;
  for J=1 to 3
2: ent A[I,J];
  next J;next I
3: ent B[1],B[2]
   ,B[3]
4: mat AB→C;ifxd
  2!aprt C
```

After A and B have been multiplied, Matrix C contains the total sales, in dollars, for each route: C[1] contains sales for route 1, C[2] contains sales for route 2, and so forth.

Matrix C

467.75	(.25*143+.45*200+18.00*19)
487.90	(.25*49+.45*97+18.00*24)
509.15	(.25*314+.45*77+18.00*22)
337.75	(.25*82+.45*65+18.00*16)

In the preceding example, A, a 4 by 3 matrix, is multiplied by B, a 3 by 1 matrix, giving C, a 4 by 1 matrix.

Suppose a price change is being considered and matrix B contains two columns of ticket prices:

	Old Price	New Price
Single Trip	.25	.30
Round Trip	.45	.50
Commuter	18.00	17.00

Then A, a 4 by 3 matrix, multiplied by B, a 3 by 2 matrix, results in C, a 4 by 2 matrix:

467.75	465.90
487.90	471.20
509.15	506.70
337.75	329.10

Here are the instructions to perform this:

Without Advanced Programming ROM

```
0: dim A[4,3],
  B[3,2],C[4,2]
1: 1→I→J
2: ent A[I,J];
  jmp (I+1→I)>4
3: 1→I; if (J+
  1→J)<4; jmp -1
4: 1→I→J
5: ent B[I,J];
  jmp (I+1→I)>3
6: 1→I; if (J+
  1→J)<3; jmp -1
7: mat AB→C; ifxd
  2; aprt C
```

With Advanced Programming ROM

```
0: dim A[4,3],
  B[3,2],C[4,2]
1: for I=1 to 4;
  for J=1 to 3
2: ent A[I,J];
  next J; next I
3: for I=1 to 3;
  for J=1 to 2
4: ent B[I,J];
  next J; next I
5: mat AB→C; ifxd
  2; aprt C
```

The Identity Matrix

The identity matrix is a square matrix containing zeros with the principal diagonal containing all ones. Use the identity (**idn**) statement to define a square matrix as an identity matrix.

Syntax: `idn array variable [ , array variable ...]`

If matrix B has been dimensioned [3,3], the statement `idn B` results in:

1	0	0
0	1	0
0	0	1

In order to create an identity matrix using the `idn` statement the matrix must have been previously dimensioned as a square matrix.

The identity matrix is defined as the matrix which, when multiplied* by any matrix A, results in matrix A.

Transposition of Matrices

The transposition (`trn`) of a matrix causes the rows in the matrix to become columns, and the columns to become rows:

Syntax: `trn array variable ÷ array variable`

The same matrix cannot appear on both sides of the assignment arrow. The dimensions of the transposed matrix must be equal to the reverse of the dimensions of the original matrix; that is, if the dimensions of B are [P,Q], transposition of Matrix B results in a matrix of dimensions [Q,P].

The transposition of:

2	3
4	5
6	7

results in:

2	4	6
3	5	7

Row 1 in the first matrix becomes column 1 in the second. Then row 2 becomes column 2 and so on.

*That is, matrix multiplication, not array multiplication.

Matrix Inversion and Determinant

The inverse (if it exists) of a matrix can be computed and stored in another matrix and the determinant of the matrix can be assigned to a simple variable using the matrix inversion (**inv**) statement.

Syntax: **inv** array variable $\rightarrow$ array variable [: simple variable]

The determinant is stored in the simple variable if it is specified. If no simple variable is specified for the determinant value, the determinant is computed but the value is not stored. Both matrices must have been previously dimensioned as square matrices of the same size. If desired, the result can be stored in the original matrix variable. (e.g., **inv C $\rightarrow$ C**).

If an inversion is attempted and the 9825A computes a determinant value of exactly zero, indicating that an inverse cannot be computed, the calculator fills the result matrix with all zeros, sets flag 15, and gives error M5. If flag 14 is 1 (set) when this occurs, the error is not given, and operation continues.

In performing the inversions and calculating the determinant, the 9825A uses an internal work area of 12 N+4 bytes (for an N by N matrix). Thus, the maximum size of matrix which can be inverted is:

Memory Size	Dimensions
Standard 6844 bytes	28 $\times$ 28
Opt. 1 15036 bytes	42 $\times$ 42
Opt. 2 23228 bytes	53 $\times$ 53
Opt. 3 31420 bytes	61 $\times$ 61

The inverse of a matrix A is a matrix B which, when multiplied by matrix A, produces an identity matrix. Only square matrices can be inverted. The determinant of an N by N matrix A is defined mathematically as:

$$\sum \pm A[1,I] A[2,J] A[3,K] \dots A[N,R]$$

where the second subscripts I, J, K, ..., R form a permutation of the integers 1 to N, and the sign of each product depends on the order of the permutation. If the determinant of a square matrix of simultaneous linear equations is not zero, the system of equations has a solution; that is, the inverse of the matrix can be obtained. However, if the determinant is zero, the system has no solution, the inverse does not exist; and the matrix is termed "singular".

The Matrix ROM employs a modified Gauss-Jordan reduction technique using the maximum pivot strategy. This method is superior to the standard Gauss-Jordan elimination or the diagonal pivot strategy since it will successfully invert all but singular or very near-singular matrices. Also, by using maximum elements as the pivots, the accuracy of the results is maximized.

Matrix inversion can be used in solving sets of simultaneous linear equations. For example:

$$\begin{aligned} 3X + 4Y &= 47 \\ 2X + 2Y &= 28 \end{aligned}$$

In the notation of matrix algebra:

$$\begin{bmatrix} 3 & 4 \\ 2 & 2 \end{bmatrix} \begin{bmatrix} X \\ Y \end{bmatrix} = \begin{bmatrix} 47 \\ 28 \end{bmatrix} \text{ or } \begin{bmatrix} A \end{bmatrix} \begin{bmatrix} B \end{bmatrix} = \begin{bmatrix} C \end{bmatrix}$$

Multiplying both sides of the equation by the inverse of A (denoted by $\begin{bmatrix} A^{-1} \end{bmatrix}$) gives:

$$\begin{bmatrix} B \end{bmatrix} = \begin{bmatrix} A^{-1} \end{bmatrix} \begin{bmatrix} C \end{bmatrix}$$

This can be accomplished by creating matrices A, B, and C, followed by:

```
inv A→A; mat AC→B; fxd 2; appt B
```

The printer output is: ♦

```
9.00  
5.00
```

Thus the solution to the problem is:

$$X = 9$$

$$Y = 5$$

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA
Teletra
Empresa Técnica de Equipamentos
Eletroeletrônicos, S.A.R.L.
R. Barbosa Rodrigues, 42-1ºDT.
Caixa Postal, 6487
Luanda
Tel: 355156
Cable: TELETRA Luanda

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 996351
Tel: 31-024
Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble
New South Wales, 2073
Tel: 4496566
Tel: 21561
Cable: HEWPAUD Sydney
Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, S.A., 5063
Tel: 2725911
Tel: 82536
Cable: HEWPAUD Adelaide
Hewlett-Packard Australia Pty. Ltd.
141 Stirling Highway
Medlands, W.A., 6009
Tel: 3865455
Tel: 93859
Cable: HEWPAUD Perth
Hewlett-Packard Australia Pty. Ltd.
121 Willoughong Street
Fyshwick, A.C.T., 2609
Tel: 804244
Tel: 82650
Cable: HEWPAUD Canberra
Hewlett-Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, Queensland 4000
Tel: 2291544
Cable: HEWPAUD Brisbane

BANGLADESH
The General Electric Co. of Bangladesh Ltd.
Magnet House 72
Dilkusha Commercial Area
Motijheel, Dacca 2
Tel: 252415, 252419
Tel: 7334
Cable: GECDAC Dacca

BHUTAN
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-631-2431

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BHUTAN
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

ETHIOPIA
Abdella Abdulmalik
P.O. Box 2635
Addis Ababa
Tel: 11 93 40

GUAM
Medical Only
Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8947
Tamuning 96911
Tel: 646-4513
Cable: EARMED Guam

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
Hong Kong
Tel: 5455644
Tel: 74766 SCHMC HX

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamsheji Tata Rd
Bombay 400 020
Tel: 29 50 21
Tel: 011-2156
Cable: BLUEFROST

INDONESIA
BERCA Indonesia P.T.
P.O. Box 496Jkt.
Jln. Abdul Muis 62
Jakarta
Tel: 349255, 349886
Tel: 46748 BERSIL IA
Cable: BERSAL
BERCA Indonesia P.T.
P.O. Box 174/Sby.
3rd Jln. Jemoro
Surabaya
Tel: 42027
Cable: BERCAcon

ISRAEL
Electronics Engineering Div.
of Motorola Israel Ltd.
16, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Tel: 33569, 34164
Cable: BASTEL Tel-Aviv

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, Osaka-shi
Osaka 532
Tel: 06-364-6021
Tel: 523-3624
Yokogawa-Hewlett-Packard Ltd.
29-21, Tokaido-Higashi 3-chome
Suginami-ku, Tokyo 168
Tel: 03-331-6111
Tel: 232-024 YHP-Tokyo
Cable: YHPMARKET TOK 23 724

KOREA
Samsung Electronics Co., Ltd.
15th Floor, Daeyoung Bldg.,
25-5, 1-KA
Choong Moo-Ro, Chung-Ku,
Seoul
Tel: (23) 6811, 778-3401/2/3/4
Tel: 22575

MAINTOBA
Hewlett-Packard (Canada) Ltd.
380-550 Century St.
Winnipeg R3M 0Y1
Tel: (204) 786-6701
TWX: 610-671-3531

MANITOBA
Hewlett-Packard (Canada) Ltd.
380-550 Century St.
Winnipeg R3M 0Y1
Tel: (204) 786-6701
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth NS B3B 1L1
Tel: (902) 469-7820
TWX: 610-271-4482

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth NS B3B 1L1
Tel: (902) 469-7820
TWX: 610-271-4482

NEW GUINEA
Hewlett-Packard Australia Pty. Ltd.
Development Bank Building
Ground Floor
Ward Strip
Port Moresby, Papua
Box 5192
Tel: 258933

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
24 Kam Sasajima-cho
Nakamura-ku, Nagoya, 450
Tel: 052 571-5171

Yokogawa-Hewlett-Packard Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Tel: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
105, 1-chome, San-no-maru
Mito, Ibaragi 310
Tel: 0292-25-7470

Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachijuni Building
4th Floor
3-4, Tsukuba
Kumagaya, Saitama 360
Tel: 0485-24-6563

PROTEL Engineering
P.O. Box 1917
Lot 259, Satok Road
Kuching, Sarawak
Tel: 53544
Cable: PROTELENG

MOZAMBIQUE
A.N. Goncalves, Ltd.
162, 1º Apt. 14 Av. D. Luis
Caixa Postal 107
Maputo
Tel: 27091, 27114
Tel: 6-203 NEGON Mo
Cable: NEGON

NEW GUINEA
Hewlett-Packard Australia Pty. Ltd.
Development Bank Building
Ground Floor
Ward Strip
Port Moresby, Papua
Box 5192
Tel: 258933

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPAUD Wellington
Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639

NIGERIA
The Electronics Instruments Ltd.
N68/770 Oyo Road
Oluseun House
P.O. Box 5402
Ibadan
Tel: 461577
Tel: 31231 TEIL NG
Cable: THETEL Ibadan

THE ELECTRONICS INSTRUMENTS LTD.
144 Agege Motor Road, Mushin
P.O. Box 6645
Lagos
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

MUSKHO & COMPANY LTD.
Ossman Chambers
Abdullah Haroon Road
Karachi-3
Tel: 511027, 512927
Tel: 2894
Cable: COOPERATOR Karachi

Hewlett-Packard South Africa
(Pty.), Ltd.
P.O. Box 120
Howard Place, Cape Province, 7450
Pine Park Centre, Forest Drive,
Pinelands, Cape Province, 7405
Tel: 53-7955 thu 9
Tel: 57-0006

SRI LANKA
Metropolitan Agencies Ltd.
209/9 Union Place
Colombo 2
Tel: 35947
Tel: 1377METROLTD CE
Cable: METROLTD

SUDAN
Radison Trade
P.O. Box 921
Khartoum
Tel: 44048
Tel: 375

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819169-9 3141010
Cable: HEWPAUD TAIPEI

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-631-2431

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-631-2431

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-631-2431

AUSTRIA
Hewlett-Packard Ges.m.b.H.
Handelskai 52
P.O. Box 7
A-1205 Vienna
Tel: 351521-27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BAHRAIN
Medical Only
Wael Pharmacy
P.O. Box 648
Tel: 54886, 56123
Telex: 8550 WAEI GJ
Cable: WAEIPHARM

Bahrain
Analytical Only
Al Hamidiya Trading
and Contracting
P.O. Box 20074
Tel: 259978, 259958
Telex: 8895 KALDIA GJ

BELGIUM
Hewlett-Packard Benelux
S.A.N.V.
Avenue du Col-Vert, 1
(Groenkraklaan)
B-1170 Brussels
Tel: (02) 650 50 50
Cable: PALOBEN Brussels
Telex: 23-494 paloben br

CYPRUS
Kyronicos
19 Gregorios Xenopoulos Street
P.O. Box 1152
Nicosia
Tel: 45282/29
Cable: Kyronicos Pandehis
Telex: 3018

CZECHOSLOVAKIA
Vývojova a Provozní Závadna
Výzkumných Ústavů v Bechovicích
ČSSR-25097 Bechovice u Prahy
Tel: 89 93 41
Telex: 12133
Institute of Medical Bionics
Výzkumný Ústav Lékařské Bioniky
Jedlova 6
CS-89346
Bratislava-Kramere
Tel: 4251
Telex: 93229

DDR
Entwicklungslabor der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Weidheim/Meinsberg
Tel: 37 667
Telex: 518741
Export Contact AG Zuerich
Guenther Forger
Schlegelstrasse 15
1040 Berlin
Tel: 42-74-12
Telex: 111889

DENMARK
Hewlett-Packard A/S
Datavej 52
DK-3460 Birkerød
Tel: (02) 81 66 40
Cable: HEWPAK AS
Telex: 37409 hpaas dk
Hewlett-Packard A/S
Navervej 1
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 37409 hpaas dk
Cable: HEWPAK AS

EGYPT
International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
Cairo
Tel: 23 829
Telex: 53630
Cable: INTENGASSO
SAMITRO
Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdeen-Cairo
Tel: 24932
Cable: SAMITRO CAIRO

ALABAMA
P.O. Box 4207
8290 Whitesburg Dr.
Huntsville 35892
Tel: (205) 881-4581
8933 E. Roebuck Blvd.
Birmingham 35206
Tel: (205) 836-2203/2

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
2424 East Aragon Rd.
Tucson 85706
Tel: (602) 889-4661

***ARKANSAS**
Medical Service Only
P.O. Box 5646
Brady Station
Little Rock 72215
Tel: (501) 376-1844

CALIFORNIA
1579 W. Shaw Ave.
Fresno 93771
Tel: (209) 224-0582
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2671
5400 West Rosecrans Blvd.
P.O. Box 92105
World Way Postal Center
Los Angeles 90039
Tel: (213) 776-7500
TWX: 910-325-6608
*Los Angeles
Tel: (213) 776-7500
3003 Scott Boulevard
Santa Clara 95050
Tel: (408) 988-7000
*Ridgcrest
Tel: (714) 446-6165
646 W. North Market Blvd
Sacramento 95826
Tel: (916) 929-7222

FINLAND
Hewlett-Packard OY
Nahkahuusuntie 5
P.O. Box 6
SF-00211 Helsinki 21
Tel: (09) 6923031
*FRANCE
Hewlett-Packard France
Avenue des Tropiques
Les Ulis
Boite Postale No. 6
91401 Orsay-Cedex
Tel: (1) 907 78 33
Telex: 600048F
Hewlett-Packard France
Chemin des Mouilles
B.P. 162
69130 Ecully
Tel: (78) 33 81 25,
TWX: 310617F
Hewlett-Packard France
Pârisienne de la Cépîre
31081 Toulouse-Le Mirail
Tel: (61) 40 11 12
TWX: 510957F

BELGIUM
Hewlett-Packard France
Le Lignures
Bureau de vente de Marseilles
Place Route de Villeneuve
3100 Aix-en-Provence
Tel: (42) 59 41 02
Hewlett-Packard France
2, Allée de la Bourgnette
35100 Rennes
Tel: (89) 51 42 44
TWX: 740912F
Hewlett-Packard France
18, rue du Canal de la Marne
67300 Schiltigheim
Tel: (88) 83 08 10
TWX: 890141F
Hewlett-Packard France
Immeuble péricentre
Rue van Gogh
59650 Villeneuve D'Ascq
Tel: (20) 91 41 25
TWX: 160124F

CZECHOSLOVAKIA
Vývojova a Provozní Závadna
Výzkumných Ústavů v Bechovicích
ČSSR-25097 Bechovice u Prahy
Tel: 89 93 41
Telex: 12133
Institute of Medical Bionics
Výzkumný Ústav Lékařské Bioniky
Jedlova 6
CS-89346
Bratislava-Kramere
Tel: 4251
Telex: 93229
Hewlett-Packard France
Bureau de Vente
Ceské d'affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
93153 Le Blanc Mesnil Cédex
Tel: (93) 81 88 50
Hewlett-Packard France
Av. du Pdt. Kennedy
37000 Meung-sur-Loire
Tel: (65) 97 22 69
Hewlett-Packard France
"France-Evry" immeuble Lorraine
Boulevard de France
91035 Evry-Codex
Tel: 077 96 60
Hewlett-Packard France
60, Rue de Metz
57130 Jouy aux Arches
Tel: (87) 69 45 32

DENMARK
Hewlett-Packard A/S
Datavej 52
DK-3460 Birkerød
Tel: (02) 81 66 40
Cable: HEWPAK AS
Telex: 37409 hpaas dk
Hewlett-Packard A/S
Navervej 1
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 37409 hpaas dk
Cable: HEWPAK AS
EGYPT
International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
Cairo
Tel: 23 829
Telex: 53630
Cable: INTENGASSO
SAMITRO
Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdeen-Cairo
Tel: 24932
Cable: SAMITRO CAIRO

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernstrasse 117
Postfach 550 140
D-6000 Frankfurt 56
Tel: (0611) 50-04-1
Cable: HEWPAKASA Frankfurt
Telex: 04 13249 hpfm d
Hewlett-Packard GmbH
Technisches Büro Böblingen
Herrenberger Strasse 110
D-7030 Böblingen, Württemberg
Tel: (0714) 857-1
Cable: HEWPAK Böblingen
Telex: 07265739 bbn
Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1 (Seestern)
D-4000 Düsseldorf
Tel: (0211) 59711
Telex: 08586 533 hppd d
Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendenstrasse 23
D-2000 Hamburg 1
Tel: (40) 24 13 93

IRELAND
Hewlett-Packard Ltd.
King Street Lane
Winners, Wokingham
Berks. RG11 5AR
GB-England
Tel: (0734) 78 47 74
Telex: 847178
Cable: Hewpie London
Hewlett-Packard Ltd.
23 Avonbeg Industrial Estate
D-7030 Böblingen, Württemberg
Tel: (0714) 857-1
Cable: HEWPAK Böblingen
Telex: 07265739 bbn
Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1 (Seestern)
D-4000 Düsseldorf
Tel: (0211) 59711
Telex: 08586 533 hppd d
Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendenstrasse 23
D-2000 Hamburg 1
Tel: (40) 24 13 93

ILLINOIS
5201 Tollview Dr.
Rolling Meadows 60008
Tel: (612) 255-9800
TWX: 910-887-2260
INDIANA
7301 North Shadeland Ave.
Indianapolis 46250
Tel: (317) 842-1000
TWX: 810-260-1797
IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466
KENTUCKY
Medical Only
Cardiac Services (Ireland) Ltd.
Kilmore Road
Artane
Dublin 5, Eire
Tel: (01) 315820
Medical Only
Cardiac Services Co.
95A Finaghy Rd. South
Belfant BT10 0BY
GB-Northern Ireland
Tel: (40) 24 13 93

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-436-8904
MICHIGAN
23955 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
724 West Centre Ave.
Kalamazoo 49002
Tel: (605) 323-8362

HAWAII
2875 So. King Street
Honolulu 96826
Tel: (808) 955-4455

ITALY
Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio . 9
20063 Cernusco
Sul Naviglio (MI)
Tel: (031) 903691
Telex: 311046 HEWPAK IT
Hewlett-Packard Italiana S.p.A.
Via Turazza . 14
35100 Padova
Tel: (49) 664888
Telex: 41612 HEWPAK I
Hewlett-Packard Italiana S.p.A.
Via G. Arminelli 10
00143 Roma
Tel: (06) 54 69 61
Telex: 61514
Cable: HEWPAK IT Roma
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 Torino
Tel: (011) 682245/659308
Medical Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 GC
I-95126 Catania
Tel: (095) 37 05 04
Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco A.
Capodimonte, 62A
I-80131 Napoli
Tel: (081) 7913544
Hewlett-Packard Italiana S.p.A.
Via E. Masi, 9/6
I-40137 Bologna
Tel: (051) 307887/300040

JORDAN
Mousher Cousins Co.
P.O. Box 1387
Amman
Tel: 24907/39907
Cable: SABCO JO 1456
Cable: Mousherco
KUWAIT
Al-Khaldiya Trading & Contracting
P.O. Box 830-Safat
Kuwait
Tel: 49104/41 1726
LUXEMBURG
Hewlett-Packard Benelux
S.A.N.V.
Avenue du Col-Vert, 1
(Groenkraklaan)
B-1170 Brussels
Tel: (02) 672 22 40
Cable: PALOBEN Brussels
Tel: 23 494
MOROCCO
Dolbeau
81 rue Karatchi
Casablanca
Tel: 3041 82
Telex: 23051/22822
Cable: MATERIO
Gera
3, rue d'Agadir
Casablanca
Tel: 851082-5
Tel: 272093/5
Telex: 23739
Cable: GEREP-CASA
Cogedir
31 rue Omar Saouli
Casablanca
Tel: 27 65 40
Telex: 21737/23003
Cable: COGEDIR

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

IRELAND
Hewlett-Packard Ltd.
King Street Lane
Winners, Wokingham
Berks. RG11 5AR
GB-England
Tel: (0734) 78 47 74
Telex: 847178
Cable: Hewpie London
Hewlett-Packard Ltd.
23 Avonbeg Industrial Estate
D-7030 Böblingen, Württemberg
Tel: (0714) 857-1
Cable: HEWPAK Böblingen
Telex: 07265739 bbn
Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Str. 1 (Seestern)
D-4000 Düsseldorf
Tel: (0211) 59711
Telex: 08586 533 hppd d
Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendenstrasse 23
D-2000 Hamburg 1
Tel: (40) 24 13 93

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
E.L.A. Amstelveen 1134
Tel: (020) 47 20 21
NORWAY
Hewlett-Packard Norge A/S
Osterås 18
P.O. Box 34
1345 Osterås
Tel: (02) 1711 80
Telex: 16621 hpnas n
Hewlett-Packard Norge A/S
Nygårsgaten 114
5000 Bergen

POLAND
Biuro Informatyki Technicznej
Hewlett-Packard
Ul. Stawki 2, 6P
00-950 Warszawa
Tel: 32 25 88/39 67 43
Telex: 81 24 53 hepa pl
UNIPAN
Biuro Obsługi Technicznej
01-447 Warszawa
Ul. Nowelska 6
Poland
Zakłady Naprawcze Sprzetu
Medycznego
Plac Komuny Paryskiej 6
90-007 Łódź
Tel: 334-41, 337-83
Telex: 886981
PORTUGAL
Telecra-Empresa Técnica de
Equipamentos Eléctricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: (91) 63 60 72
Cable: TELETRA Lisbon
Tel: 12598
Medical only
Mundinter
Intercambio Mundial de Comercio
S.A.
P.O. Box 2761
Avenida Antonio Augusto
de Aguiar 138
P.O. Box 2531
Lisbon 1
Tel: (91) 53 21 31/7
Telex: 16631 muntar p
Cable: INTERCAMBIO Lisbon

QATAR
Nasser Trading & Contracting
P.O. Box 1563
Doha
Tel: 22170
Telex: 4439 NASSER
Cable: NASSER
ROMANIA
Hewlett-Packard Reprezentanta
Bd. n. Balcescu 16
Bucuresti
Tel: 15 80 23/13 88 85
Telex: 104040
I.L.R.U.C.
Intreprinderea Pentru
Infretinere
Si Reparatia Utilajelor de Calcul
B-dul Prof. Dimitrie Pompei 6
Bucuresti-Sectorul 2
Tel: 88-20-70, 88-24-40, 88-67-95
Telex: 118
SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P.O. Box 1228, Baghdadiah Street
Jeddah
Tel: 27 798
Telex: 40035
Cable: ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P.O. Box 2728
Riyadh
Tel: 62596/66232
Cable: RAOUFC
Modern Electronic
Establishment (Branch)
P.O. Box 193
Al-Khobar
Tel: 44678-44613

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5 lines)

SPAIN
Hewlett-Packard Española, S.A.
Calle Jerez 3
E-Madrid 16
Tel: (1) 456 26 00 (10 lines)
Telex: 23515 hpe
Hewlett-Packard Española S.A.
Colonia Mirasierra
Edificio Juban
% Costa Brava, 13
Madrid 34
Hewlett-Packard Española, S.A.
Milanado 21-23
E-Barcelona 17
Tel: (3) 203 8200 (5

Array Operations

Dimension

```
dim A[5,10,3], B[X,Y]
```

Dimensions arrays as specified, reserving memory as required. Arrays may have any number of dimensions.

Redimension

```
rdm A[6,3:4,12], B[4,1]
```

Redimensions previously dimensioned arrays. The number of dimensions must be the same as the original number. The new size cannot exceed the original size.

Array print

```
aprt A,B,C
```

Prints entire arrays on the 9825A Printer. Arrays are printed column by column.

Array arithmetic and assignment

```
ara A+B→C
ara A-B→C
ara A*B→C
ara AB→C
ara A/B→C
ara A→C
```

Performs the indicated operation using corresponding elements from each of the arrays specified. Arrays must have identical dimensions. The same array may appear on both sides of →.

Scalar multiplication

```
smpy S*A→B
smpy SA→B
```

Multiplies each element of an array by a scalar. The scalar may be a number or a simple variable. The same array may appear on both sides of →.

Initialization of Arrays

```
ina A, B, C
ina A:S, B:T
```

Initializes arrays to the values specified. Values may be numbers or simple variables. If a value is not specified, zero is used.

Matrix Operations

Matrix inversion and determinant

`inv A→B, D`

Inverts matrix A and puts the inverse into matrix B. The determinant of matrix A is put into the simple variable D, if specified. Matrices must be the same size and square. The same matrix may appear on both sides of $\rightarrow$.

Matrix multiplication

`mat A*B→C`

`mat AB→C`

If the dimensions of A are [M,N], then the dimensions of B and C must be [N,P] and [M,P], respectively. The same matrix cannot appear on both sides of $\rightarrow$.

Matrix transposition

`trn A→B`

The dimensions of B must be the reverse of the dimensions of A. The same matrix cannot appear on both sides of $\rightarrow$.

Identity matrices

`idn A, B, C`

Matrices listed become identity matrices. Matrices must be square.

Subject Index

a

Addition (ara)	11
Array	3
bounds	4
elements	4
working size	4
Array Arithmetic Statement (ara)	11
Array Print (aprt)	8
Advanced Programming ROM	7,21,22

b

Bounds, array	4
Brackets	2

c

Copying Arrays (ara)	13
----------------------	----

d

Description, ROM	1
Determinant	24
Dimension Statement (dim)	4
bounds	4
Division (ara)	12
Dot Matrix	2

e

Error Messages	2, Inside Back Cover
----------------	----------------------

g

General I/O ROM	9
-----------------	---

i

Identity Matrix (idn)	22
Input to Arrays	7,10
Inspection	1
Installation	1
Inversion	24

m

Matrix	3
operations	6,19
Multiplication:	
array (ara)	12
matrix (mat)	19
scalar (smpy)	13

o

Operations	6
Array	11,28
Matrix	19,29
Output from Arrays	8,10

p

Printing Arrays (aprt)	8
------------------------	---

r

Range	5
Read Statement (red)	9
Redimension Statement (rdm)	16

s

Scalar Multiplication (smpy)	13
Subtraction (ara)	12
Syntax Conventions	2

t

Transposition (trn)	23
---------------------	----

v

Vector	3
--------	---

w

Write Statement (wrt)	10
-----------------------	----

Matrix ROM Error Messages

error M1* Syntax error.

error M2 Improper dimensions. Array dimensions are incompatible with each other or are incompatible with the stated operation.

error M3 Improper redimension specification: New number of dimensions must equal original number. New size cannot exceed original size.

error M4* Operation not allowed. An array which appears to the left of $\rightarrow$ cannot also appear on the right.

error M5 Matrix cannot be inverted. Computed determinant equals 0.

*These errors give a cursor when RESET is pressed, showing the location of the error.

HEWLETT  PACKARD

Scan Copyright ©
The Museum of HP Calculators
www.hpmuseum.org

Original content used with permission.

Thank you for supporting the Museum of HP
Calculators by purchasing this Scan!

Please to not make copies of this scan or
make it available on file sharing services.